



# Switch Commerce™

## Std 3 TCP/IP Ethernet for Hyosung

Enter, Clear, Cancel, 1, 2, 3

### 1. Customer Setup

- Select Processor or Change Processor
  - Communication
    - TCP/IP
  - Message Format
    - Standard 3 (Required)
  - TCP/IP Type
    - Type - Visa Framed
    - SSL/TLS - Enabled
    - SSL/TLS Version - Up to TLS V1.2
  - EOT/ENQ Option or Visa Framed Option
    - Option - No ENQ Required
    - ENQ - Not Required
    - EOT - Required
- Standard 3 Option
  - Status Monitoring - Enabled
  - Communication Header - Enabled
  - Communication ID - 123SC101
  - CRC - Disabled
- Optional Function 1
  - EMV
    - EMV - Enabled
    - Latch - Enabled
    - AID List
      - Enable All AIDs

### 2. Host Setup

- Host Address
  - Use URL - Enabled
    - Host Address
      - Host URL #1 - atm1.switchcommerce.net
      - Port #1 - 1440
      - Host URL #2 - atm2.switchcommerce.net
      - Port #2 - 1440

- Terminal ID - NH \_ \_ \_ \_ \_
- Health Check Message
  - Disabled
- Key Management
  - Secure Mode Password
    - Password #1 - Default 000000
    - Password #2 - Default 000000
      - Serial Number - 0000000000000 or Terminal Serial # (if empty)
      - Key Mode - TDES
      - Edit Key
        - Key Part A
          - Key Index - 01
            - Key Entry - A/B
        - Key Part B
          - Key Index - 01
            - Key Entry - A/B

### 3. System Setup

- Terminal IP or ATM IP Setup

**Note:** The customer has the choice of running the terminal on a [Static IP](#) or [DHCP](#). If the customer does not have a need to run the terminal using static IP then DHCP will work. (The locations Internet connection may require the terminal to setup on Static IP. Static IP information must be provided by the location's system administrator or Internet provider.)

DHCP - Enabled

or

- DHCP - Disabled (for Static IP)

**Note:** All Static IP information must be provided by the location's system administrator or Internet service provider.

- IP Address (Example: 10.101.1.175)
- Gateway (Example: 10.101.1.1)
- Subnet Mask (Example: 255.255.255.0)
- DNS (Example: 10.101.1.10)

Exit out of Operator Functions, powerfail the ATM, look for the welcome screen try a test transaction.