
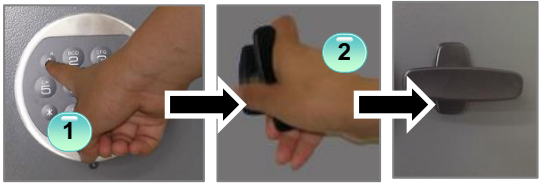


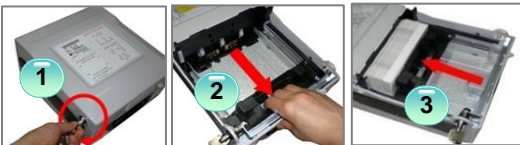
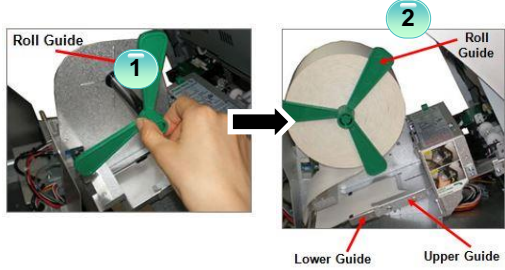


# MX2600SE Quick Reference Guide

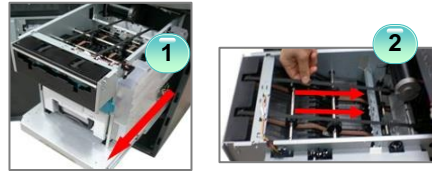
|   |   |  |
|---|---|--|
| <b>1</b>  | <b>ATM Power On/Off</b>   |  |
|                   | <p>➤➤ <b>ATM Power On</b></p> <ul style="list-style-type: none"> <li>● Open the upper front door.</li> <li>● Press Power Switch in the direction of “I”.</li> </ul> <p>➤➤ <b>ATM Power Off</b></p> <ul style="list-style-type: none"> <li>● Press Power Switch in the direction of “O”.</li> </ul>  |  |
| <b>2</b>  | <b>Security Door Open</b>   |  |
|                   | <p>➤➤ <b>Security Door Open</b></p> <ul style="list-style-type: none"> <li>● Turn the key clockwise to open the security cover.</li> <li>● The default password of electronic lock is 1-2-3-4-5-6.</li> <li>● Enter this sequence on the electronic lock keypad. (①).</li> <li>● The lock will confirm a valid combination entry with a double signal. Lock will signal three (3) times for invalid combination entry.</li> <li>● Turn the vault door handle counterclockwise. (②)<br/>The vault door will open.</li> </ul>   |  |
| <b>3</b>  | <b>Opening the Exterior Door</b>  |  |
| <b>3-1</b>  | <ul style="list-style-type: none"> <li>● Opening the upper front body door,                             <ul style="list-style-type: none"> <li>- Insert the key and turn it clockwise. (①)</li> <li>- Pull the front panel outward. (②)</li> </ul> </li> </ul>    | <b>3-2</b>   |
|   |   | <ul style="list-style-type: none"> <li>● Opening the lower front body door,                             <ul style="list-style-type: none"> <li>- Open the security cover with key. (③)</li> <li>- Unlock the e-lock and open security door. (④)</li> </ul> </li> </ul>  |
| <b>4</b>  | <b>Cash Replenishment</b>   |  |
| <p><b>Caution: The acceptable condition bills should be loaded (Refer to Operator Manual)</b></p> |   |  |
| <b>4-1</b>  | <ul style="list-style-type: none"> <li>● Enter to Supervisor mode (Refer to “9 OP Main Screen”)</li> <li>● Select “<b>SETTLEMENT</b>”</li> <li>● Submit “<b>TRIAL CASSETTE TOTAL</b>” to show note count.</li> <li>* To show note count and to clear note count, submit “<b>CASSETTE TOTAL</b>”</li> <li>● How to add note count,                             <ul style="list-style-type: none"> <li>- Select “<b>SETTLEMENT</b>”</li> <li>- Select “<b>ADD CASH</b>”</li> <li>- Select the cassette to be added the notes(①)</li> <li>- Enter the note count and then press ENTER key in PIN Pad. (If you want to add the cash for other cassette, repeat from “①”)</li> <li>- After completing, press “<b>APPLY</b>” button.</li> </ul> </li> </ul>   |  |
| <b>4-2</b>  | <ul style="list-style-type: none"> <li>● Open the security door. (Refer to “3 Opening the Exterior Door”)</li> <li>● Pull out the cash cassette carefully.</li> <li>● Unlock the cassette cover using key (①).</li> <li>● Pull the push plate back until it is locked against the push plate latch. (②) And then, set the bills into the cash cassette.</li> <li>● Then, release the push plate from the cash plate latch and allow it gradually to take up its position behind the notes. (③)</li> <li>● Close the cassette cover with key, place it carefully on the set guide and push it in until it is locked in place.</li> </ul>  <p>* The above description is based on 1000 new note capacity cassette. For 2000 new note capacity cassette, refer to operator manual.</p> |  |

# MX2600SE Quick Reference Guide

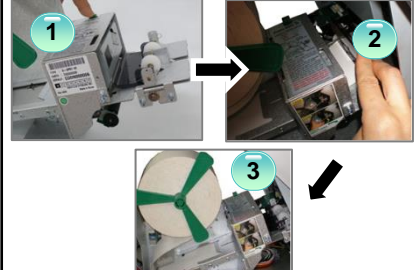
|          |                                    |   |
|----------|------------------------------------|---|
| <b>5</b> | <b>Receipt Paper Replenishment</b> | <b>Caution: The acceptable condition papers should be loaded (Refer to Operator Manual)</b> |
|----------|------------------------------------|---|

|            |   |  |
|------------|---|--|
| <b>5-1</b> |  | <p><b>5-2</b></p> <ul style="list-style-type: none"> <li>● Open the upper front door with key. (Refer to “3 Opening the Exterior Door”)</li> <li>● Remove the roll guide by pulling it off (①).</li> <li>● Add the receipt paper into the rod and then insert the roll guide tightly again to fix it. (②).</li> <li>● Insert the leading edge of paper between lower guide and upper guide of printer slowly until paper is going to start feeding. (②)</li> </ul> |
|------------|---|--|


|          |                 |   |
|----------|-----------------|---|
| <b>6</b> | <b>Note Jam</b> | <b>Caution: Before removing jam, power off for your safety.</b> |
|----------|-----------------|---|

|            |   |  |
|------------|---|--|
| <b>6-1</b> | <ul style="list-style-type: none"> <li>● Enter to “OP Main” screen, and submit “CLEAR” button (Refer to “8 Device Reset”)</li> <li>● If jam is not cleared, power off</li> <li>● Open the security door. (Refer to “3 Opening the Exterior Door”)</li> <li>● Pull out the cash dispenser (①).</li> <li>● Move the belt by turning the knob beside cash dispenser to move jammed note into a well removed position. (②)</li> <li>● Remove jammed note carefully and power on.</li> </ul> | <p><b>6-2</b></p>  <p>* Be sure to check if the belt is positioned correctly after removing the jammed bills.</p> <p>* The above description is based on CDU with 1000 new note capacity cassette. For CDU with 2000 new note capacity cassette, refer to operator manual.</p> |
|------------|---|--|


|          |                          |
|----------|--------------------------|
| <b>7</b> | <b>Receipt Paper Jam</b> |
|----------|--------------------------|

|            |  |   |
|------------|--|---|
| <b>7-1</b> |  | <p><b>7-2</b></p> <ul style="list-style-type: none"> <li>● Open the upper front door with key. (Refer to “3 Opening the Exterior Door”)</li> <li>● To remove a jam inside transport path, press down the button to release the lower roller assembly (①) .</li> <li>● To take out a jam in front of transport path, lift up the transparent window guide. (②)</li> <li>● After finishing clearing the jam, load the receipt paper properly. (③).</li> </ul> |
|------------|--|---|

|          |                     |  |
|----------|---------------------|--|
| <b>8</b> | <b>Device Reset</b> |  |
|----------|---------------------|--|

|  |  |
|--|--|
|  | <ul style="list-style-type: none"> <li>● To reset each device with error of ATM, enter to “OP Main” screen, and press “CLEAR” key of EPP.</li> </ul> |
|--|--|

|          |                       |  |
|----------|-----------------------|--|
| <b>9</b> | <b>OP Main Screen</b> |  |
|----------|-----------------------|--|

|  |   |
|--|---|
|  | <ul style="list-style-type: none"> <li>● To enter to Supervisor mode, press ENTER, CLEAR, CANCEL, 1, 2 and 3 keys in order. (Default Password: “555555” and it is changeable in Supervisor mode.) (①)</li> <li>● If correct password is entered, “OPERATION FUNCTION” menu will be displayed. (②)</li> <li>* Pressing CLEAR key erases the entered number and pressing CANCEL key goes to in-service-mode.</li> </ul> |
|--|---|

|                            |  |
|----------------------------|--|
| <b>Contact Information</b> |  |
|----------------------------|--|