


MX2800SE Quick Reference Guide

1 ATM Power On/Off

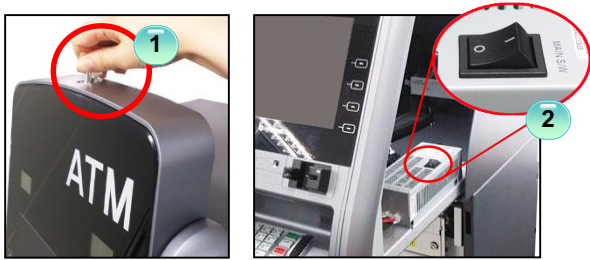

- **ATM Power On**
 - Open the upper front door. (①)
 - Press Power Switch (②) in the direction of “I”.
- **ATM Power Off**
 - Press Power Switch (②) in the direction of “O”.

2 Security Door Open




- **Safe Door Open**
 - Open the Exterior door (①) using key.
 - Unlock the E-lock. (②)
 - Turn the safe door handle (③) and pull the door to open.
- **E-lock Open (in case of Multiple-User Mode)**
 - The factory default Master Code is 1 2 3 4 5 6. To open the lock, enter 1 2 3 4 5 6 # then rotate the keypad to the right if D•Drive or turn safe handle if any other model of lock is installed.
 - <Note!> The lock’s factory default code must be changed to a unique. Refer to the operator manual for more.

3 Cash Replenishment

Caution: The acceptable condition bills should be loaded (Refer to Operator Manual)


- Enter to Supervisor mode (Refer to “8 OP Main Screen”)
- Select “**SETTLEMENT**”
- Submit “**TRIAL CASSETTE TOTAL**” to show note count.
- * To show note count and to clear note count, submit “**CASSETTE TOTAL**”
- How to add note count,
 - Select “**SETTLEMENT**” (①)
 - Select “**ADD CASH**” (②)
 - Select the cassette to be added the notes (A) (③)
 - Enter the note count and then press ENTER key in PIN Pad. (If you want to add the cash for other cassette, repeat from “A”)
 - After completing, press “**APPLY**” button (④).

3-1

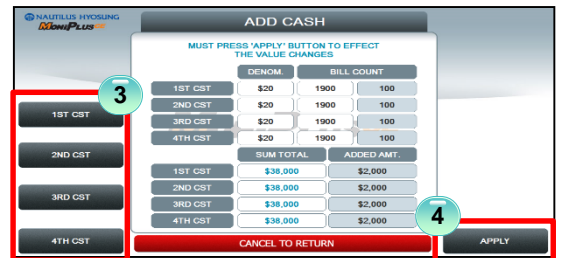

3-2

- Open the security door.
- Pull out the cash cassette carefully.
- Unlock the cassette cover using key (①).
- Pull the push plate back until it is locked against the push plate latch. (②) And then, set the bills into the cash cassette.
- Then, release the push plate from the cash plate latch and allow it gradually to take up its position behind the notes. (③)
- Close the cassette cover with key, place the cassette carefully on the set guide and push it in the ATM until it is locked in place.

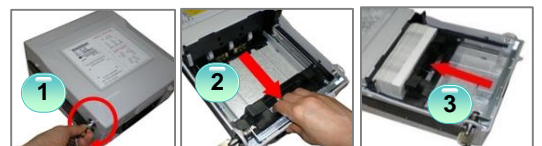


* The above description is based on 1000 new note capacity cassette. For 2000 new note capacity cassette, refer to operator manual.



MX2800SE Quick Reference Guide

4 Receipt Paper Replenishment

Caution: The acceptable condition papers should be loaded (Refer to Operator Manual)

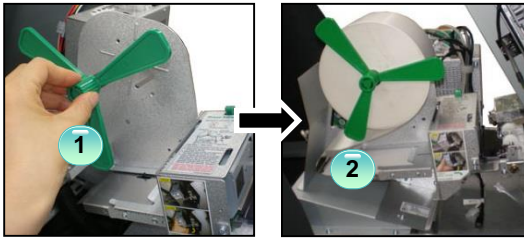

- Pull off the roll guide from the rod and place the receipt roll. (①)
- Attach roll guide to the rod and place the end of the roll between the upper and the lower guide. (②)
- After feeding the paper, the roll will feed itself to the correct position. (If everything is done correctly, one sample receipt will be cut, then remove the cut sample receipt.)


5 Note Jam

Caution: Before removing jam, power off for your safety.

- 5-1
- Enter to “OP Main” screen, and submit “CLEAR” button (Refer to “7 Device Reset”)
 - If jam is not cleared, power off
 - Open the security door. (Refer to the section of “Security Door Open”)
 - Pull out the cash dispenser (①).
 - Move the belt by turning the knob beside cash dispenser to move jammed note into a well removed position. (②)
 - Remove jammed note carefully and power on.

- 5-2
- * Be sure to check if the belt is positioned correctly after removing the jammed bills.
-
- * The above description is based on CDU with 1000 new note capacity cassette. For CDU with 2000 new note capacity cassette, refer to operator manual.

6 Receipt Paper Jam

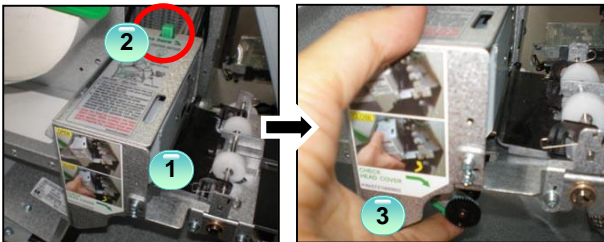

- First, check if there is a jammed paper around transparent guide. (①) If so, after pressing the green lever (②), lift up the transparent guide and remove the jammed paper.
- After removing paper jam, be sure to close the head cover by pushing it up (③) (refer to the diagram sticker)
- After all paper jams have been cleared, reinstall the paper and test the printer using Diagnostics.

7 Device Reset



- To reset each device with error of ATM, enter to “OP Main” screen, and press “CLEAR” key of EPP.

8 OP Main Screen



- To enter to Supervisor mode, press ENTER, CLEAR, CANCEL, 1, 2 and 3 keys in order. (Default Password: “555555” and it is changeable in Supervisor mode.) (①)
- If correct password is entered, “OPERATION FUNCTION” menu will be displayed. (②)
- * Pressing CLEAR key erases the entered number and pressing CANCEL key goes to in-service-mode.

Contact Information