

HYOSUNG TNS

Operator Function Manual

MONiMAX2800SE System

V01.00.03 (2019.03.20)

Revision History

Operator Function

No.	Version	Date	Description of Change	Chapter
1	V01.00.00	2018/02/21	New Publication	All
2	V01.00.01	2018/09/20	Changed the company name and CI	All
3	V01.00.02	2019/03/05	Changed the term "Camera" to "MoniVision"	2,3
4	V01.00.03	2019/03/20	Added the specification of MX2800SE advertisement	Appendix
			Added more information of MX5200SE and 5300SE	All

© Hyosung TNS All Rights Reserved.
 The contents of this document could be changed as the document revises.

2019. 3. 20. 4th Release

Contents

Chapter 1. HOW TO INSTALL NEW SOFTWARE	1-1
1.1 ENTER SUPERVISOR MODE	1-1
1.2 GO TO SYSTEM CONTROL MENU.....	1-1
1.3 SELECT S/W UPDATE	1-1
1.4 SET THE TYPE OF MACHINE AFTER UPDATING S/W	1-1
Chapter 2. BASIC SYSTEM OPERATION	2-1
2.1 PASSWORD FOR ENTERING SUPERVISOR MODE	2-1
2.2 WHEN AN ERROR OCCURS.....	2-13
2.3 HOW TO USE KEYPAD (Function Key Type)	2-14
2.4 HOW TO USE KEYPAD (Touch Screen Type)	2-16
Chapter 3. SUPERVISOR MENU	3-1
3.1 SETTLEMENT	3-4
ADD CASH	3-5
3.2 JOURNAL	3-6
VIEW JOURNAL.....	3-7
SEARCH JOURNAL.....	3-9
PRINT LAST X.....	3-10
UPLOAD JOURNAL TO HOST	3-11
3.3 REPORT	3-12
ERROR CODE	3-13
SEARCH ERROR CODE	3-14
SW VERSION.....	3-15
PRINT ALL SETUP (LIST).....	3-16
ERROR SUMMARY	3-18
REJECT ANALYSIS.....	3-19
3.4 DIAGNOSTICS	3-20
INITIALIZE	3-22
RECEIPT PRINTER	3-23
CASH DISPENSER.....	3-24
MODEM.....	3-25
TCP/IP	3-26
CARD SCAN (NH DIP).....	3-27
CARD SCAN (NH EMV, NH EMV2)	3-28
AUXILIARY UNIT.....	3-29
AGING	3-38
ANTI SKIMMING (NH EMV only)	3-39
3.5 CUSTOMER SETUP.....	3-40
CHANGE MESSAGE	3-41
WELCOME MESSAGE	3-43
RECEIPT HEADER	3-44
RECEIPT TAIL.....	3-45
RECEIPT ADDRESS & PHONE NUMBER	3-46
BIN (Bank Identification Number) LIST	3-47
EXTENDED BIN LIST	3-48
OPTIONAL FUNCTION1 (Except for IC card readable card reader).....	3-49
OPTIONAL FUNCTION2.....	3-57
3.6 SYSTEM SETUP	3-92
DATE & TIME	3-93
SPEAKER VOLUME	3-94
TERMINAL IP	3-95
LANGUAGE.....	3-96
CHANGE PASSWORD	3-99
MODEM PARAMETERS	3-103

DEVICE SETUP.....	3-106
SYSTEM CONTROL.....	3-112
3.7 HOST SETUP.....	3-118
KEY MANAGEMENT (for 128K EPP).....	3-119
KEY MANAGEMENT (for 512K EPP).....	3-126
TELEPHONE NUMBER (Dial-Up only).....	3-142
HOST ADDRESS.....	3-143
TERMINAL ID.....	3-146
HEALTH CHECK MESSAGE.....	3-147
REMOTE MONITOR.....	3-148
ROUTING ID.....	3-153
AUTO DAY TOTAL.....	3-154
3.8 TRANSACTION SETUP.....	3-155
FAST CASH.....	3-156
DENOMINATION.....	3-157
Chapter 4. SITE MAP	4-1
Chapter 5. QUICK REPLENISH.....	5-1
5.1 DAY TOTAL / CASSETTE TOTAL.....	5-2
5.2 ADD CASH.....	5-3
5.3 RESULT.....	5-4
Chapter 6. QUICK CONFIGURATION	6-1
6.1 TCP/IP.....	6-2
COMMUNICATION.....	6-3
TCP/IP TYPE.....	6-4
EOT/ENQ OPTION.....	6-5
HOST ADDRESS.....	6-6
TERMINAL DHCP.....	6-7
TERMINAL IP.....	6-8
MESSAGE FORMAT.....	6-9
ROUTING ID.....	6-10
STANDARD 3 OPTION.....	6-11
TERMINAL ID.....	6-12
PASSWORD SETUP (MASTER PASSWORD).....	6-13
RESULT.....	6-14
6.2 DIAL UP.....	6-15
COMMUNICATION.....	6-16
EOT / ENQ OPTION.....	6-17
TELEPHONE NUMBER (HOST PHONE 1).....	6-18
MESSAGE FORMAT.....	6-19
ROUTING ID.....	6-20
STANDARD3 OPTION.....	6-21
TERMINAL ID.....	6-22
PASSWORD SETUP (MASTER PASSWORD).....	6-23
RESULT.....	6-24
Appendix	Appendix-1
Software Quick Installation Guide.....	Appendix-1
Clear NVRAM.....	Appendix-1
Installation Guide.....	Appendix-4
Dial-up Initial Setting.....	Appendix-4
TCP/IP Initial Setting.....	Appendix-6
Transaction Screen Flow.....	Appendix-12
Transaction Process (ENGLISH).....	Appendix-12
Transaction Process (SPANISH).....	Appendix-22
Transaction Process (FRENCH).....	Appendix-32
Supported USB Memory and HUB.....	Appendix-42
Advertisement Image Update Guide.....	Appendix-44
Preparation.....	Appendix-44

Executing Software Update Appendix-47
Making MoniView update media..... Appendix-53
Background Image Update Guide..... Appendix-54
Preparation Appendix-54
Executing Software Update Appendix-56
Making MoniView update media..... Appendix-60
Weather Service Guide Appendix-61
Anti Skimming Service (Warning against illegal trials to card reader) Appendix-62

Chapter 1. HOW TO INSTALL NEW SOFTWARE

1.1 ENTER SUPERVISOR MODE

- ▶ The first thing you have to do to install newly released S/W is to log on into supervisor mode. The screen for entering supervisor mode is depicted in “PASSWORD FOR ENTERING SUPERVISOR MODE”

1.2 GO TO SYSTEM CONTROL MENU

- ▶ The second thing you have to do is to select **SYSTEM SETUP** button in main screen, and then the screen would be changed into SYSTEM SETUP screen, which contains the menu named as SYSTEM CONTROL. If you find the menu, SYSTEM CONTROL, please select that one.

1.3 SELECT S/W UPDATE

- ▶ The last thing you have to do is to select S/W update in SYSTEM CONTROL screen. Before selecting it, USB drive should be inserted in USB slot or SD card in SD card slot. And there is the folder named as ‘update’ in root path. More precisely, the structure of folder and file should be as like as below.

F:\update\nh2700ce\Master.zip (In case of Master file update)

F:\update\nh2700ce\Patch.zip (In case of Patch file update)

So if you receive zip file which is different from ‘update’ folder as explained above, more precisely as like as VUSXX.XX.XX_XXXXXXXXX or VCAXX.XX.XX_XXXXXXXXX, the thing you should do next is to unzip downloaded file and find the update folder. If you find ‘update’ folder in unzipped file, just copy that folder and paste it to USB root path.

1.4 SET THE TYPE OF MACHINE AFTER UPDATING S/W


(NH1800SE, MX4000W, NH2600, MX2600SE, NH2700, MX5000SE, MX5200SE, MX5300SE)

- ▶ If you install the newly released S/W to NH1800SE, MX4000W, NH2600, MX2600SE, NH2700, MX5000SE, MX5200SE and MX5300SE the thing you should take into consideration is whether the type of machine is right or not. If different machine name appears compared with your machine kind, please perform CLEAR NVRAM or CLEAR SETTING explained in “SET THE TYPE OF MACHINE”.


If your machine is MX2800SE, there is no need to check the type of machine. In that case, S/W detects the type of machine automatically.

Chapter 2. BASIC SYSTEM OPERATION

2.1 PASSWORD FOR ENTERING SUPERVISOR MODE

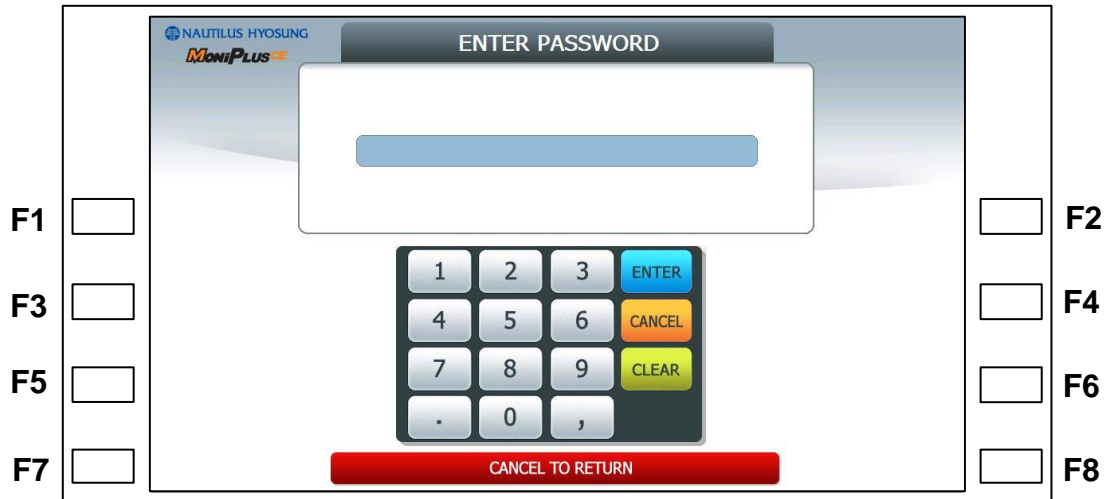

Location of Function Key on ATM

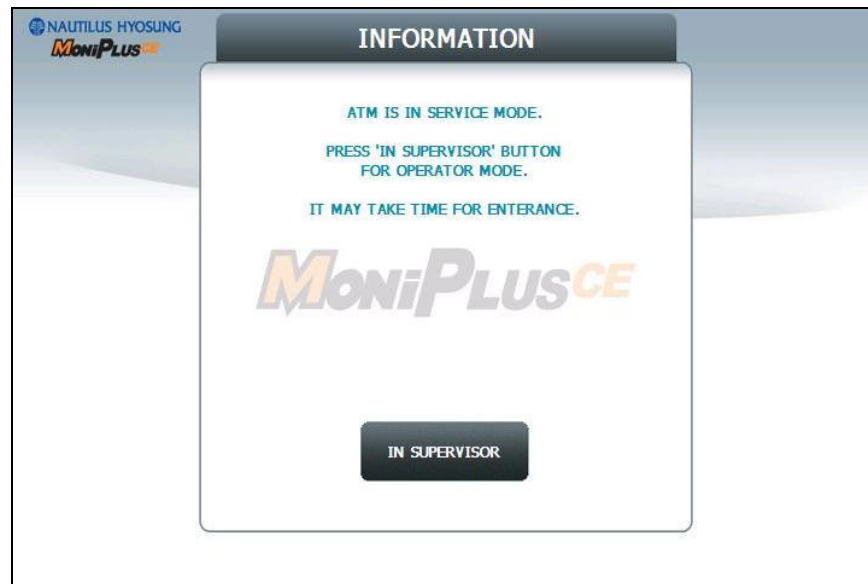

Main Screen on SPL of Rear Type Machine

- ▶ To enter Supervisor mode press the **ENTER, CLEAR, CANCEL, 1, 2 and 3** keys in order. (In case of **Rear Type Machine**, press the **IN SUPERVISOR** button)
 The default password is "555555"(6 digits). The default password is changeable in Supervisor mode.

If the correct password is entered, the OPERATOR FUCNTION menu will be displayed.

Pressing **CLEAR** key erases the entered number and pressing **CANCEL** key goes to in-service-mode.

Depending on authority, there are three kinds of default password like below table.

Authority	Default Password
OPERATOR	111111 (6 digits)
SERVICE	222222 (6 digits)
MASTER	555555 (6 digits)

Please make sure that default password should be changed to different password for your security as soon as this machine is installed at field site.

► **Authorities for each Mode**

No	Working Management Function						CE Authority		
	Main	Sub1	Sub2	Sub3	Sub4	Sub5	M	S	O
1	SETTLEMENT	ADD CASH	1ST CST	-	-		○	○	○
			2ND CST	-	-		○	○	○
			3RD CST	-	-		○	○	○
			4TH CST	-	-		○	○	○
			APPLY	-	-	-	○	○	○
		DAY TOTAL	-	-	-		○	○	○
		TRIAL DAY TOTAL	-	-	-		○	○	○
		CASSETTE TOTAL	-	-	-		○	○	○
		TRIAL CASSETTE TOTAL	-	-	-		○	○	○
		2	JOURNAL	CLEAR JOURNAL	-	-	-		○
CLEAR TRANS. SEQUENCE NO.	-			-	-		○	○	○
VIEW JOURNAL	PREV			-	-		○	○	○
	NEXT			-	-		○	○	○
	PREV 50			-	-		○	○	○
	NEXT 50			-	-		○	○	○
	MOVE START			-	-		○	○	○

			MOVE LAST	-	-		○	○	○
			PRINT THIS	-	-		○	○	○
			SEARCH JOURNAL	-	-		○	○	○
		PRINT JOURNAL	-	-		○	○	○	
		LAST X PRINT	-	-		○	○	○	
		UPLOAD JOURNAL TO HOST	EN/DISABLE				○	○	○
3	REPORT	ERROR CODE	PREV	-	-		○	○	○
			NEXT	-	-		○	○	○
			PREV 10	-	-		○	○	○
			NEXT 10	-	-		○	○	○
			MOVE FIRST	-	-		○	○	○
			MOVE LAST	-	-	-	○	○	○
			PRINT THIS	-	-	-	○	○	○
			SEARCH ERROR CODE	-	-	-	○	○	○
		SW VERSION	-	-	-	○	○	○	
		PRINT ALL SETUP	-	-	-	○	○	○	
		ERROR SUMMARY	PRINT	-	-	-	○	○	○
			CLEAR	-	-	-	○	○	○
			PREV	-	-	-	○	○	○
			NEXT	-	-	-	○	○	○
		REJECT ANALYSIS	PRINT	-	-	-	○	○	○
			CLEAR	-	-	-	○	○	○
4	DIAGNOSTICS	INITIALIZE	-	-	-	○	○	X	
		RECEIPT PRINTER	-	-	-	○	○	X	
		CASH DISPENSER	-	-	-	○	○	X	
		MODEM (DIAL UP)	-	-	-	○	○	X	
		TCP/IP (TCP/IP)	-	-	-	○	○	X	
		MCU TEST (IC ONLY)	IC TEST				○	○	X
			CARD SCAN				○	○	X

		ANTI SKIMMING	INITIATE					O	O	X			
			TIME THRESHOLD					O	O	X			
		AUXILIARY UNIT	SENSOR	CDU SENSOR	-	-			O	O	X		
				SPR SENSOR	-	-			O	O	X		
			FLICKER	ALL FLICKER	-	-			O	O	X		
				EPP FLICKER	-	-			O	O	X		
				CDU FLICKER	-	-			O	O	X		
				SPR FLICKER	-	-			O	O	X		
				MCU FLICKER	-	-			O	O	X		
				EPP LED GUIDE					O	O	X		
			MoniVision					O	O	X			
			RFID CARD SCAN (Optional)					O	O	X			
		AGING	-	-	-	-	O	O	X				
		5	CUSTOMER SETUP	CHANGE MESSAGE	WELCOM MESSAGE	-	-	-		O	O	O	
					RECEIPT HEADER	-	-	-		O	O	O	
					RECEIPT TAIL	-	-	-		O	O	O	
					RECEIPT ADDRESS & PHONE NUMBER	-	-	-		O	O	O	
				BIN LIST	EXTENDED BIN LIST	PREV	-	-			O	O	X
						NEXT	-	-			O	O	X
ADD	-				-	-		O	O	X			
EDIT	-				-	-		O	O	X			
DELETE	-				-	-		O	O	X			
DELETE ALL	-				-	-		O	O	X			
OPTIONAL FUNCTION1	MOD 10 CHECK			EN/DISABLE	-	-			O	O	X		
	BALANCE AT START			EN/DISABLE	-	-			O	O	X		
				CONTINUE EN/DISABLE	-	-			O	O	X		

			ACCOUNTS	CREDIT CARD EN/DISABLE	-	-	0	0	X			
			RECEIPT OPTION	SELECT RECEIPT	-	-	0	0	X			
			PRE-DIALING (DIAL UP)	EN/DISABLE	-	-	0	0	X			
				AFTER CARD	-	-	0	0	X			
				AFTER PIN	-	-	0	0	X			
				AFTER ACCOUNT	-	-	0	0	X			
			EMV	EN/DISABLE	-	-	0	0	X			
				AID LIST	-	-	0	0	X			
				LATCH EN/DISABLE	-	-	0	0	X			
		OPTIONAL FUNCTION2	DEVICE OPTION	RECEIPT PAPER LOW SENEOR	-	-	0	0	X			
					CST SOUND	-	-	0	0	X		
					EPP FLICKER ON	-	-	0	0	X		
					EPP LED GUIDE OPTION			0	0	X		
				SCREEN SERVICES	CHANGE BACKGROUND	EN /DISABLE		0	0	X		
						DEFAULT SCREEN	SCREEN 1	EN/DISABLE		0	0	X
							SCREEN 2	EN/DISABLE		0	0	X
							SCREEN 3	EN/DISABLE		0	0	X
							SCREEN 4	EN/DISABLE		0	0	X
							SCREEN 5	EN/DISABLE		0	0	X
					SCREEN 6		EN/DISABLE		0	0	X	
					NOTICE	SCREEN 1	EN/DISABLE		0	0	X	
						SCREEN 2	EN/DISABLE		0	0	X	
						SCREEN 3	EN/DISABLE		0	0	X	
						SCREEN 4	EN/DISABLE		0	0	X	
						SCREEN 5	EN/DISABLE		0	0	X	
				SCREEN 6	EN/DISABLE		0	0	X			
				EN/DISABLE			0	0	X			
				TITLE			0	0	X			
				MESSAGE			0	0	X			

		SURCHARGE MODE	EN/DISABLE	-	-	-	O	O	X	
			OWNER	-	-	-	O	O	X	
			AMOUNT	-	-	-	O	O	X	
			ADDITIONAL SURCHARGE MODE	SURCHARGE MODE CHANGE	-	-	O	O	X	
				NEXT STEP (PERCENT)	PERCENTAGE	-	O	O	X	
					LOCATION	-	O	O	X	
			WARNING MANNER		-	O	O	X		
			ADVERTISE MENT	COUPON	COUPON TYPE	-	-	O	O	X
					BASIC COUPON	COUPON1	O	O	X	
		COUPON2				O	O	X		
		COUPON3				O	O	X		
		COUPON4				O	O	X		
		COUPON5				O	O	X		
		COUPON6				O	O	X		
		ENHANCED COUPON			CUT OPTION	O	O	X		
					COUPON1	O	O	X		
					COUPON2	O	O	X		
					COUPON3	O	O	X		
					COUPON4	O	O	X		
				COUPON5	O	O	X			
		WELCOME ADVERTISE MENT		TIMER			O	O	X	
SCREEN 1	EN/DISABLE				O	O	X			
SCREEN 2	EN/DISABLE				O	O	X			
SCREEN 3	EN/DISABLE				O	O	X			
SCREEN 4	EN/DISABLE				O	O	X			
SCREEN 5	EN/DISABLE			O	O	X				
TRANSACTION ADVERTISE MENT	TIMER			O	O	X				
	SCREEN 1	EN/DISABLE		O	O	X				
	SCREEN 2	EN/DISABLE		O	O	X				

			SCREEN 3	EN/DISABLE			O	O	X
			SCREEN 4	EN/DISABLE			O	O	X
			SCREEN 5	EN/DISABLE			O	O	X
			SCREEN 6	EN/DISABLE			O	O	X
		STANDARD3 OPTION	STATUS MONITORING EN/DISABLE	-	-	-	O	X	X
			COMMUNIC ATION HEADER	-	-	-	O	X	X
			COMMUNIC ATION ID	-	-	-	O	X	X
			CRC EN/DISABLE	-	-	-	O	X	X
		STANDARD1 OPTION	TERMINAL STATUS EN/DISABLE				O	X	X
			HOST ERROR EN/DISABLE				O	X	X
			REVERSAL REASON EN/DISABLE				O	X	X
		SELECT PROCESSOR	COMMUNIC ATION	DIALUP	-	-	O	X	X
				TCP/IP	-	-	O	X	X
			EOT/ENQ OPTION	GENERAL	-	-	O	X	X
				EOT OPTIONAL	-	-	O	X	X
				NO EOT REQUIRED	-	-	O	X	X
				NO ENQ REQUIRED	-	-	O	X	X
			MESSAGE FORMAT	STANDARD 1	-	-	O	X	X
				STANDARD 2	-	-	O	X	X
				STANDARD 3	-	-	O	X	X
				EPS	-	-	O	X	X
			TCP/IP TYPE	VISA FRAMED	-	-	O	X	X
				STANDARD	-	-	O	X	X
				ACK CONTROLLED	-	-	O	X	X
		SSL EN/DISABLE		-	-	O	X	X	
		SSL CERT. EN/DISABLE (Only Available when SSL is set as 'ENABLE')					O	X	X

				SSL CERT. DOWNLOAD FROM USB (Only Available when SSL CERT. is set as 'ENABLE')					O	X	X
			REVERSAL RETRY COUNT	-	-	-	-	-	O	X	X
6	SYSTEM SETUP	DATE & TIME	YEAR	-	-	-	-	-	O	O	O
			MONTH	-	-	-	-	-	O	O	O
			DAY	-	-	-	-	-	O	O	O
			HOUR	-	-	-	-	-	O	O	O
			MINUTE	-	-	-	-	-	O	O	O
			APPLY	-	-	-	-	-	O	O	O
		SPEAKER VOLUME	UP	-	-	-	-	-	O	O	O
			DOWN	-	-	-	-	-	O	O	O
		TERMINAL IP (TCP/IP)	IP ADDRESS		-	-	-	-	O	O	X
			SUBNET MASK	-	-	-	-	-	O	O	X
			GATEWAY	-	-	-	-	-	O	O	X
			DNS	-	-	-	-	-	O	O	X
			DHCP EN/DISABLE	-	-	-	-	-	O	O	X
		LANGUAGE	TRANSACTION LANGUAGE	DEFAULT LANGUAGE					O	O	O
				ENGLISH EN/DISABLE					O	O	O
				SPANISH EN/DISABLE	-	-	-	-	O	O	O
				FRENCH EN/DISABLE	-	-	-	-	O	O	O
				CHINESE EN/DISABLE	-	-	-	-	O	O	O
				KOREAN EN/DISABLE					O	O	O
				JAPANESE EN/DISABLE					O	O	O
			SUPERVISOR LANGUAGE	ENGLISH						O	O
		FRENCH							O	O	O
		CHANGE PASSWORD	OPERATOR PASSWORD	-	-	-	-	-	O	O	O
			SERVICE PASSWORD	-	-	-	-	-	O	O	X
			MASTER PASSWORD	-	-	-	-	-	O	X	X

MODEM PARAMETERS (DIAL UP)	HOST INITIAL STRING	-	-	-	O	O	X
	RMS INITIAL STRING	-	-	-	O	O	X
	MODEM TEST	-	-	-	O	O	X
DEVICE SETUP	CDU SETUP (N/A to MX4000W)	COUNTRY	-	-	O	O	X
		CDU TYPE	-	-	O	O	X
		CASSETTE VOLUME	-	-	O	O	X
		EXECUTE	-	-	O	O	X
	CALRIBRATION (Rear Type Only)				O	O	X
	CARD READER SETUP	NH DIP	-	-	O	O	X
		NH EMV	-	-	O	O	X
		NH EMV2	-	-	O	O	X
		ANTI SKIMMING (NH EMV Only)	EN/DISABLE	-	O	O	X
			SHUTTER EN/DISABLE	-	O	O	X
			TIME THRESHOLD	-	O	O	X
			AUTO RECOVERY TIME	-	O	O	X
	APPLY	-	O	O	X		
	HALO LED SETUP	IN SERVICE	-	-	O	O	X
		TRANSACTION	-	-	O	O	X
		DISPENSING	-	-	O	O	X
		OUT OF SERVICE	-	-	O	O	X
		LED MODE	-	-	O	O	X
		LED COLOR	-	-	O	O	X
		DEFAULT	-	-	O	O	X
	MoniVision	EN/DISABLE MoniVision			O	O	X
EN/DISABLE Live-Feed				O	O	X	
EN/DISABLE Journal Pic				O	O	X	
SYSTEM CONTROL	SOFTWARE UPDATE	-	-	-	O	O	O
	REBOOT	-	-	-	O	O	O
	BACKUP ALL JOURNAL TO USB	-	-	-	O	O	O

			BACKUP JOURNAL BY DATE TO USB	FROM	-	-	O	O	O			
				TO	-	-	O	O	O			
				SEARCH	-	-	O	O	O			
			BACKUP LOG TO USB	-	-	-	O	O	O			
			CLEAR NVRAM	CLEAR ALL	SET THE TYPE OF MACHINE	-	O	X	X			
				CLEAR SETTING	SET THE TYPE OF MACHINE	-	O	X	X			
				CLEAR JOURNAL	-	-	O	X	X			
				CLEAR TRANS SEQUENCE NUMBER	-	-	O	X	X			
				CLEAR LOG	-	-	O	X	X			
			BACK NVRAM				O	X	X			
			RESTORE NVRAM				O	X	X			
			7	HOST SETUP	KEY MANAGEMENT	KEY& CONFIG DOWNLOAD	EN/DISABLE			O	X	X
							KEY&CONFIG DOWNLOAD	-	-	O	X	X
						ENTER MASTER KEY	REMOTE KEY INFO		-	O	X	X
	-	O						X	X			
KEY MODE		-					O	X	X			
CHECK KEY		-					O	X	X			
EDIT KEY (KEY MODE DEPENDENT)	MASTER KEY(TRIPLE)							O	X	X		
	MAC MASTER KEY(SINGLE)							O	X	X		
	MAC MASTER KEY (TRIPLE)							O	X	X		
CHANGE PASSWORD	PASSWORD1						O	X	X			
	PASSWORD2						O	X	X			
RKT SETUP (STANDARD1 ONLY)	RKT EN/DISABLE	-				-	O	X	X			
	RANDOM NUMBER EN/DISABLE						O	X	X			
	DOWNLOAD MASTERKEY						O	X	X			
TELEPHONE NUMBER (DIAL UP)	HOST PHONE 1	-	-	-	O	X	X					
	HOST PHONE 2	-	-	-	O	X	X					

	HOST ADDRESS (TCP/IP)	URL EN/DISABLE	-	-	-	O	X	X	
		HOST ADDRESS 1	-	-	-	O	X	X	
		PORT NUMBER 1	-	-	-	O	X	X	
		HOST ADDRESS 2	-	-	-	O	X	X	
		PORT NUMBER 2	-	-	-	O	X	X	
	TERMINAL ID	-	-	-	-	O	O	X	
	HEALTH CHECK MESSAGE	EN/DISABLE	-	-	-	O	O	X	
		SEND INTERVAL	-	-	-	O	O	X	
	REMOTE MONITOR	RMS EN/DISABLE	EN/DISABLE	-	-	-	O	O	X
			RMS RING COUNT (DIAL UP)	-	-	-	O	O	X
			ATM LISTENING PORT (TCP/IP)	-	-	-	O	O	X
		RMS STATUS SEND EN/DISABLE	EN/DISABLE	-	-	-	O	O	X
			URL EN/DISABLE (TCP/IP)	-	-	-	O	O	X
			PHONE NUMBER1 (DIAL UP)	-	-	-	O	O	X
			PHONE NUMBER2 (DIAL UP)	-	-	-	O	O	X
			INTERVAL	-	-	-	O	O	X
			RMS ADDRESS (TCP/IP)	-	-	-	O	O	X
			RMS LISTENING PORT (TCP/IP)	-	-	-	O	O	X
	RMS PASSWORD	-	-	-	-	O	X	X	
	ROUTING ID	-	-	-	-	O	O	O	
AUTO DAY TOTAL	EN/DISABLE	-	-	-	O	O	O		
	TOTAL TYPE	-	-	-	O	O	O		
	HOUR	-	-	-	O	O	O		
	MINUTE	-	-	-	O	O	X		


8	TRANSACTION SETUP	DISPENSE LIMIT	-	-	-	-	O	O	X	
		FAST CASH	LB 0	-	-	-	-	O	O	X
			LB 1	-	-	-	-	O	O	X
			LB 2	-	-	-	-	O	O	X
			RB 0	-	-	-	-	O	O	X
			RB 1	-	-	-	-	O	O	X
			RB 2	-	-	-	-	O	O	X
		LOW CURRENCY CHECK EN/DISABLE	-	-	-	-	O	X	X	
		DENOMINATION	1ST CASSETTE	-	-	-	-	O	X	X
			2ND CASSETTE	-	-	-	-	O	X	X
3RD CASSETTE	-		-	-	-	O	X	X		
4TH CASSETTE	-		-	-	-	O	O	O		
9	IN SERVICE	-	-	-	-	O	O	O		
10	SITE MAP	-	-	-	-	O	O	O		
11	QUICK REPLENISH	-	-	-	-	O	X	X		
12	QUICK CONFIGURATION	-	-	-	-					

2.2 WHEN AN ERROR OCCURS

- ▶ When you try to enter Supervisor Mode or go into **IN SERVICE MODE** from supervisor menu, the screen below will be displayed if there is any ERROR.

Press **DEVICE INITIALIZE** button, if the error is caused by a device so it can be cleared by initializing.

Press **OPERATOR FUNCTION** button, if you have to set up any information to clear the error. And set up the information which is missed.

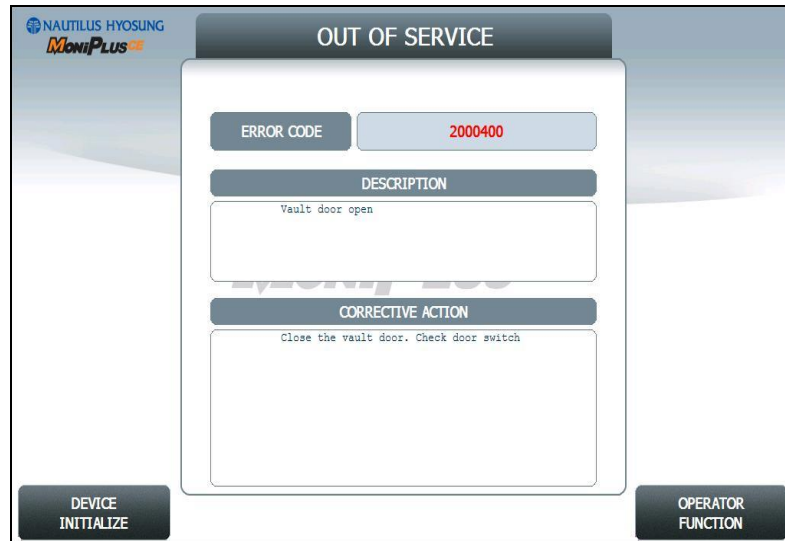


<Note!>

If the machine goes out of service, the error code will not always appear on the screen. If you do not see an error code, enter operator function and go to reports. Look in the error summary for error codes.

2.3 HOW TO USE KEYPAD (Function Key Type)

► This section explains the basic operation of the KeyPad.

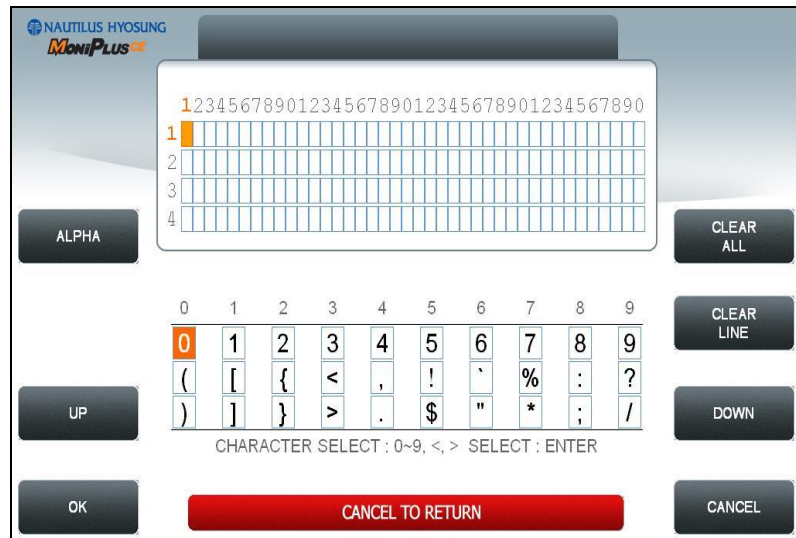

[Default Keypad Character Table Screen]


Shift Status				0	1	2	3	4	5	6	7	8	9
F1	NUMBE R	F 3	-	0 ()	1 []	2 { }	3 < >	4 , .	5 ! \$	6 ' "	7 % *	8 : ;	9 ? /
			UPPER	+ - =	Space Q Z	A B C	D E F	G H I	J K L	M N O	P R S	T U V	W X Y
	LOWE R		+ - =	Space q z	a b c	d e f	g h i	j k l	m n o	p r s	t u v	w x y	
	TABLE		-	The character on the current cursor position on the screen will be selected									

► How to Enter the Character

- A. The Keypad Character Table will appear on the bottom of the screen in all keypad input screens.
- B. F1 key gives the option for ALPHA or NUMBER, Table mode. Default is NUMBER.
- C. F3 key gives the option for Upper or Lowercase characters. It is valid only in the ALPHA mode. Default is Uppercase.
- D. The input of characters is limited to the space provided.
- E. Key can be changed whenever you press it to choose proper character. For example, when key "1" is pressed once it is "SPACE", pressed twice it is "Q", pressed third time it is "Z" in case of the Alpha mode. When the desired character is selected, press ENTER.
- F. ◀, ▶ keys move the cursor position in the ALPHA or NUMBER mode. In the TABLE mode ◀, ▶ keys are used to select the character.
- G. **F2** key is used to clear the whole screen and returns the cursor to its initial position.
- H. **F4** key and **CLEAR** key in pinpad are used to clear the current line.
 - I. **F5** key is used to save the current changes.
- J. **F6** key and **CANCEL** key in pinpad are used to exit. (If you didn't press F5 key after changing, the changes will be ignored.)
- K. **F7** key is used to move the cursor position **UP**.
- L. **F8** key is used to move the cursor position **DOWN**.

2.4 HOW TO USE KEYPAD (Touch Screen Type)

- ▶ You can use this KeyPad in same way as a computer keyboard.

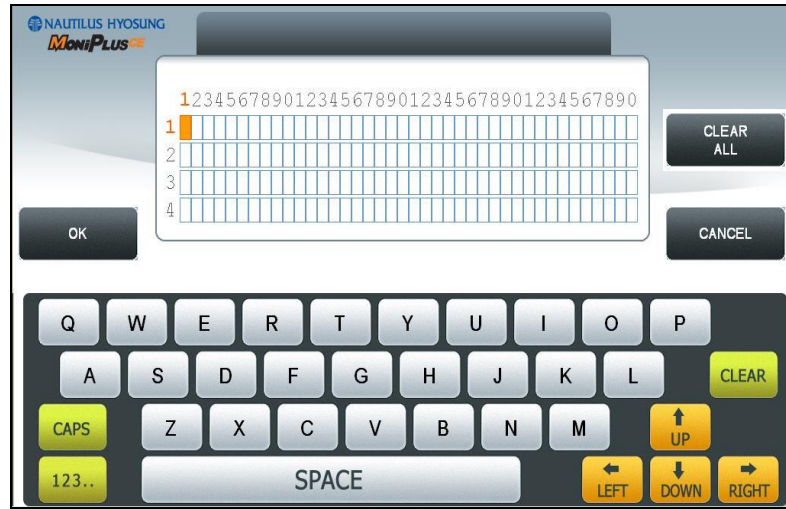

[Default KeyPad Character Table Screen]

Key	Character Table
ABC..	Q W E R T Y U I O P A S D F G H J K L Z X C V B N M
CAPS	q w e r t y u i o p a s d f g h j k l z x c v b n m
123	1 2 3 4 5 6 7 8 9 0 ~ ! @ # \$ % ^ & * + - : ; < > ?
+ /	1 2 3 4 5 6 7 8 9 0 () { } [] _ = " ' , . / \ £

Chapter 3. SUPERVISOR MENU

- ▶ The following screen below is the main screen of Supervisor mode.
Supervisor mode in this machine is largely composed of ATM Status and Function.


A. ATM Status

1. Machine Kind and Country Code
2. Program version
3. Serial Number
4. Line Type (Dial-up, TCP/IP)
5. Message Format
6. Terminal ID
7. The Media Status of 1st Cassette
8. The Media Status of 2nd Cassette (N/A to MX4000W)
9. The Media Status of 3rd Cassette (N/A to MX4000W)
10. The Media Status of 4th Cassette (N/A to MX4000W)
11. 1st Cassette : Remaining notes(Denomination)
e.g) if 1000 notes of \$20, 1000(\$20)
12. 2nd Cassette : Remaining notes(Denomination)
13. 3rd Cassette : Remaining notes(Denomination)
14. 4th Cassette : Remaining notes(Denomination)
15. Reject Box Status(Rejected Count)
16. Error Code
17. The Status of Card
18. The Status of Pinpad
19. The Status of Cash Dispenser
20. The Status of Receipt Printer
21. The Status of RFID Reader
22. Current Date and Time
23. Last Transaction Time
24. Operator User

B. Functions

1. IN SERVICE
2. SITE MAP
3. QUICK REPLENISH
4. QUICK CONFIGURATION
- F1. SETTLEMENT
- F2. CUSTOMER SETUP
- F3. JOURNAL
- F4. SYSTEM SETUP
- F5. REPORT
- F6. HOST SETUP
- F7. DIAGNOSTICS
- F8. TRANSACTION SETUP

In order to move to the in-service mode, press the **1** or **CANCEL** key in pinpad.
 In order to reset terminal error, press the **CLEAR** key in pinpad.

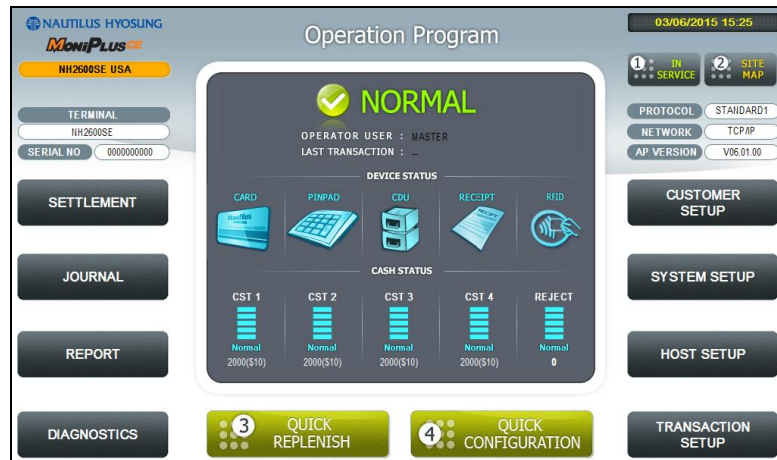

[Function Key Type]



[Touch Type (NH-2700T)]

C. Field Values

CLASS	VALUE (eg.)	Remarks
MACHINE KIND	NH2700 / NH2700T / NH1800SE / MX4000W / NH2600 / MX2600SE / MX5000SE / MX5200SE / MX5300SE / MX2800SE	
COUNTRY CODE	USA	
PROGRAM VERSION	V06.01.XX	
LINE TYPE	TCP/IP DIAL-UP	
MESSAGE FORMAT	STANDARD1 STANDARD2 STANDARD3 EPS	

TERMINAL ID	1234567	
ERROR CODE	[00000(00)]	
STATUS		
CST1(Remaining Notes)	BILLS COUNT - 1047(\$10) N/A	
CST2(Remaining Notes)	BILLS COUNT - 18(\$20) N/A	
CST3(Remaining Notes)	BILLS COUNT - 20(\$50) N/A	
CST4(Remaining Notes)	N/A	Not Available
CST1(Media Status)	MISSING NORMAL LOW EMPTY FULL	
CST2(Media Status)	MISSING NORMAL LOW EMPTY FULL	Not Available to MX4000W
CST3(Media Status)	MISSING NORMAL LOW EMPTY FULL	Not Available to MX4000W
CST4(Media Status)	N/A	Not Available to MX4000W
REJECT	REJECT COUNT(CDU) – (0)	
Card	OK ERROR	
Pinpad	OK ERROR	
Cash Dispenser	OK ERROR	
Receipt Printer	OK ERRPR	
RFID Reader	OK ERROR NOT USED	Optional

3.1 SETTLEMENT

- This menu contains **ADD CASH**, **DAY TOTAL**, **TRIAL DAY TOTAL**, **CASSETTE TOTAL** and **TRIAL CASSETTE TOTAL**. Please press each button on this menu to go to next screen or to operate the related function. To go back to the previous screen, press the **CANCEL** key in pinpad.



1. **ADD CASH** : Go to the next screen
2. **DAY TOTAL** : Do settlement with host. After settlement, clear transaction information.
3. **TRIAL DAY TOTAL** : Just do settlement with host. (Not clear transaction info.)
4. **CASSETTE TOTAL** : Show note count and then clear note count.
5. **TRIAL CASSETTE TOTAL** : Just show note count. (Not clear note count.)

ADD CASH

- ▶ By pressing button on this menu, you can select cassette to add note count. (Cassette numbers are designated from top to bottom). Input the note count you want to add and press the **ENTER** key in the pinpad. If you completed the all cassettes, you have to press **APPLY** button to make the value changed.

<Note!>


The total note count you enter must not exceed the maximum note count. And this count represents the logical one. So you can input more count than physical limit.
(Max. note count : 2,000/CST)

	DENOM.	BILL COUNT	
1ST CST	\$20	1900	100
2ND CST	\$20	1900	100
3RD CST	\$20	1900	100
4TH CST	\$20	1900	100
	SUM TOTAL	ADDED AMT.	
1ST CST	\$38,000	\$2,000	
2ND CST	\$38,000	\$2,000	
3RD CST	\$38,000	\$2,000	
4TH CST	\$38,000	\$2,000	

- DENOM : Denomination of each cassette
- BILL COUNT
 - Left : Current note count of each cassette
 - Right : Note count to be added for each cassette
- SUM TOTAL : Current total amount of each cassette
- ADDED AMT : Amounts to be added for each cassette

3.2 JOURNAL

- This **JOURNAL** menu contains **CLEAR JOURNAL**, **CLEAR TRANS. SEQUENCE NO.**, **VIEW JOURNAL**, **PRINT JOURNAL**, and **PRINT LAST X** sub menu.

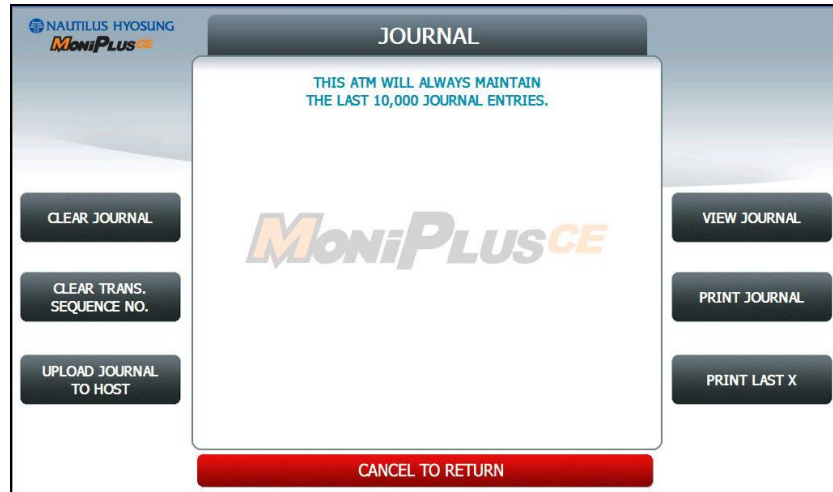

1. CLEAR JOURNAL

The **CLEAR JOURNAL** function is used to delete all journal data

2. CLEAR TRANS. SEQUENCE NO

This function will reset the journal sequence number to <0000>. This may be useful if you switch processing or switch Terminal ID numbers and want to keep new records.

3. PRINT JOURNAL

The **PRINT JOURNAL** function is used to print out all the journals which have not been printed from the last printed journal. If you want to stop printing, you may stop it by pressing **CANCEL** key.

4. VIEW JOURNAL

Go to the next screen

5. PRINT LAST X

Go to the next screen

6. UPLOAD JOURNAL TO HOST

Go to the next screen for determining whether to use the function of '**Electric Journal Upload (EJ UPLOAD)**' or not.

VIEW JOURNAL

- ▶ You can see the various kinds of journal data by using each field and button. The VIEW function is used to display the Journal data on the customer screen. The Journal record will be displayed on the screen.

NAUTILUS HYOSUNG
MoniPlus

VIEW JOURNAL

TODAY 04/25/2010 TOTAL COUNT 1128

[04/25/2010 16:11:46 J#:1128]

* TRIAL DAY TOTAL *

START TIME = 01/01/2000 00:00:01
END TIME = 04/25/2010 16:11:46
TERMINAL # = NH2700CE

[1. HOST TOTALS]

COUNT OF WITHDRAWAL = 0
COUNT OF BALANCE = 0
COUNT OF TRANSFER = 0
AMOUNT OF DISPENSE = \$0.00

[2. TERMINAL TOTALS]

COUNT OF WITHDRAWAL = 0
COUNT OF BALANCE = 1061
COUNT OF TRANSFER = 0
COUNT OF NON-CASH = 0
COUNT OF REVERSAL = 0
AMOUNT OF DISPENSE = \$0.00
AMOUNT OF NON-CASH = \$0.00
AMOUNT OF SURCHARGE = \$0.00

PREV

PREV 50

MOVE START

PRINT THIS

NEXT

NEXT 50


MOVE LAST

SEARCH

CANCEL TO RETURN

Use **PREV** or **NEXT** button to show just one data before or after, and **PREV 50** or **NEXT 50** button are for data before 50 or after 50 EA. If you use **MOVE FIRST** or **MOVE LAST** button, you can see first or last journal. Besides, you can check up journal data you would try to search by using **SEARCH JOURNAL** button and just print out the current journal by pressing **PRINT THIS** button.

If there are camera images for current journal, they will be shown on **FACE IMAGES** area, right-top of screen. You can see a large size of them by pressing **CLEAR** button.

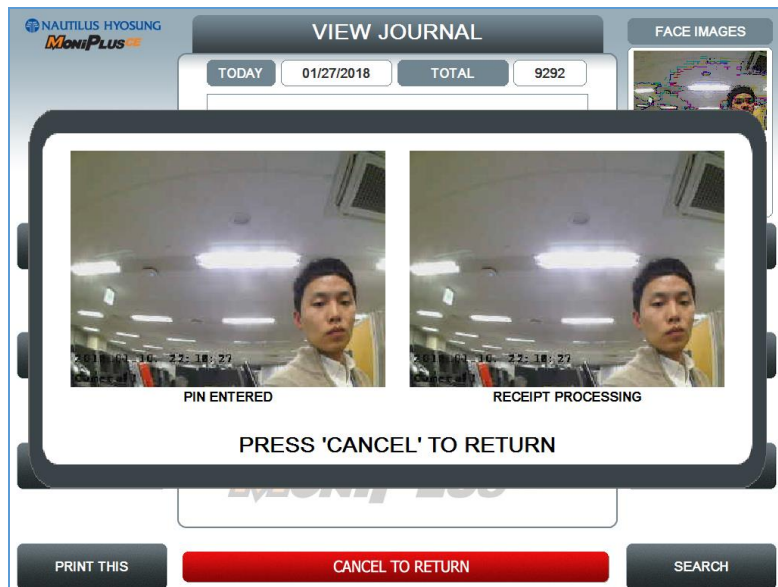

SEARCH JOURNAL

- ▶ You can search a specific journal with a journal index and see it if the index is valid.



PRINT LAST X

- ▶ The **PRINT LAST X** function is used to print out recent journal data. If you want to print recent journal data, enter the count of data you want on JOURNAL main screen and then press **ENTER** key. Then the data you request is printed. If you want to stop printing, you may stop by pressing **CANCEL** key.




UPLOAD JOURNAL TO HOST

- ▶ You can select whether to use 'EJ UPLOAD' or not on the screen as depicted as below.




3.3 REPORT

- ▶ This report menu consists of 5 sub-menus. **ERROR CODE**, **ERROR SUMMARY**, **SW VERSION**, **PRINT ALL SETUP** and **REJECT ANALYSIS**. You can print out all information regarding each device as well as system value set up. If you want to go back the previous screen, press the **CANCEL** key.

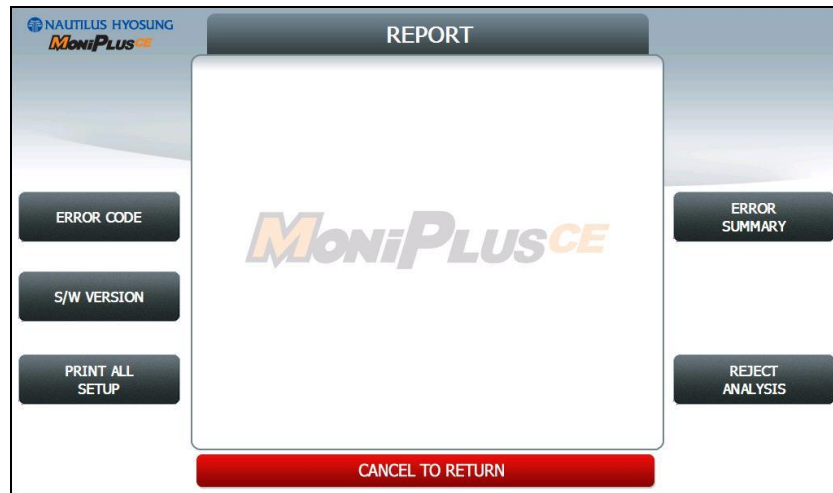

ERROR CODE

- **ERROR CODE** offers detailed descriptions of error codes and way to deal with the errors on a working ATM machine.

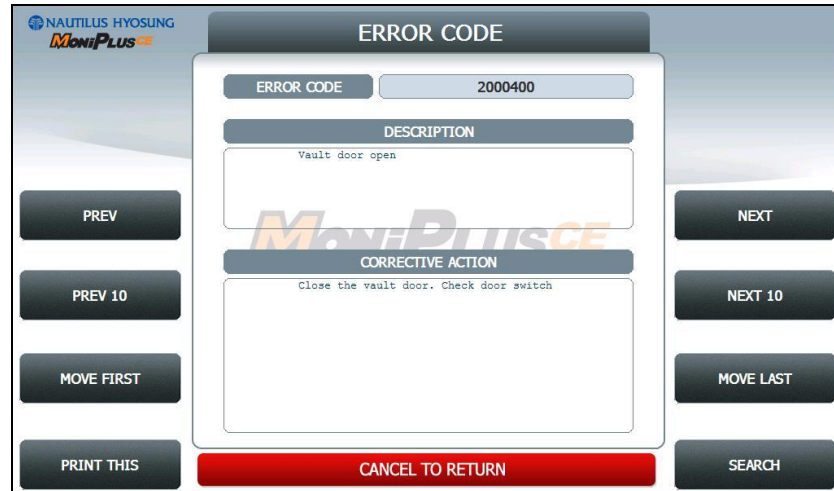


PREV/NEXT buttons are to navigate previous and next error codes one by one and **PREV 10/NEXT 10** are to do by 10 EA.. **MOVE FIRST/MOVE LAST** buttons are to go to the first error code and the last one. **PRINT THIS** button is for printing information about the error code displaying in the screen.


SEARCH ERROR CODE button is to search for a specific error code immediately.

SEARCH ERROR CODE

- ▶ You can search a specific error code if that exists. In order to use the function, please input the specific error code in the field and select **OK** button. If there is no result in database, **"INVALID ERROR CODE"** displays.

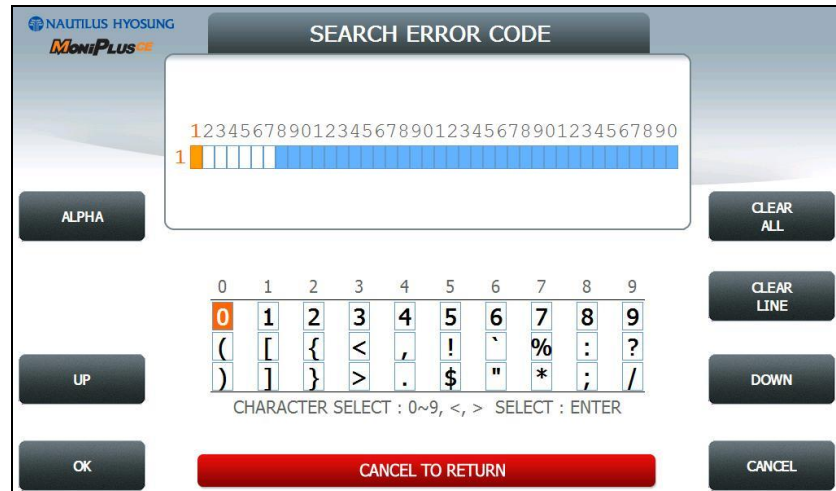

[Function Key Type]

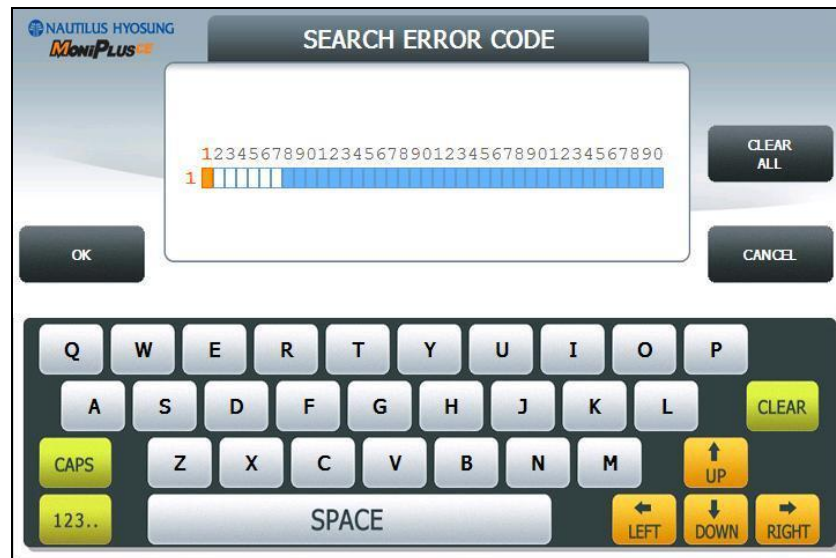

[Touch Type]

SW VERSION

- This menu shows each software version.
(APPLICATION, CDU EP, CDU SP, SPR EP, SPR SP, MCU EP, MCU SP and etc.)

AP		VDM		SP		EP	
AP	V06.01.00	CDU	V06.06.07.00	CDU	V 06.06.14	CDU	C03H1QV098019
OS	V06.01.16	SPR	V06.04.13.00	SPR	V 06.04.18	SPR	SPR12
RMS	V01.03.25	MCU	V06.00.04.00	MCU	V 06.00.12	MCU	3898-01G
B-L	V06.22.15	KMR	V06.00.00.15	PIN	V 06.04.07	PIN	V03.02.01
MWI	V06.03.14	RFID	N/A	SIU	V 06.03.10	SIU	N/A
EMV	N/A			RFID	N/A	RFID	N/A

PRINT CANCEL TO RETURN

PRINT ALL SETUP (LIST)**▶ [DIAL – UP]**

NO	ITEM	DESCRIPTION	REMARKS
1	DATE	CURRENT DATE & TIME	
2	MACHINE KIND	NH2700 / NH2700T / NH1800SE / MX4000W / MX2600SE / MX5000SE / MX5200SE / MX5300SE / MX2800SE	
3	COUNTRY	USA	
4	HOST PROCESSOR	HOST PROTOCOL TYPE	
5	NETWORK TYPE	DIAL-UP	
6	VISA FRAMED OPTION	EOT/ENQ OPTION	
7	VERSION INFORMATION	AP / SP / EP VERSION	
8	SYSTEM SETUP	CURRENT CASSETTE REJECT	
		CURRENT BILLS	
		SERIAL NUMBER	
		SPEAKER VOLUME	
		HOST MODEM INITIAL STRING	
		RMS MODEM INITIALI STRING	
		LANGUAGE MODE	
9	CUSTOMER SETUP	WELCOME MESSAGE INFO	
		RECEIPT HEADER & TAIL INFO	
		RECEIPT ADDRESS & PHONE INFO	
		OPTIONAL FUNCTION 1 INFO	
		OPTIONAL FUNCTION 2 INFO	
		BIN LIST	
		ADVERTISEMENT #n INFO	
		COUPON #n INFO	
10	TRANSACTION SETUP	DISPENSE LIMIT	
		CURRENCY ID	
		DENOMINATION	
		FAST CASH	
		LOW CURRENCY CHECK	
11	HOST SETUP	TERMINAL ID	
		STANDARD 3 OPTION	
		ROUTING ID	
		HOST PHONE NUMBER	
		HEALTH CHECK OPTION	
		AUTO DAY TOTAL OPTION	
		RMS OPTION	
		MASTER KEY INFO	

► [TCP / IP]

NO	ITEM	DESCRIPTION	REMARKS
1	DATE	CURRENT DATE & TIME	
2	MACHINE KIND	NH-2700 / NH-2700T / NH1800SE / MX4000W / MX2600SE / MX5000SE / MX5200SE / MX5300SE / MX2800SE	
3	COUNTRY	USA	
4	HOST PROCESSOR	HOST PROTOCOL TYPE	
5	NETWORK TYPE	TCP/IP	
6	TCP/IP TYPE	TCP/IP TYPE	
7	SSL MODE	SSL OPTION	
7-1	SSL CERT.	ENABLE/DISABLE	Only available when SSL MODE is set as 'ENABLE'
8	VERSION INFORMATION	AP / SP / EP VERSION	
9	SYSTEM SETUP	CURRENT CASSETTE REJECT	
		CURRENT BILLS	
		SERIAL NUMBER	
		SPEAKER VOLUME	
		ATM IP OPTION	
		LANGUAGE MODE	
10	CUSTOMER SETUP	WELCOME MESSAGE INFO	
		RECEIPT HEADER & TAIL INFO	
		RECEIPT ADDRESS & PHONE INFO	
		OPTIONAL FUNCTION 1 INFO	
		OPTIONAL FUNCTION 2 INFO	
		BIN LIST	
		ADVERTISEMENT #n INFO	
		COUPON #n INFO	
11	TRANSACTION SETUP	DISPENSE LIMIT	
		CURRENCY ID	
		DENOMINATION	
		FAST CASH	
		LOW CURRENCY CHECK	
12	HOST SETUP	TERMINAL ID	
		STANDARD 3 OPTION	
		ROUTING ID	
		HOST ADDRESS INFO	
		HEALTH CHECK OPTION	
		AUTO DAY TOTAL OPTION	
		RMS OPTION	
		MASTER KEY INFO	

ERROR SUMMARY

- ▶ **ERROR SUMMARY** menu offers a statistics of error codes on an ATM machine. It lists the errors by the number of times they occurred. You can print these errors.

The screenshot shows the 'ERROR SUMMARY' menu on an ATM screen. At the top left is the 'NAUTILUS HYOSUNG MoniPLUS' logo. The title 'ERROR SUMMARY' is centered at the top. Below the title is a 'START DATE' field showing '04/24/2010 13:43:56'. A table lists 10 error codes with their respective counts. At the bottom, there are three buttons: 'PRINT' on the left, 'CLEAR' on the right, and a red 'CANCEL TO RETURN' button at the bottom center.

NO	ERROR CODE	COUNT
1	971A600	15
2	2000400	9
3	D170400	4
4	FFFFFFF	3
5	971A700	1
6	9799904	1
7	F000B00	1
8	F000F00	1
9	D170600	1
10	D200000	1

PREV/NEXT buttons are to navigate previous and next pages and **PRINT** button prints all of error code history.

CLEAR button erases the history stacked in an ATM machine and set **START DATE** to the present date as well. (START DATE displays "01/01/2000 00:00:00" in ATM machines which have never done the CLEAR function.)

REJECT ANALYSIS

- **REJECT ANALYSIS** menu offers a statistics of note reject on an ATM machine. It lists the rejects by the number of times or note counts they occurred. You can print these rejects.

	CST1	CST2	CST3	CST4
START DATE	04/24/2010 13:43:56			
DISPENSED	0	N/A	N/A	N/A
REJECTED	0	N/A	N/A	N/A
SKEW	0	N/A	N/A	N/A
GAP TOO CLOSE	0	N/A	N/A	N/A
LONG NOTE	0	N/A	N/A	N/A
SHORT NOTE	0	N/A	N/A	N/A
DOUBLE DETECT	0	N/A	N/A	N/A
TEST DISPENSED	0	N/A	N/A	N/A

Buttons: PRINT, CANCEL TO RETURN, CLEAR

PRINT button prints the reject analysis information.


CLEAR button erases the reject analysis information and set **START DATE** to the present date as well. (START DATE displays "01/01/2000 00:00:00" in ATM machines which have never done the CLEAR function.)

<Caution>


After selecting **CLEAR** button as depicted as above, If there is the error code about **"Reject Box is full"** in transferring Operator state to Service state, you must select **"CASSETTE TOTAL"** button, explained in the previous "SETTLEMENT", to get free from error state even though the count of rejected notes would be canceled out to '0' on the screen. You might be curious about the necessity of **"CLEAR"** button. The reason why this button is necessary is to cancel out the information of notes for statistical purpose.

3.4 DIAGNOSTICS

- ▶ This report menu consists of 7 sub-menus. **INITIALIZE, RECEIPT PRINTER, CASH DISPENSER, MODEM (or TCP/IP), CARD SCAN, AUXILIARY UNIT** and **AGING**. Please press each button on this menu to go to next screen or to operate the related function. To go back to the previous screen, press the **CANCEL** key in pinpad.

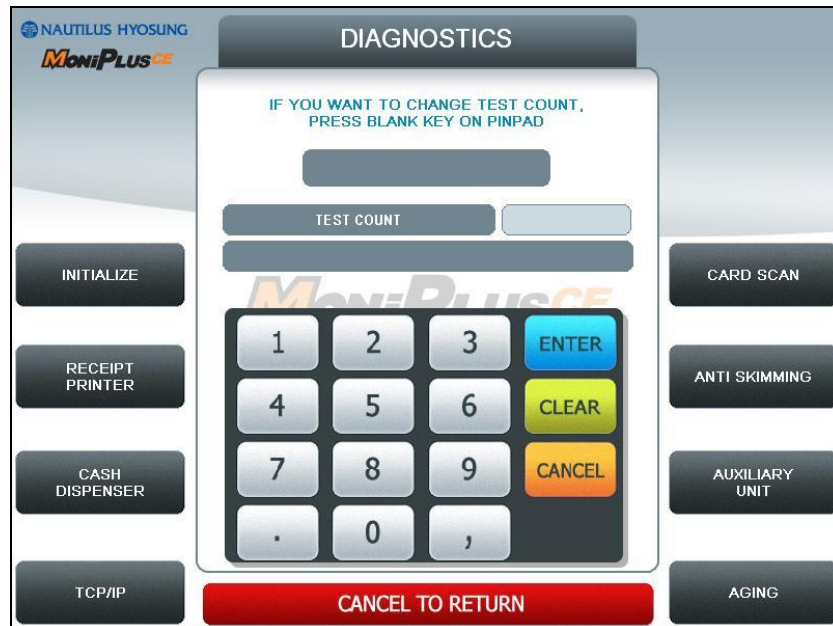

[Function Key Type]

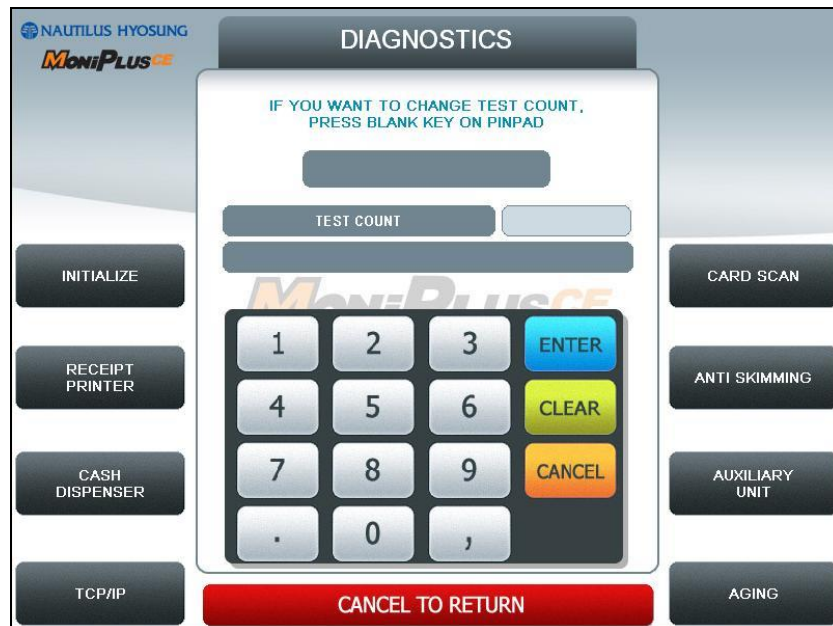


[Touch Type]

► **Changing the TEST COUNT**

The **TEST COUNT** means the number of test.

If you want to change the test count, press **BLANK** key or **SET** button then input the test count and press **ENTER** key. To delete the test count while inputting, press **CLEAR** key. To cancel the test while testing, press **CANCEL** key.

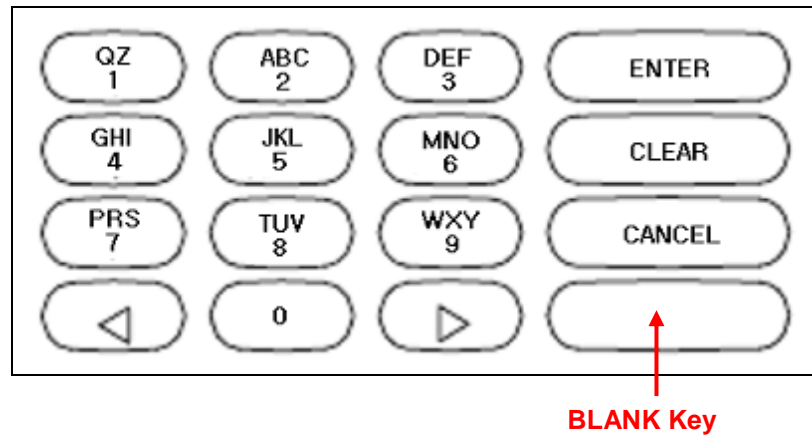

<Note!>

TEST COUNT affects when testing **RECEIPT PRINTER, CASH DISPENSER, and MODEM.**

CASE

1. If you input test count '0', the test count will be "UNLIMIT"
2. If you input test count 10, the test will perform 10 times.
3. If you cancel a test and then perform same test, the test count will be continue.
 - e.g. If you cancel a test when the tested count is 3, and then perform same test, the tested count starts at 3.
4. If you cancel a test and then perform another test, the test count will be initialized.
 - e.g. If you cancel a test when the tested count is 3, and then perform another test, the tested count starts at 0.

INITIALIZE

- ▶ The **INITIALIZE** has the function of resetting each unit of the ATM. If an error occurs while executing, the system will stop and display an error code. Confirm the detailed error description in the ERROR CODE of REPORT MENU.

Accessing the INITIALIZE

1. Select **DIAGNOSTICS** in the OPERATOR FUNCTION
2. Select the **INITIALIZE** in the DIAGNOSTICS menu. All units will be initialized.
3. When the ATM is in the normal state, the SUCCESS message will be displayed.

RECEIPT PRINTER

- ▶ The **RECEIPT PRINTER** has the function of printing a sample receipt and cutting out one receipt. If an error occurs while executing, the system will stop and display an error code. Confirm the detailed error description in the **ERROR CODE** of **REPORT MENU**.

Accessing the RECEIPT PRINTER

1. Select **DIAGNOSTICS** in the **OPERATOR FUNCTION**.
2. Select the **RECEIPT PRINTER** in the **DIAGNOSTICS** menu. Test String will be printed from the receipt printer.
3. When the ATM is in the normal state, the **SUCCESS** message will be displayed.

CASH DISPENSER


- ▶ The **CASH DISPENSER** has the function of testing the dispense mechanisms. This function will dispense one note from the cassette and dump into the reject bin. If an error occurs, the system will stop and display an error code. Confirm the detailed error description in the ERROR CODE of REPORT MENU

Accessing the CASH DISPENSER

1. Select **DIAGNOSTICS** in the OPERATOR FUNCTION.
2. Select the **CASH DISPENSER** in the DIAGNOSTICS menu. The **CASH DISPENSER** test will be performed.
3. When the ATM is normal state, the SUCCESS message will be displayed.

MODEM

- ▶ The **MODEM** has the function of testing the modem for any errors. Input the desired PHONE NUMBER, then press **ENTER** Key for TEST DIAL. This function is used to check the function of the modem dial.

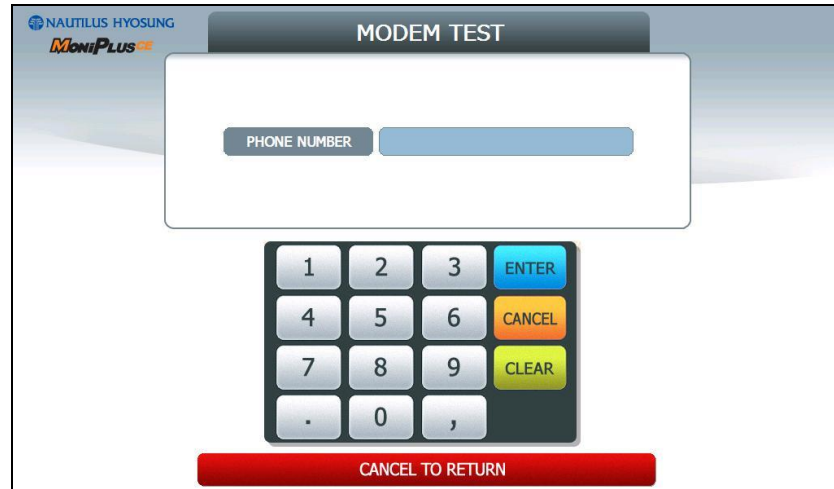

Accessing the MODEM

1. Select **DIAGNOSTICS** in the OPERATOR FUNCTION.
2. Select the **MODEM** in the DIAGNOSTICS menu.
3. The MODEM TEST will be displayed.

TCP/IP

- ▶ The **TCP/IP** has the function of testing the TCP/IP for any errors. Input the desired **HOST ADDRESS**, **HOST PORT**, **SSL OPTION** and **SSL VERSION**, then select **CONNECT** for line test. This function is used to check the function of the TCP/IP.

The screenshot shows the 'TCP/IP' configuration screen. The interface includes a logo for 'NAUTILUS HYOSUNG MoniPlus' in the top left. The main area contains several input fields and buttons. On the left side, there are four buttons labeled 'HOST ADDRESS', 'HOST PORT', 'SSL EN/DISABLE', and 'SSL VERSION'. The central area has five input fields: 'HOST ADDRESS' (150.11.5.195), 'HOST PORT' (31702), 'SSL OPTION' (DISABLE), 'SSL VERSION' (VERSION 23), and a red 'CANCEL TO RETURN' button at the bottom. On the right side, there is a 'CONNECT' button.

Accessing the TCP/IP

1. Select **DIAGNOSTICS** in the OPERATOR FUNCTION.
2. Select the **TCP/IP** in the DIAGNOSTICS menu.
3. The TCP/IP menu will be displayed.

CARD SCAN (NH DIP)

- ▶ The **CARD SCAN** has the function of testing the magnetic stripe reader and the card itself.

The screenshot displays the 'CARD SCAN' interface. At the top left, the logo for 'NAUTILUS HYOSUNG MoniPlus' is visible. The title 'CARD SCAN' is centered at the top. The main area contains three identical data entry sections for ISO1, ISO2, and ISO3. Each section has a label 'ISO' followed by a text input field, and a 'LEN' label with a numeric input field set to '0'. At the bottom center, there is a red button labeled 'CANCEL TO RETURN'.

Accessing the CARD SCAN

1. Select **DIAGNOSTICS** in the OPERATOR FUNCTION.
2. Select **CARD SCAN** in the DIAGNOSTICS menu. And if the display is ready, please insert and remove the card quickly.
3. The card data will be displayed.

CARD SCAN (NH EMV, NH EMV2)

- ▶ The **CARD SCAN** has the functions for testing both the magnetic stripe reader and IC reader.

NAUTILUS HYOSUNG
MoniPlus

MCU TEST

INSERT CARD BEFORE PRESS TEST BUTTON

ISO1	
LEN	0
ISO2	
LEN	0
ISO3	
LEN	0
ATR DATA	


IC TEST CANCEL TO RETURN CARD SCAN

Accessing the CARD SCAN AND IC TEST

1. Select **DIAGNOSTICS** in the OPERATOR FUNCTION.
2. Select **CARD SCAN OR IC TEST** in the DIAGNOSTICS menu. And if the display is ready, please insert and remove the card quickly only in case of magnetic card. However, in case of testing IC card, insert and do not remove the card..
3. The card data will be displayed.


AUXILIARY UNIT

- ▶ This **AUXILIARY UNIT** contains **SENSOR**, **FLICKER**, **MoniVision** and **RFID CARD SCAN**. Please press each button on this menu to go to the next screen. To go back to the previous screen, press the **CANCEL** key in pinpad.

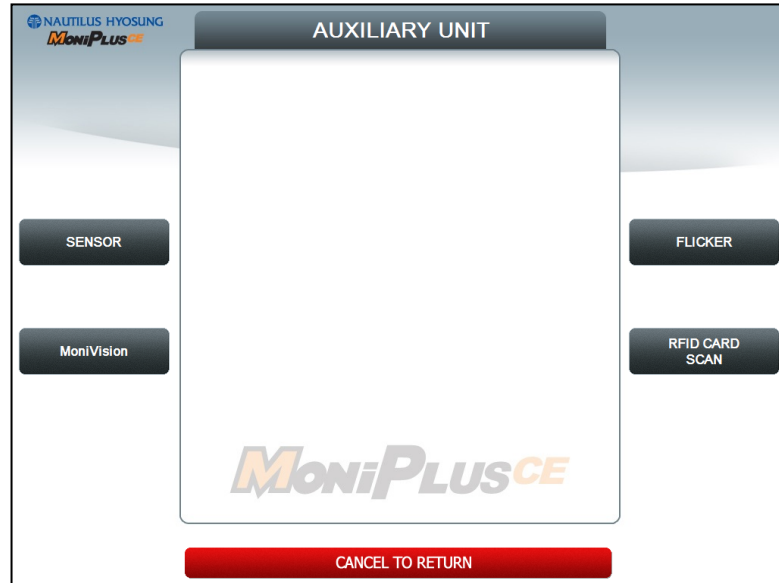

SENSOR

- ▶ This **SENSOR** contains **CDU SENSOR** and **SPR SENSOR**. Please press each button on this menu to go to the next screen. To go back to the previous screen, press the **CANCEL** key in pinpad.

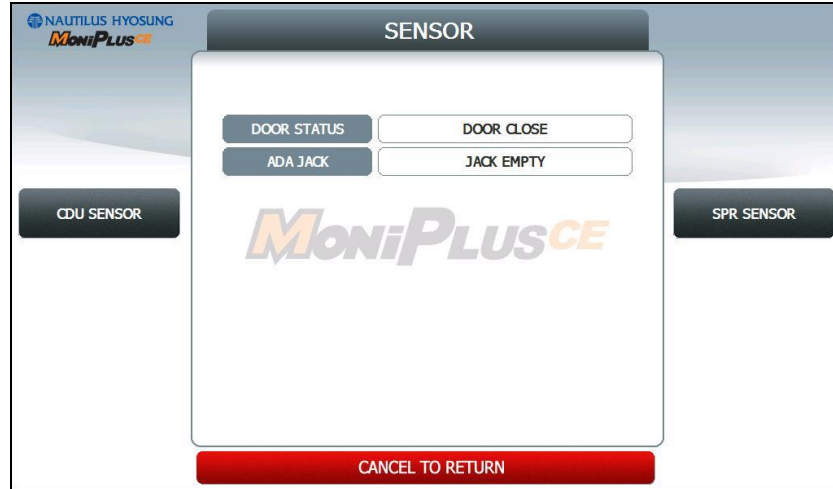

The **SENSOR** has the function of testing if all the sensors are in proper working condition.


The sensors are tested by turning the sensors on and off.

Accessing the SENSOR


1. Select **DIAGNOSTICS** in the OPERATOR FUNCTION.
2. Select **AUXILIARY UNIT** in the DIAGNOSTICS menu and then select **SENSOR** in the AUXILIARY menu.
3. DOOR STATUS and ADA JACK data will be displayed on the center. If you want to see the **CDU SENSOR** or **SPR SENSOR**, then press the button in each.

CDU SENSOR

- ▶ The **CDU SENSOR** has the function of testing if all the sensors are in proper working condition. The sensors are tested by turning the sensors on and off. If any sensor is normal, the sensor will be displayed as **GREEN COLOR**. And if any sensor detects an object or is abnormal, the sensor will be displayed as **RED COLOR**. Moreover, if any sensor doesn't exist, the sensor will not be displayed.

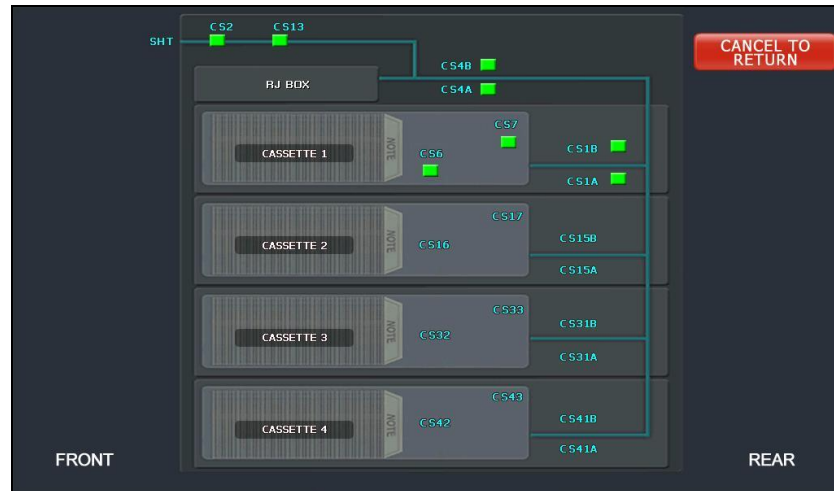

[The screen except for MX4000W]

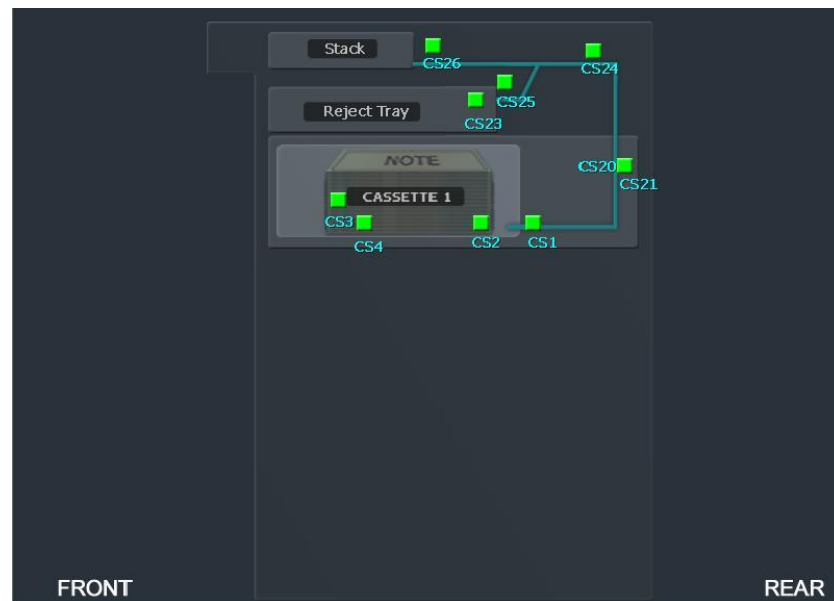


[The screen for MX4000W]

Accessing the SENSOR


1. Select **DIAGNOSTICS** in the OPERATOR FUNCTION.
2. Select **AUXILIARY UNIT** in the DIAGNOSTICS menu
3. Select **SENSOR** in the **AUXILIARY** menu and then select **CDU SENSOR** in the **SENSOR** menu.

SPR SENSOR (except for 4000W)

- ▶ The **SPR SENSOR** has the function of testing if all the sensors are in proper working condition. The sensors are tested by turning the sensors on and off. If any sensor is normal the sensor will be displayed as **GREEN COLOR**. And if any sensor detects an object or is abnormal, the sensor will be displayed as **RED COLOR**. Moreover, if any sensor doesn't exist, the sensor will not be displayed.

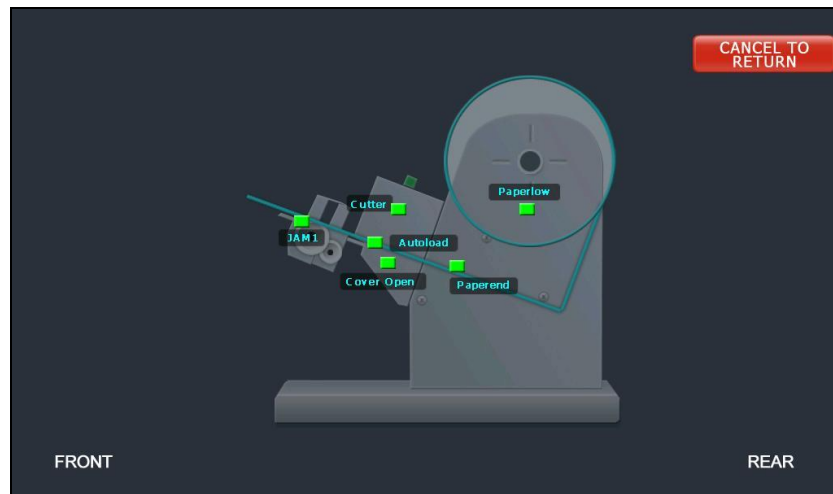

[The screen except for MX4000W]

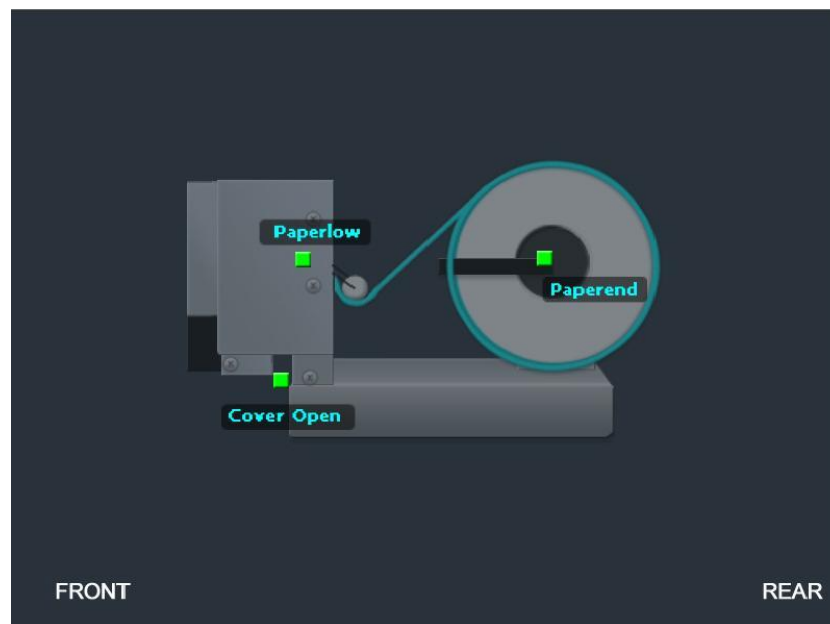


[The screen for MX4000W]

Accessing the SENSOR


1. Select **DIAGNOSTICS** in the OPERATOR FUNCTION.
2. Select **AUXILIARY UNIT** in the DIAGNOSTICS menu
3. Select **SENSOR** in the **AUXILIARY** menu and then select **SPR SENSOR** in the **SENSOR** menu.

FLICKER

- ▶ This **FLICKER** contains **ALL FLICKER SENSOR**, **EPP FLICKER**, **CDU FLICKER**, **SPR FLICKER** and **MCU FLICKER**. Please press each button on this menu to change test mode ON, OFF or FLICKING.

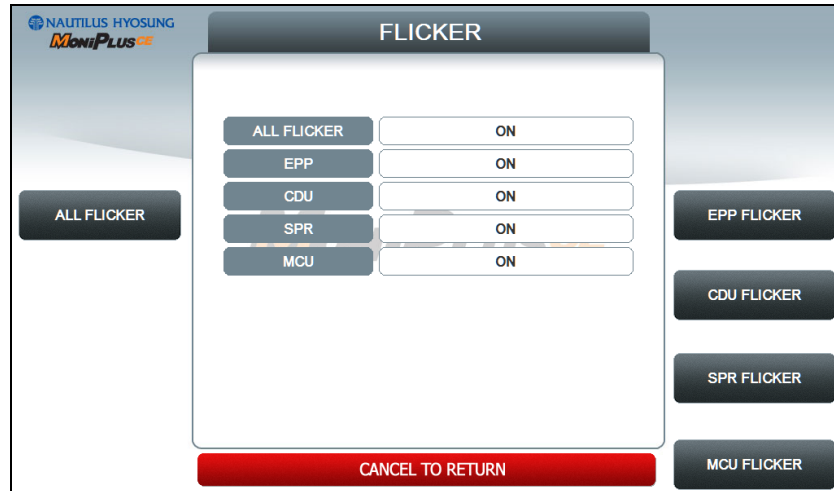


In MX4000W, there are no flickers attached to **SPR**, **MCU**. So 'N/A' would be displayed on the screen corresponding to the blank of **SPR**, **MCU**.

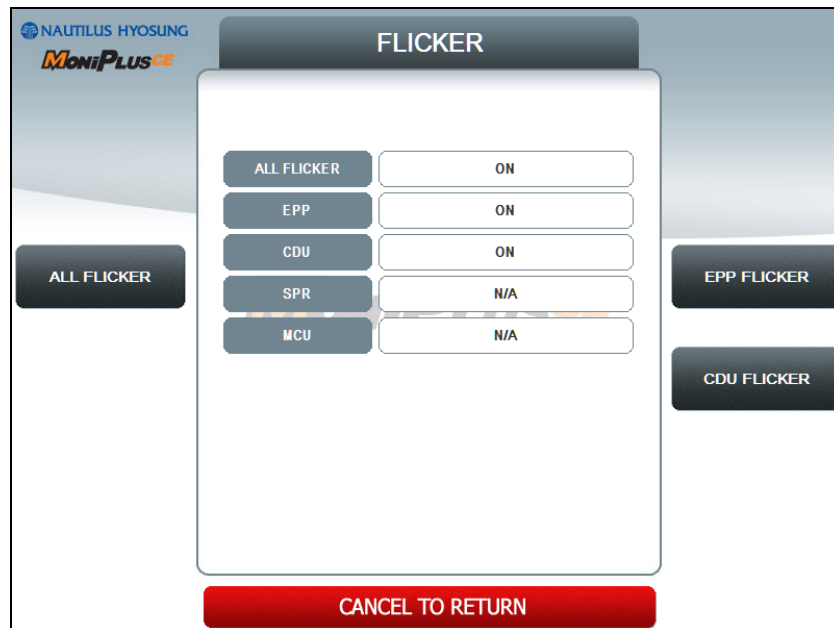

[Screen for MX4000W]

MX5000SE has no flicker attached to **CDU**. Therefore the value of **CDU** would be 'N/A'.

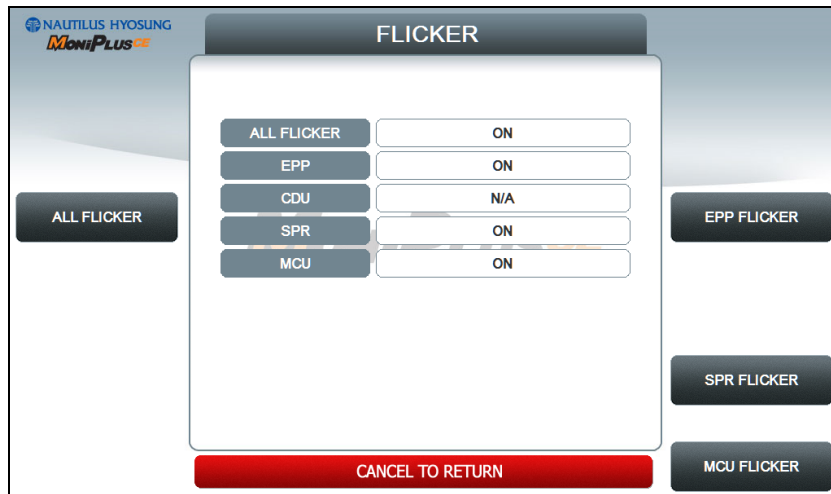


[Screen for MX5000SE]

NH-2600 has HALO LED and one flicker attached to MCU. To test the HALO LED, press each button of left side of the screen. You can test led mode and led color via these buttons.


- **HALO LED MODE** SOLID, FADE, FLICKING
- **HALO LED COLOR** CYAN, BLUE, YELLOWGREEN,
WHITE, GREEN, PINK

To check the MCU flicker, press the MCU FLICKER button of right side of the screen.

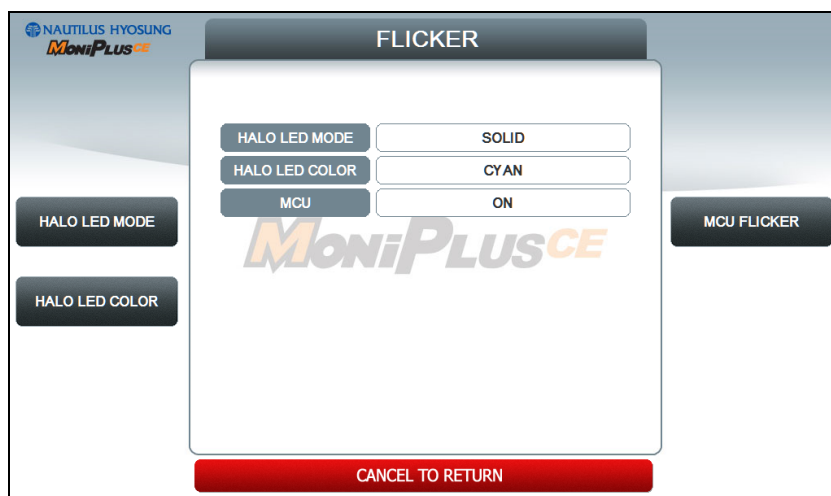

[Screen for NH-2600]

MX-2600SE has no flickers attached to **MCU** and **EPP**. Therefore values of **MCU** and **EPP** would be 'N/A'. In addition, you can set **EPP LED GUIDE** here that is attached to MX-2600SE.

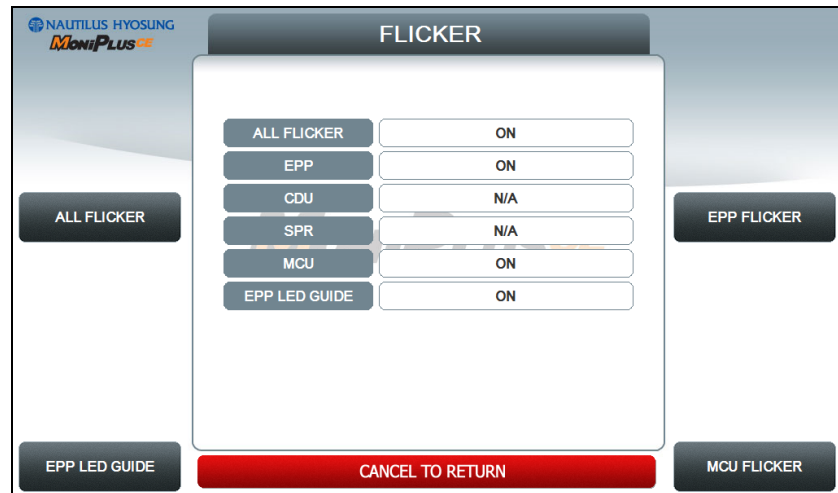

[Screen for MX-2600SE]

To go back to the previous screen, press the **CANCEL** key in pinpad.

Accessing the FLICKER

1. Select **DIAGNOSTICS** in the OPERATOR FUNCTION.
2. Select **AUXILIARY UNIT** in the DIAGNOSTICS menu and then select **FLICKER** in the **AUXILIARY** menu.
3. Select the button you want to test.

MoniVision

- ▶ **MoniVision** is the menu for testing camera.



Camera Preview will be shown on the middle of screen when camera is available.

Accessing MoniVision

1. Select **DIAGNOSTICS** in the OPERATOR FUNCTION.
2. Select **AUXILIARY UNIT** in the DIAGNOSTICS menu.
3. Select **MoniVision** in the AUXILIARY UNIT menu.
4. The preview will be displayed.

<Note!>

MoniVision is only available for MX2800SE.

RFID CARD SCAN

- ▶ **RFID CARD SCAN** is the menu for testing RFID reader.

The screenshot shows the 'RFID CARD SCAN' menu. At the top left is the 'NAUTILUS HYOSUNG MoniPLUS' logo. The title 'RFID CARD SCAN' is centered at the top. Below the title is the instruction 'TOUCH THE CARD ON RFID'. The interface contains three rows of input fields. Each row has a label (ISO1, ISO2, ISO3) and a 'LEN' field with the value '0'. A red button labeled 'CANCEL TO RETURN' is located at the bottom center.

Accessing the RFID CARD SCAN

1. Select **DIAGNOSTICS** in the OPERATOR FUNCTION.
2. Select **AUXILIARY UNIT** in the DIAGNOSTICS menu.
3. Select **RFID CARD SCAN** in the AUXILIARY UNIT menu. And if the display is ready, please contact your card to RFID reader.
4. The card data will be displayed.

AGING


- ▶ The AGING function is only used at the factory.

Accessing the AGING

1. Select **DIAGNOSTICS** in the OPERATOR FUNCTION.
2. Select **AGING** in the **DIAGNOSTICS** menu.
3. All units will be tested unlimitedly. When you press **CANCEL** key, the testing will be stopped.

ANTI SKIMMING (NH EMV only)


- ▶ The **ANTI SKIMMING** has the functions for testing anti skimming board added to card reader.

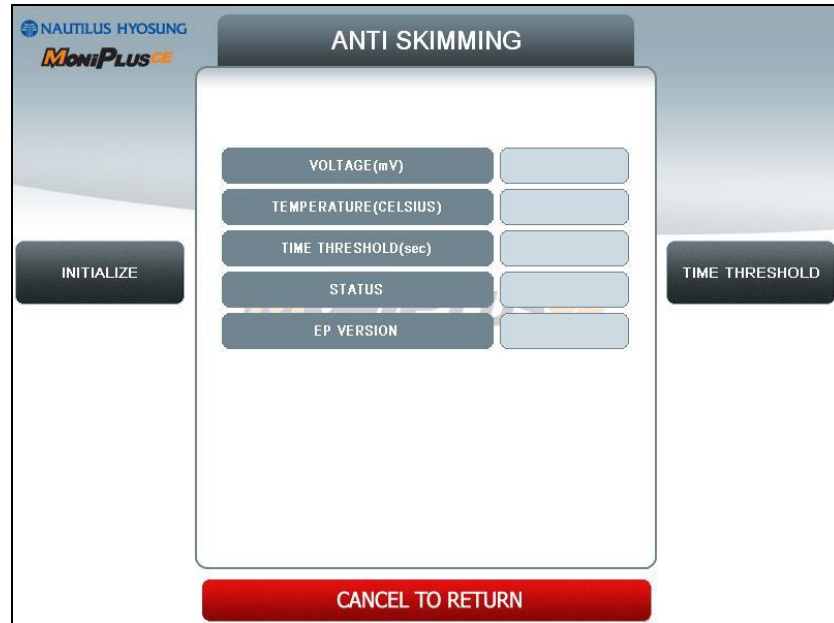**Accessing the CARD SCAN AND IC TEST**

1. Select **DIAGNOSTICS** in the OPERATOR FUNCTION.
2. Select **ANTI SKIMMING** in the DIAGNOSTICS menu. And if the display is ready, the screen would show you what is going on inside anti skimming board
3. **INITIALIZE** button will make the anti skimming board initialized.
4. **TIME THRESHOLD** button would be used to test the time interval of detecting metal stuff attached to card reader. If you set threshold time as 10 sec, the anti skimming board will send the detection signal to SW to notify it after 10 sec. passes by.

3.5 CUSTOMER SETUP


- ▶ This customer setup menu contains **CHANGE MESSAGE**, **BIN LIST**, **OPTIONAL FUNCTION1**, **OPTIONAL FUNCTION2**, **SURCHARGE MODE**, **ADVERTISEMENT**, **STANDARD3 OPTION** and **SELECT PROCESSOR**. Please press each button on this menu to go to the next screen. To go back to the previous screen, press the **CANCEL** key in pinpad.

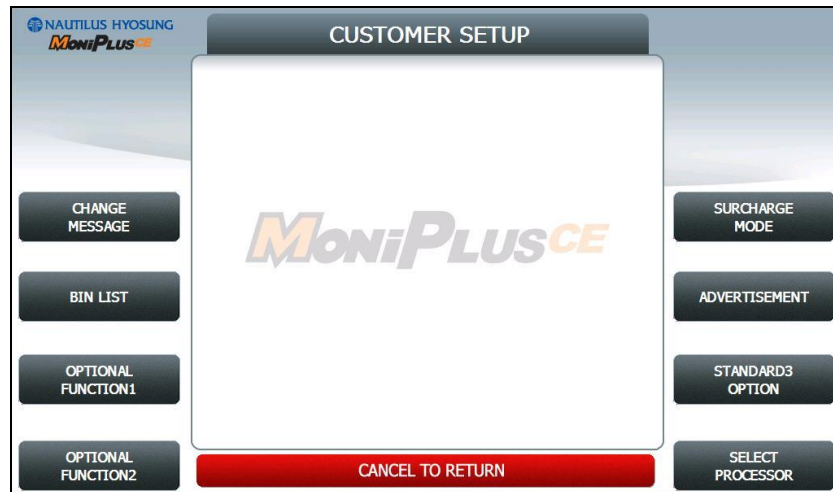

[STANDARD 3]

<Note!>

STANDARD3 OPTION is displayed only if the message format is STANDARD3

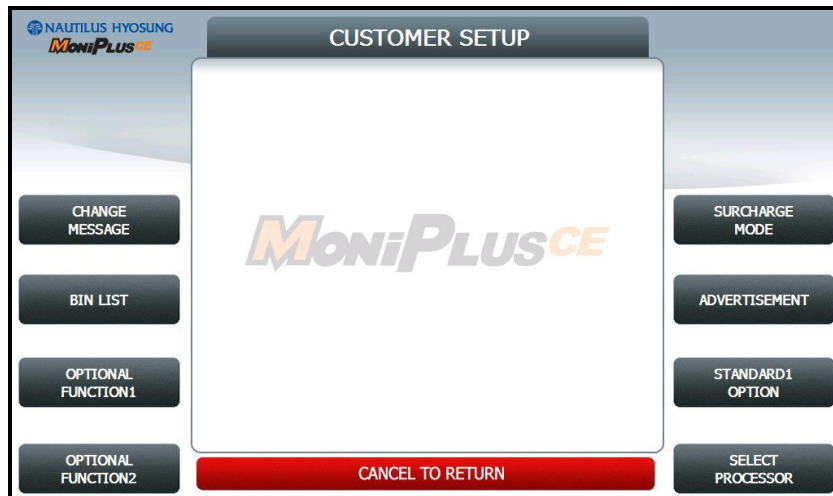


[STANDARD 1, 2, EPS]

<Note!>

STANDARD1 OPTION is displayed only if the message format is STANDARD1

CHANGE MESSAGE

- ▶ **CHANGE MESSAGE** menu has each of 8 sub menus. The displayed menu depends on which country uses. If you press the **WELCOME MESSAGE** button, the current display will be changed into the **WELCOME MESSAGE**. If you press the **EXIT MESSAGE** button, you can change the message on Exit Screen. And you can change the message in the **RECEIPT**. If you press the **RECEIPT HEADER** button, the current display will be changed into the **RECEIPT HEADER**. And you can set the receipt header message in the **RECEIPT**, If you press the **RECEIPT TAIL** button, the current display will be changed into the **RECEIPT TAIL**. And you can set the receipt tail message in the **RECEIPT**. If you press the **RECEIPT ADDRESS & PHONE NUMBER** button, it will be changed the **RECEIPT ADDRESS & PHONE NUMBER** display. You can set the information about **ADDRESS** and **PHONE NUMBER** in the **RECEIPT**. At last, the display can go back to the previous menu by pushing the **CANCEL** key in pinpad

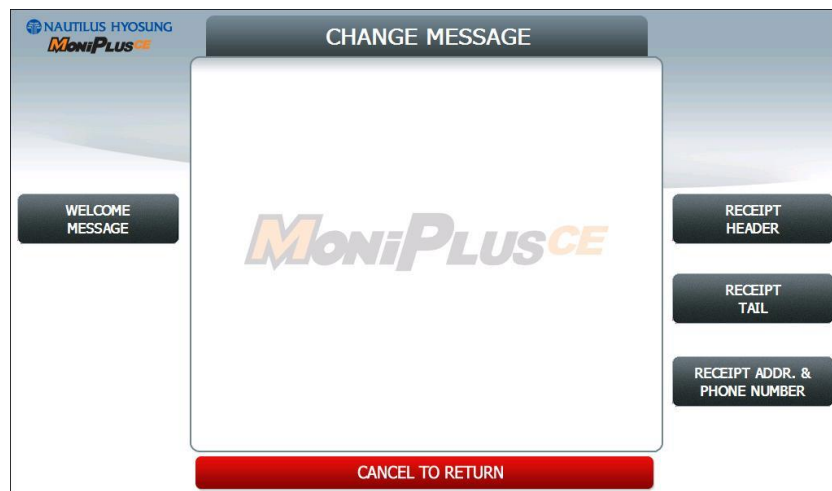

Refer to figure of the Sample Receipt below for the location of the messages. The default receipt format will not include any messages. Spanish transactions will be printed in English.

TRANSACTION RECORD	
<i>— Customer Copy —</i>	
<i>Thank You For Using Us !!!</i>	
<u>RECEIPT ADDRESS 1</u>	
<u>RECEIPT ADDRESS 2</u>	
<u>RECEIPT ADDRESS 3</u>	
<u>RECEIPT PHONE NUMBER</u>	
<u>RECEIPT HEADER 1</u>	
<u>RECEIPT HEADER 2</u>	
TERMINAL #	= NH2700
SEQUENCE #	= 0001
AUTH #	= 120524 90
DATE & TIME	= 05/10/2010 13:27:05
BUSINESS DATE	= 05/10/2010
CARD NUMBER	= *****8444
TRANSACTION	= WITHDRAWAL
ACCOUNT	= FROM CHECKING


DISPENSED AMOUNT =	\$20.00
REQUESTED AMOUNT =	\$20.00
SURCHARGE AMOUNT =	\$1.50
TOTAL AMOUNT =	\$21.50
LEDGER BALANCE =	\$3,567.80
AVAILABLE BALANCE =	\$3,567.80
SURCHARGE PAID TO:	
OWNER	

APPROVED	
<u>RECEIPT TAIL</u>	
SEQ.#: 0354	JNL.#: 0008


Location of Messages on Receipt

WELCOME MESSAGE

- ▶ The **WELCOME MESSAGE** function is used to edit the welcome text. Please input the welcome message in the field and select **OK** button. If it succeeded, **“OPERATION SUCCESSFUL!”** displays

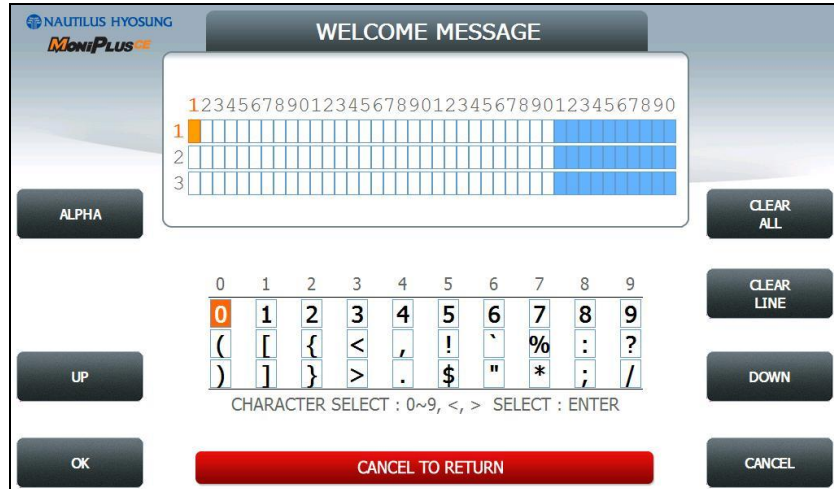


[Function Key Type]

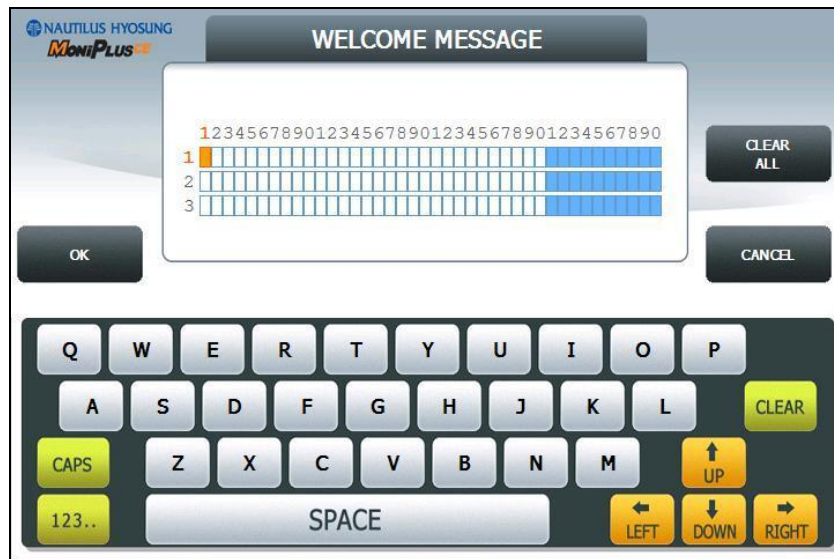


[Touch Type]

RECEIPT HEADER

- ▶ The **RECEIPT HEADER** function is used to edit the message at the header of receipt. Please input the receipt header in the field and select **OK** button. If it succeeded, “**OPERATION SUCCESSFUL!**” displays.

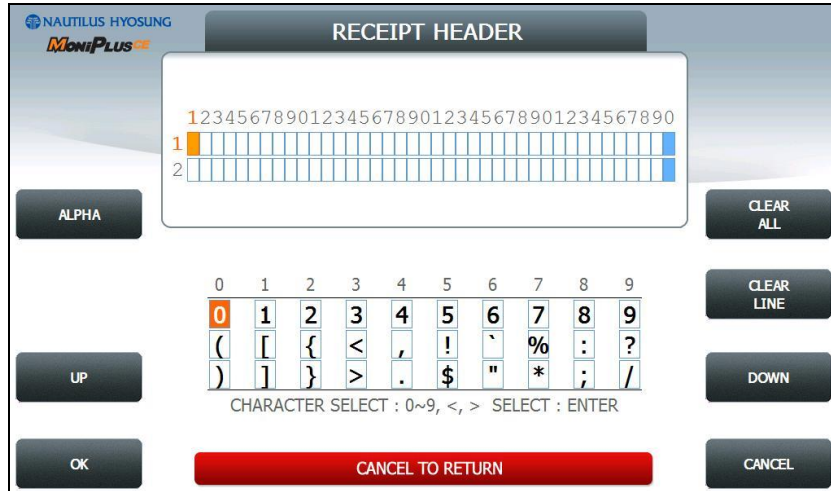


[Function Key Type]

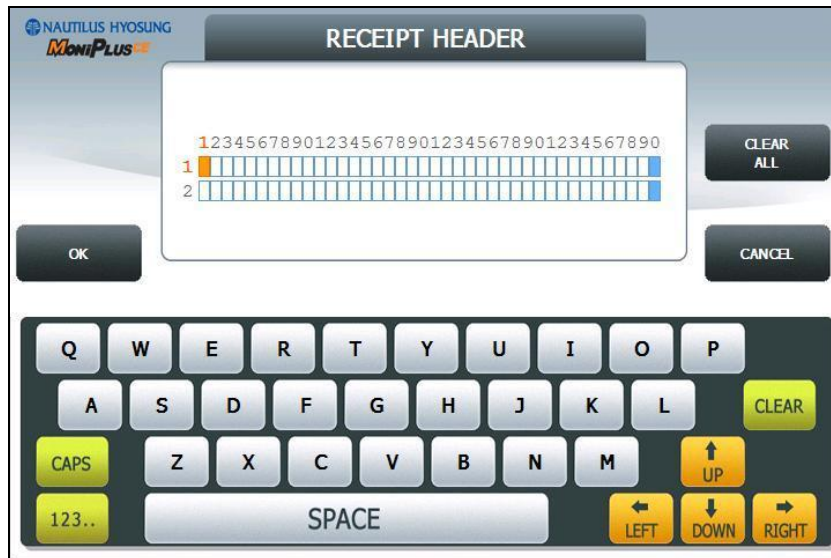


[Touch Type]

RECEIPT TAIL

- ▶ The **RECEIPT TAIL** function is used to edit the message at the tail of receipt. Please input the receipt tail in the field and select **OK** button. If it succeeded, **“OPERATION SUCCESSFUL!”** displays.

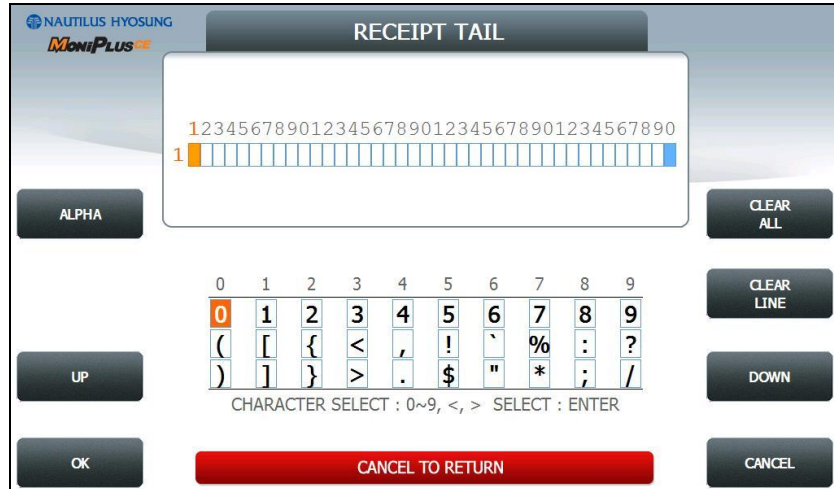


[Function Key Type]

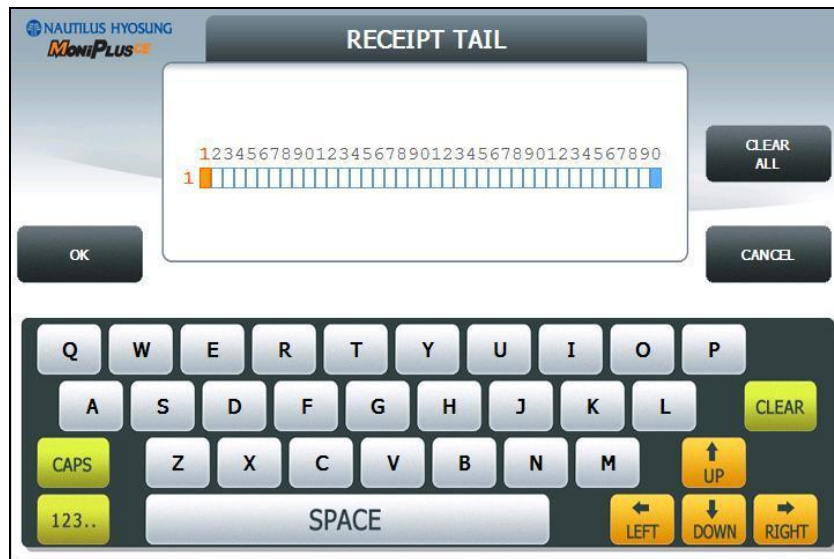


[Touch Type]

RECEIPT ADDRESS & PHONE NUMBER

- ▶ The **RECEIPT ADDRESS & PHONE NUMBER** function is used to edit the message at the address & phone number of receipt.
Please input the receipt address & phone number in the field and select **OK** button. If it succeeded, "**OPERATION SUCCESSFUL!**" displays.

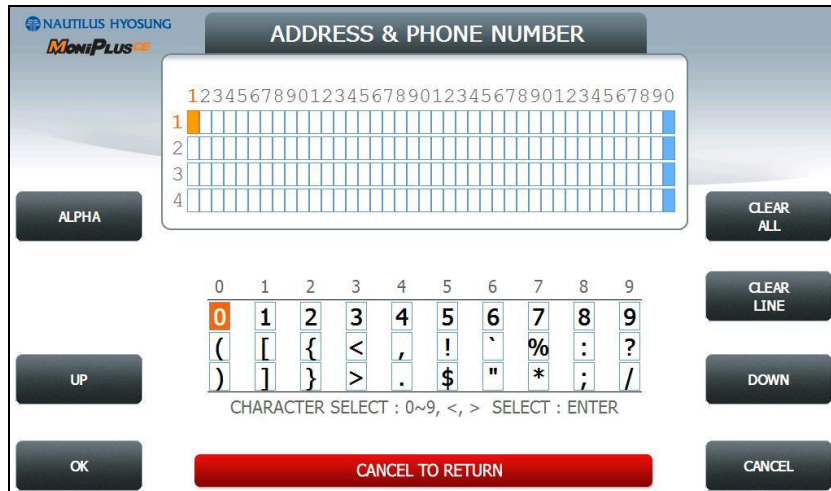

[Function Key Type]

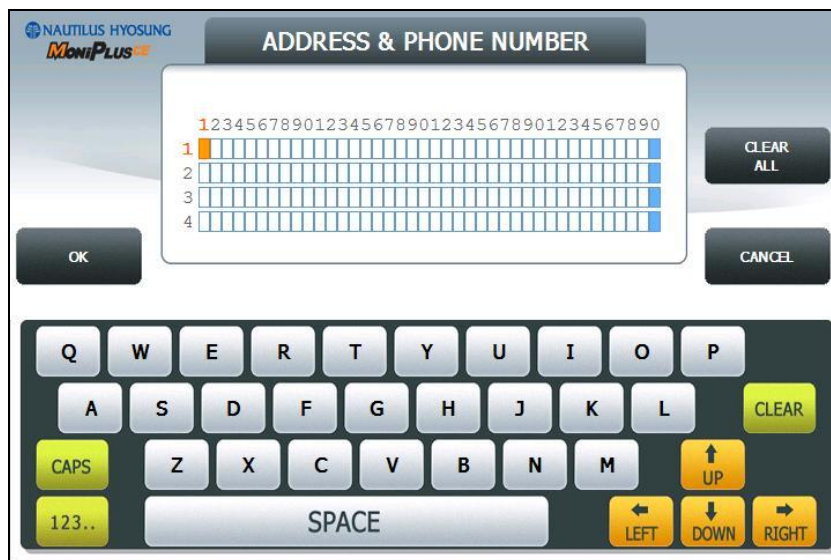

[Touch Type]

BIN (Bank Identification Number) LIST

- ▶ The **BIN LIST** is used to register the bank identification number. When the cardholders make transaction with the given BIN code, ATM doesn't request any additional fee. However, it is necessary to confirm whether it would be uses or not
You can input and edit it by using such as **ADD, DELETE, EDIT, DELETE ALL** button.
Please press **EXTENDED BIN LIST** button on this menu to see the Extended Bin List.
To go back to the previous screen, press the **CANCEL** key in pinpad.

NAUTILUS HYOSUNG
MoniPlus

BIN LIST

TOTAL COUNT: 1

INDEX	BIN	INDEX	BIN
01	1234567890	11	
02		12	
03		13	
04		14	
05		15	
06		16	
07		17	
08		18	
09		19	
10		20	

EXTENDED BIN LIST

ADD

EDIT


CANCEL TO RETURN

DELETE

DELETE ALL


EXTENDED BIN LIST

- ▶ **EXTENDED BIN LIST** menu show the BIN LIST. This function support additional 3,000 BIN LIST exclusive of the basic 20 BIN LIST. Use **PREV** or **NEXT** button to show BIN LIST before or after. You can change EXTENDED BIN LIST via **FILE UPDATE** using RMS or USB. To go back to the previous screen, press the **CANCEL** key in pinpad.

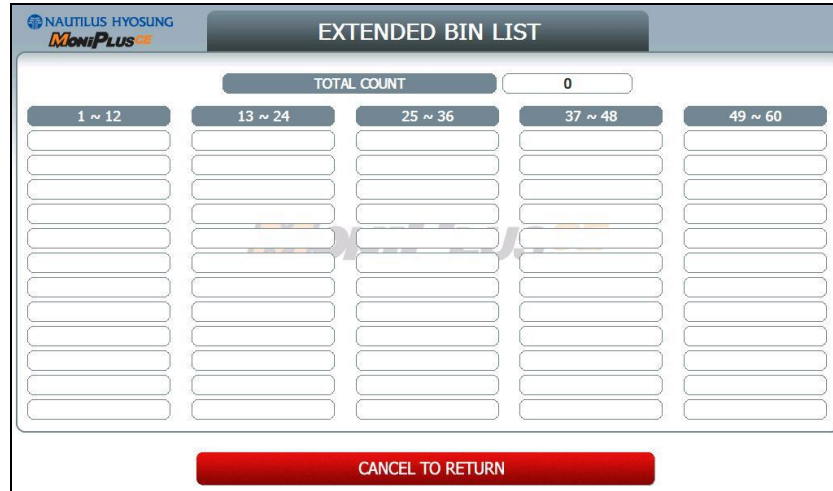

OPTIONAL FUNCTION1 (Except for IC card readable card reader)


- **OPTIONAL FUNCTION1** menu contains **MOD 10 CHECK**, **BALANCE AT START**, **ACCOUNTS**, **RECEIPT OPTION**, **PRE DIALING** and **EMV**. Please press each button on this menu to go to next screen.
To go back to the previous screen, press the **CANCEL** Key in pinpad.

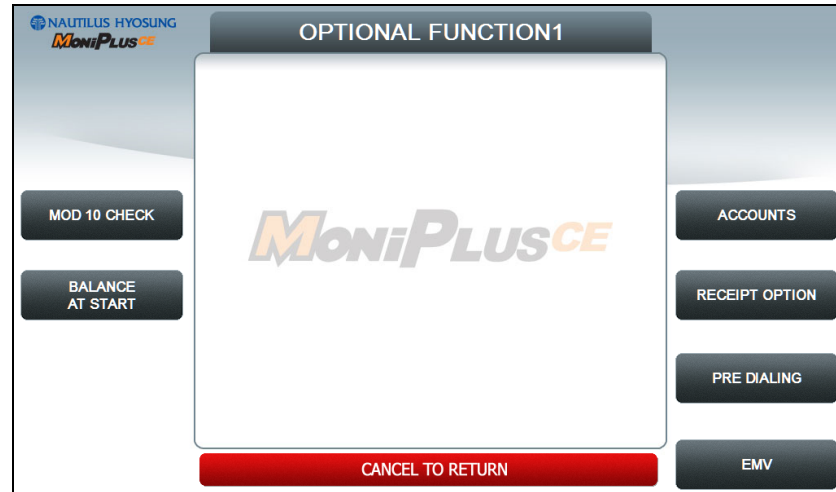**<Note!>**

1. **PRE DIALING** is available only when the current network is Dial-up.
2. **BALANCE AT START** is supported in some specific countries only.

MOD 10 CHECK


- ▶ **MOD 10 CHECK** is to check the card data's validation.
Please press **EN/DISABLE** button to set up **MOD 10 CHECK**.

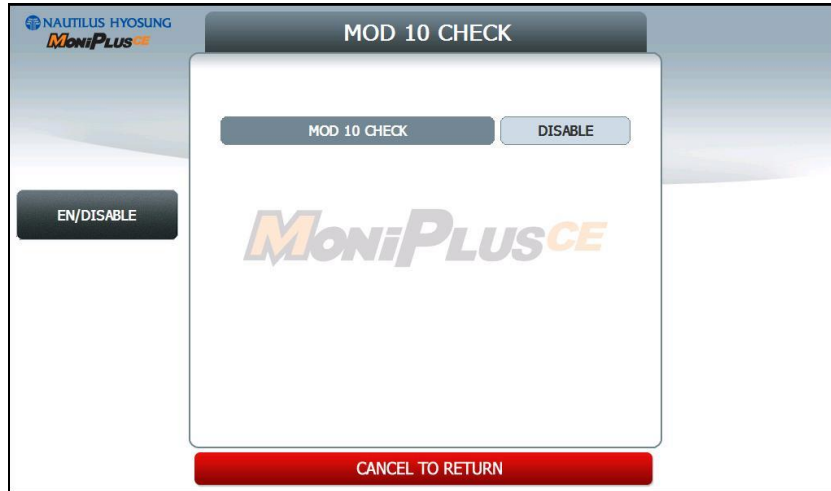

BALANCE AT START

- ▶ If **BALANCE AT START** is enabled, the screen with which a customer can check his/her balance will be inserted into the normal transaction flow.


Please press **EN/DISABLE** button to set up **BALANCE AT START** and **CONTINUE**.
EN/DISABLE button to set up whether it'll **CONTINUE** the **TRANSACTION** after **BALANCE AT START**.

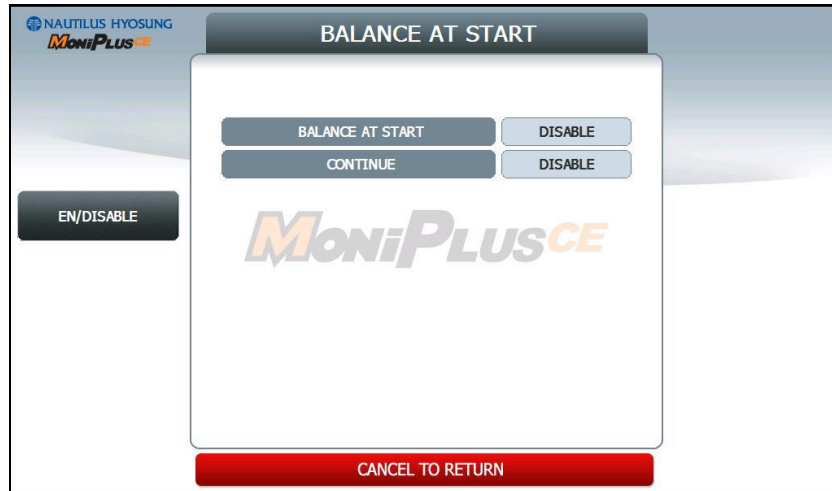

ACCOUNTS

- ▶ **ACCOUNTS** is to set up the accounts which is used on transaction. You can see CHECKING ACCOUNT, SAVINGS ACCOUNT and CREDIT CARD ACCOUNT. However, only **CREDIT CARD ACCOUNT** can be set up.


Please press **CREDIT CARD EN/DISABLE** button to set up **CREDIT CARD ACCOUNT**.

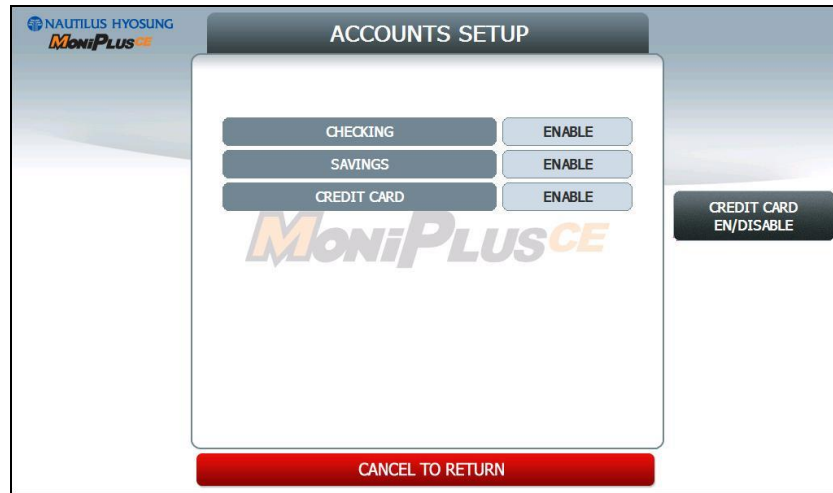

RECEIPT OPTION

- ▶ When **SELECT RECEIPT** is **ENABLED**, customers can select whether printing the receipt or not after a transaction.
If **SELECT RECEIPT** is **DISABLED**, the ATM will print out the receipt automatically without customer's selection.


To en/disable the function, press **SELECT RECEIPT** button.

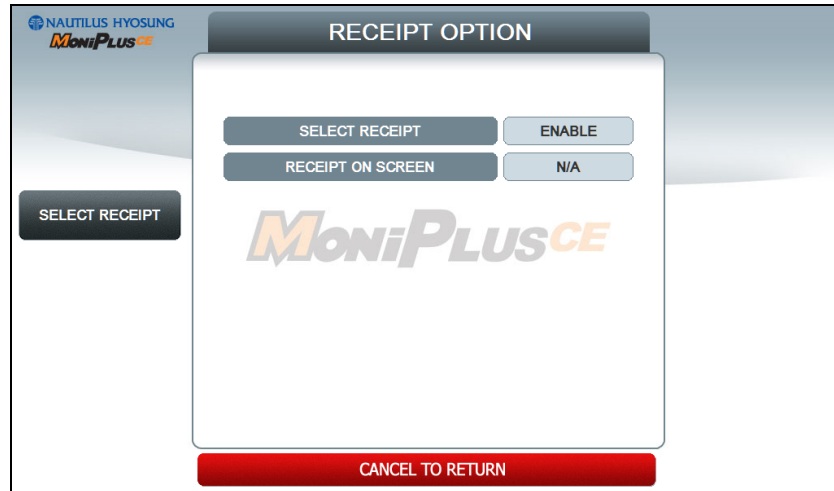

PRE DIALING


- ▶ **PRE DIALING** is a function to improve the performance speed of transaction by making a connection to the host server earlier than normal.

Please press **EN/DISABLE** button to set up **PRE DIALING** and one of three buttons (**AFTER CARD**, **AFTER PIN** and **AFTER ACCOUNT**) to determine the time when the ATM MACHINE makes a connection.

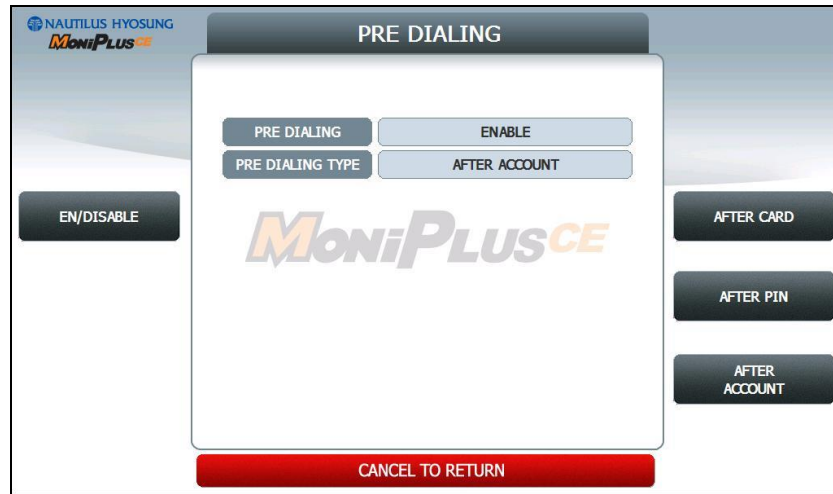

EMV (NH EMV, NH EMV2 and so forth, in case of IC card readable card reader)


- ▶ When the **EMV** button is pressed (or touched), the screen would be changed into the one as depicted below.

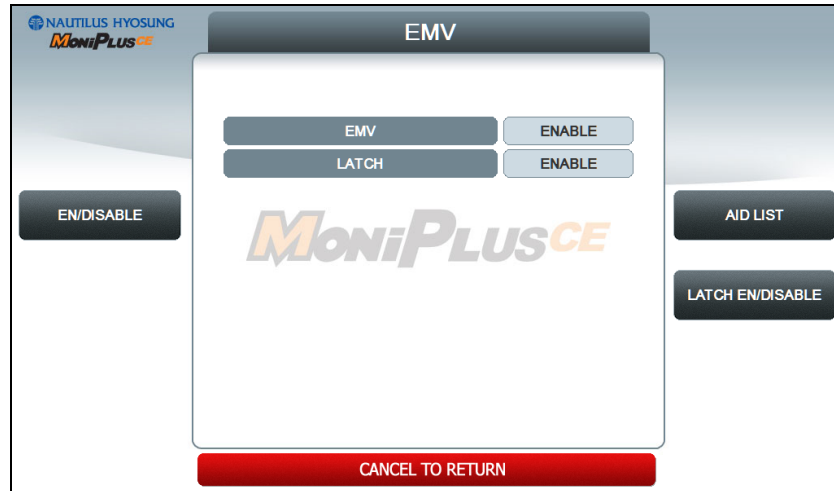

A supervisor can choose transaction type (**EMV** or magnetic card) and latch option using **EN/DISABLE** button. IC transaction will be unavailable when **EMV** option is disabled.

AID LIST


- ▶ If a supervisor of an ATM pushes (or touches) **AID LIST** button, the screen would be changed into the one as depicted as below.

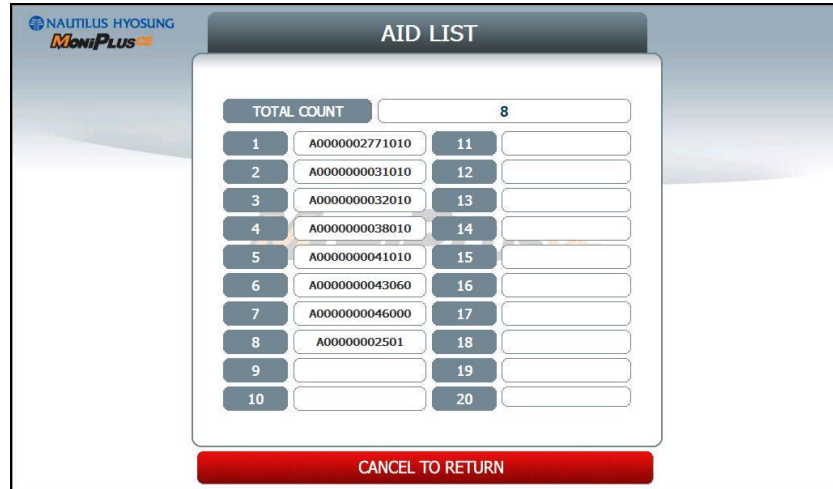

The AID is the abbreviation of 'Application ID' and it is needed in EMV transaction.


OPTIONAL FUNCTION2

- ▶ **OPTIONAL FUNCTION2** menu contains **DEVICE OPTION** and **SCREEN SERVICES**.
To go back to the previous screen, press the **CANCEL** Key in pinpad

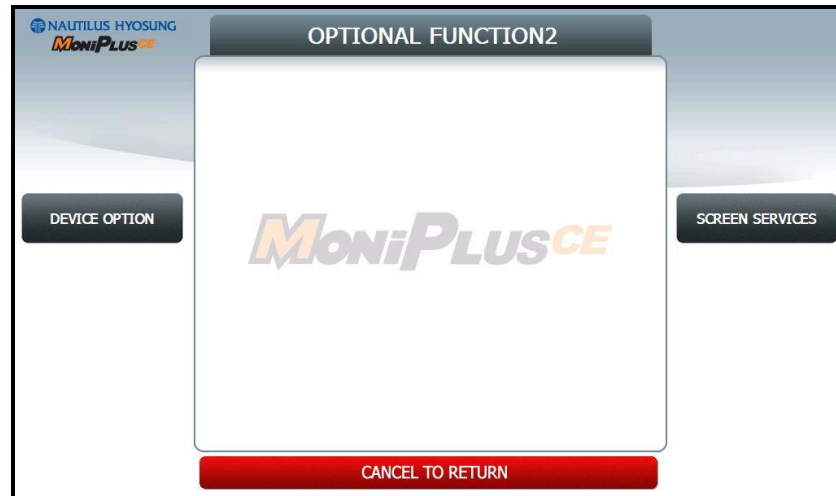

DEVICE OPTION

- **DEVICE OPTION** menu contains **RECEIPT PAPER LOW SENSOR EN/DISABLE**, **CST SOUND ON/OFF**, **EPP FLICKER ON OPTION** and **EPP LED GUIDE OPTION**. Please press each button on this menu to set up items.
To go back to the previous screen, press the **CANCEL** Key in pinpad

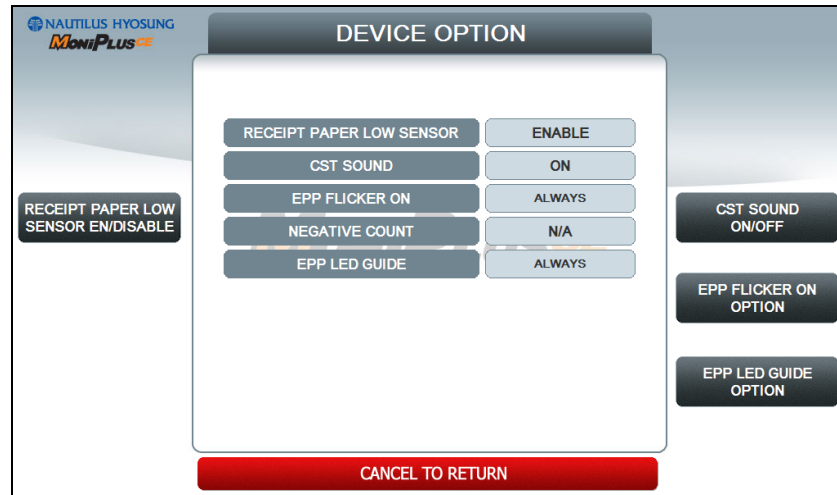**<Note!>**


EPP LED GUIDE OPTION is only available for MX2600SE.

SCREEN SERVICES

- ▶ **SCREEN SERVICES** menu contains **CHANGE BACKGROUND** and **NOTICE**


Please press **CHANGE BACKGROUND** and **NOTICE** button on this menu to go to next screen.

To go back to the previous screen, press the **CANCEL** Key in pinpad

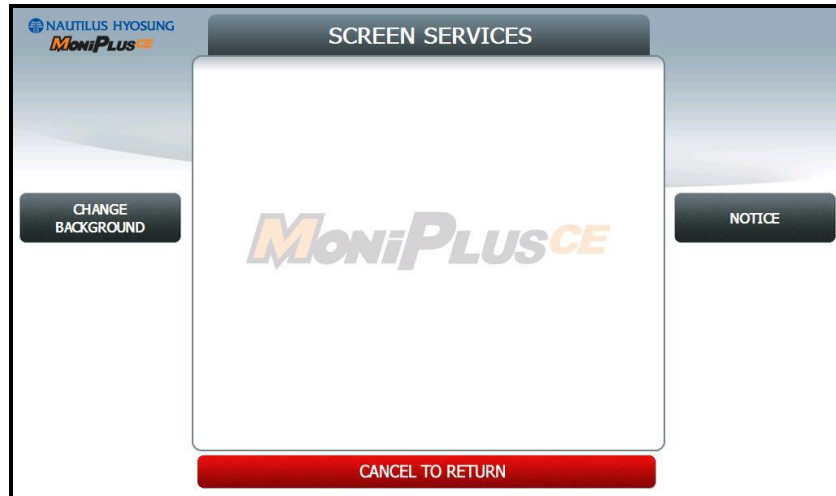


CHANGE BACKGROUND

- ▶ **CHANGE BACKGROUND** function provides **SIX** different Background screens. Please press **EN/DISABLE** button on this menu to set up for **CHANGE BACKGROUND**.
To go back to the previous screen, press the **CANCEL** Key in pinpad

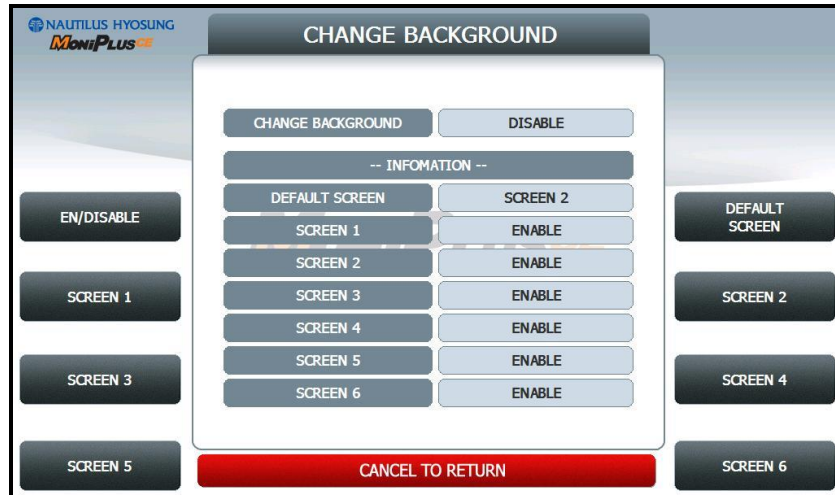

[DISABLED]

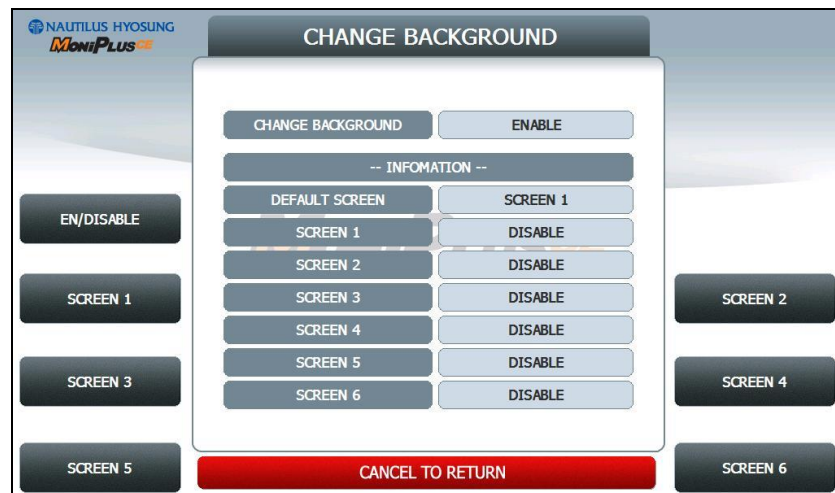


[ENABLED]

The change background image can be updated by SW Update with JPG format images. For more information, please refer to “**Background image Update Guide**” document.


CHANGE BACKGROUND SCREEN n

- ▶ Please press **SCREEN n EN/DISABLE** button to set up SCREEN n,

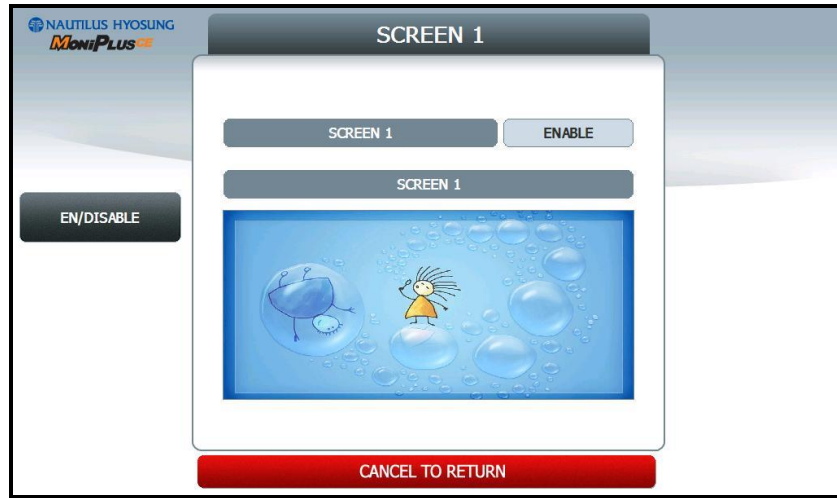


DEFAULT SCREEN

- ▶ **DEFAULT SCREEN** function provides **SIX** different Background screens.
You can set up only one screen on the six screens
Please press **DEFAULT SCREEN n EN/DISABLE** button to set up SCREEN n,

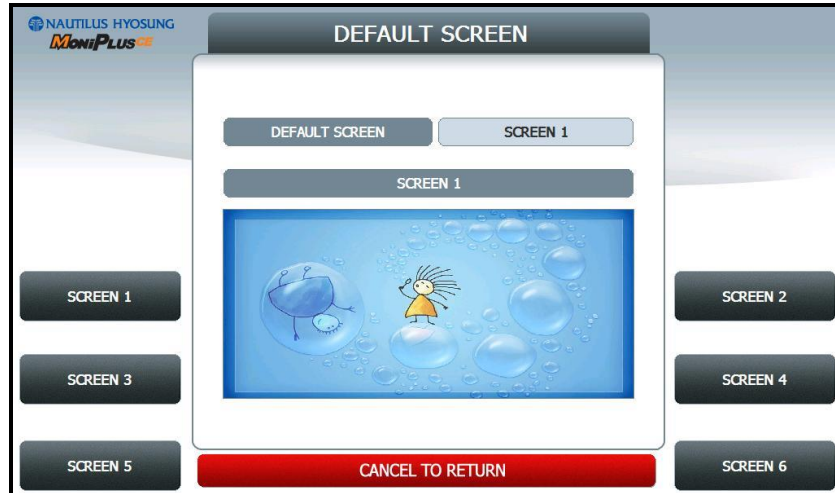


NOTICE

- ▶ **NOTICE** menu contains **TITLE** and **MESSAGE**.
You can set up **TITLE(1 line 30 column)** and **MESSAGE(3 line 40 column)**.
If you set up **NOTICE** ENABLE, ATM will be displayed notice information on idle screen.

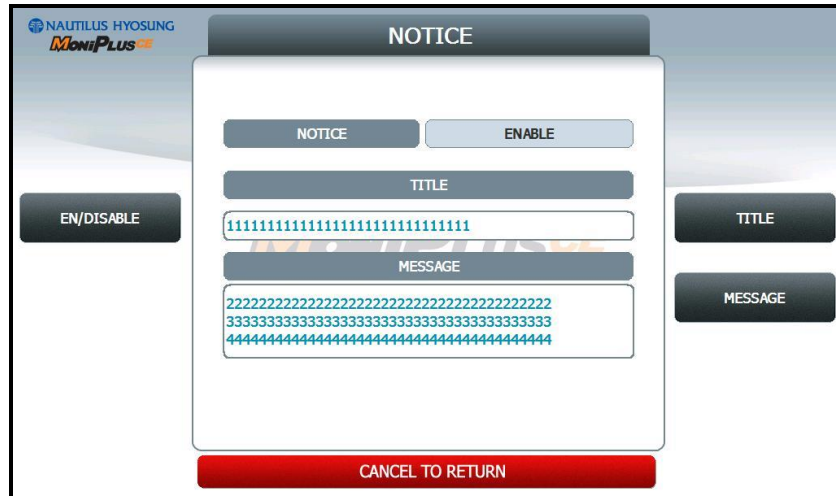


SURCHARGE MODE

- ▶ The **SURCHARGE MODE** contains the **EN/DISABLE** button for the surcharge warning screen and setting the surcharge amount and surcharge owner. When the **SURCHARGE MODE** is disabled and also if the data of card contains BIN number that was entered during installation, the surcharge warning message will not be displayed. When the **SURCHARGE MODE** is enabled, the **SURCHARGE OWNER and AMOUNT** will be displayed in the surcharge warning screen during transaction. The factory default is surcharge enabled, surcharge amount is \$1.50 and the surcharge owner is none. The additional surcharge can be set in **ADDITIONAL SURCHARGE MODE**.

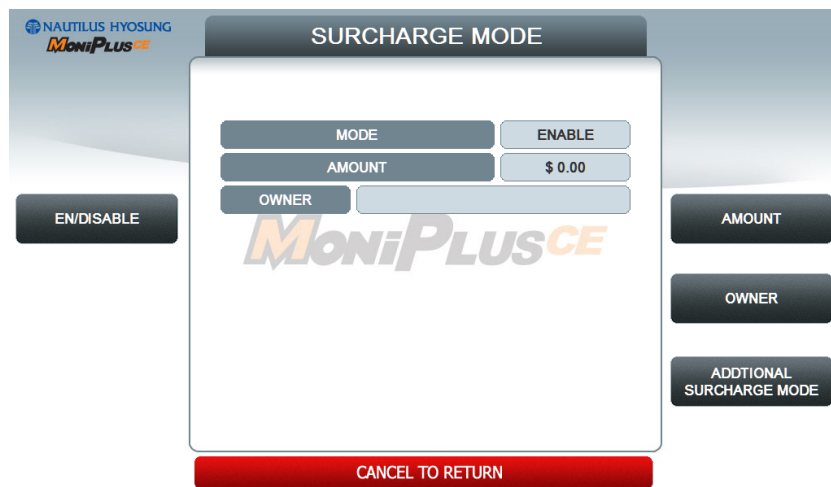

SURCHARGE OWNER

- ▶ The **SURCHARGE OWNER** function is used to edit the surcharge owner. Please input the surcharge owner in the field and select **OK** button. If it succeeded, **“OPERATION SUCCESSFUL!”** displays.

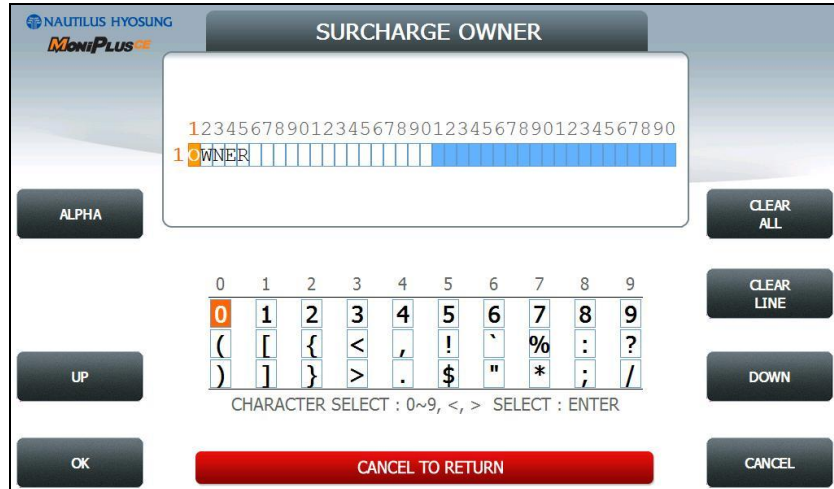


[Function Key Type]



[Touch Type]

ADDITIONAL SURCHARGE MODE

► The **ADDITIONAL SURCHARGE MODE** screen displays the current additional surcharge mode.

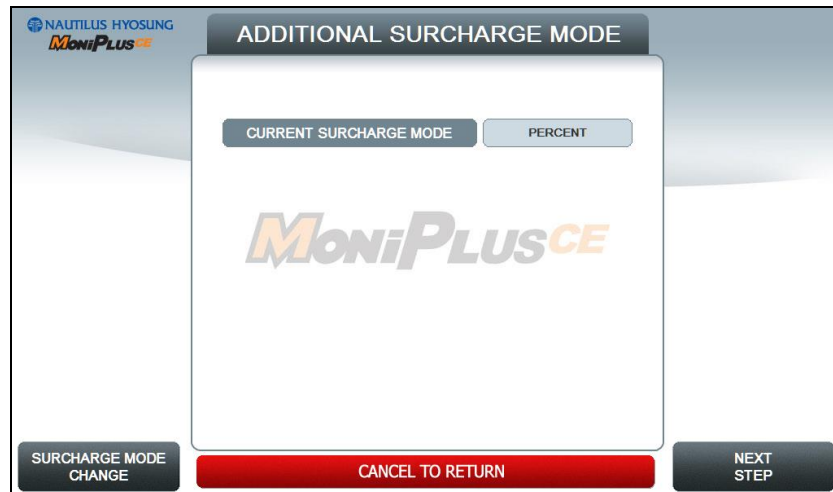

1. SURCHARGE MODE CHANGE

- Changes the current additional surcharge mode.
- **NOT USED** Disables the additional surcharge.
- **PERCENT** Enables the additional surcharge. (PERCENTAGE, %)

2. NEXT STEP

- Moves to the next screen where provides the advanced surcharge option. The button will disappear when the current mode is set to 'NOT USED'.
- **PERCENT** SURCHARGE PERCENT screen will be shown.

SURCHARGE PERCENT

- The **SURCHARGE PERCENT** displays which are to set the surcharge percent.

The screenshot shows the 'SURCHARGE PERCENT' menu interface. At the top left is the logo for NAUTILUS HYOSUNG MoniPlus. The main title 'SURCHARGE PERCENT' is centered at the top. Below the title, there are three input fields: 'PERCENTAGE (%)' with the value '0', 'SURCHARGE LOCATION' with the value 'AFTER', and an empty field. To the right of these fields are three buttons: 'PERCENTAGE', 'LOCATION', and 'WARNING MANNER'. At the bottom center, there is a red button labeled 'CANCEL TO RETURN'.

1. PERCENTAGE

- Set PERCENTAGE (%).

2. LOCATION

- Set surcharge warning screen option
- **BEGINNING** : Shows Surcharge warning screen before customer selected amount.
- **AFTER AMOUNT** : Shows Surcharge warning screen after customer selected amount.

3. WARNING MANNER

- Set whether to use maximum value or minimum value between **PERCENTAGE** and **SURCHARGE AMOUNT**. (GREATER: Maximum value, LESSER: Minimum value.)

ADVERTISEMENT

- ▶ **ADVERTISEMENT** function provides **COUPON**, **WELCOME ADVERTISEMENT** and **TRANSACTION ADVERTISEMENT**.

Please press each button on this menu to go to next screen.



COUPON

- ▶ Please press **COUPON TYPE** button to set up **BASIC COUPON** or **ENHANCED COUPON**.

If you set the **BASIC COUPON** and select **COUPON SETTING** button, **BASIC COUPON** setting screen will be displayed.


BASIC COUPON supports 2line 39column, **ENHANCED COUPON** supports 16line 39column.

If you set the **ENHANCED COUPON** and select **COUPON SETTING** button, **ENHANCED COUPON** setting screen will be displayed.




BASIC COUPON SETTING

▶ Please press each button on this menu to go to next screen

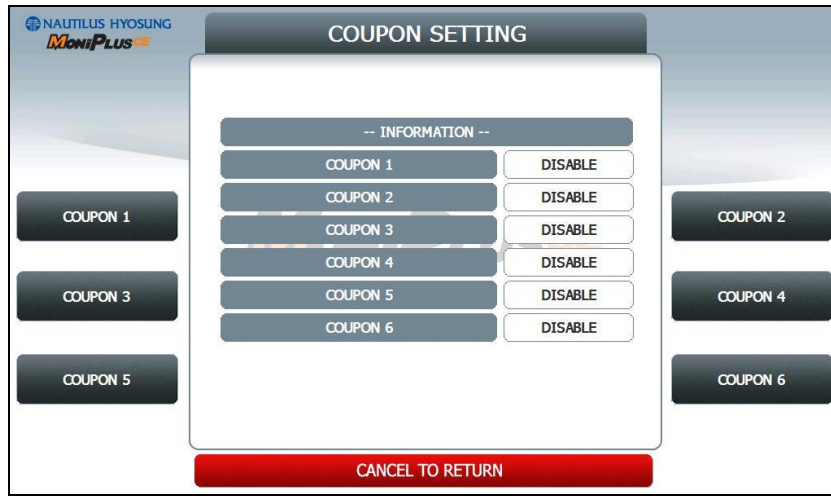


BASIC COUPON n.

- ▶ Please press **BASIC COUPON n EN/DISABLE** button to set up BASIC COUPON n,
Please press **COUPON n TEXT** button on this menu to go to next screen

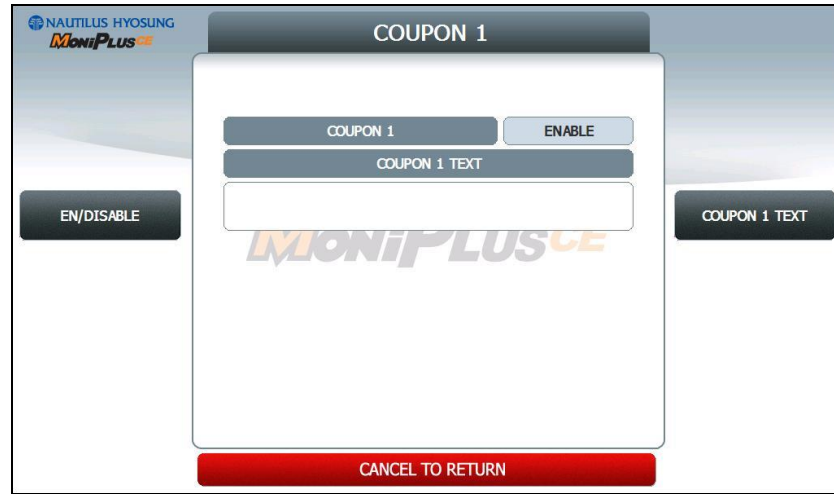


COUPON n. TEXT

- ▶ The **COUPON n TEXT** function is used to edit the coupon n text.
Please input message in the field and select **OK** button. If it succeeded, **“OPERATION SUCCESSFUL!”** displays.

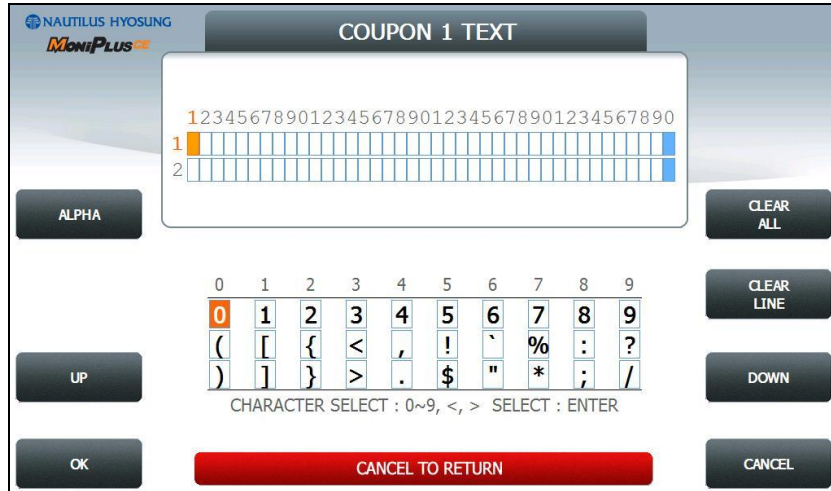

[Function Key Type]

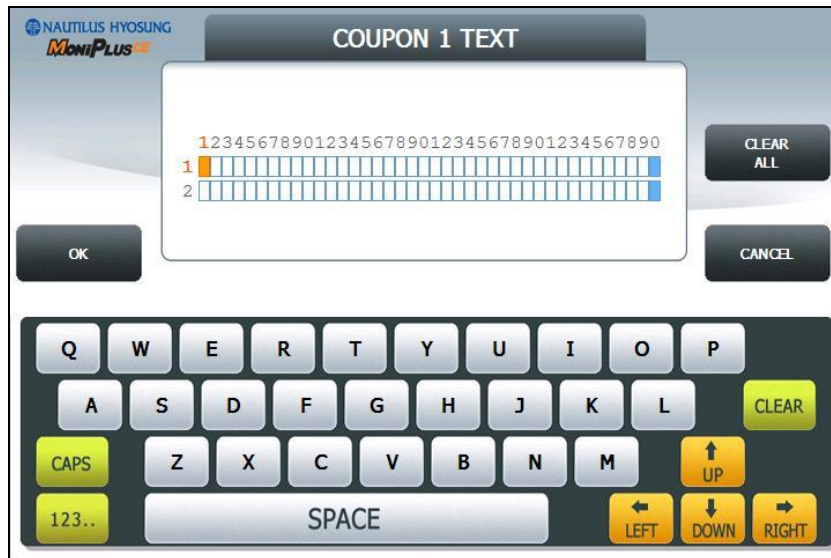

[Touch Type]

ENHANCED COUPON SETTING

- ▶ Please press **CUT OPTION** button to set up **AFTER RECEIPT** or **NOT USE**,
Please press each button on this menu to go to next screen

NAUTILUS HYOSUNG
MoniPlus

COUPON SETTING

CUT OPTION NOT USE

-- INFORMATION --

COUPON 1 OPTION NOT USE

COUPON 2 OPTION NOT USE

COUPON 3 OPTION NOT USE

COUPON 4 OPTION NOT USE

COUPON 5 OPTION NOT USE

COUPON 6 OPTION NOT USE

CUT OPTION

COUPON 1

COUPON 3

COUPON 5

COUPON 2

COUPON 4

COUPON 6

CANCEL TO RETURN

ENHANCED COUPON n.



- ▶ Please press **ENHANCED COUPON n OPTION** button to set up **NOT USE, ALWAYS** and **USE TIME**.




START TIME and **END TIME** is only used **USE TIME** option and the range is 00 ~ 23
Please press **COUPON n TEXT** button on this menu to go to next screen


The screenshot displays the 'COUPON 1' configuration interface. At the top left, the logo for 'NAUTILUS HYOSUNG MoniPlus' is visible. The main title is 'COUPON 1'. Below the title, there are three rows of configuration options: 'COUPON 1 OPTION' with a 'USE TIME' button, 'PRINT TIME (00 ~ 23)' with input fields for '9' and '18' separated by a tilde '~', and 'COUPON 1 TEXT' with a large empty text area. On the left side, there are three buttons: 'COUPON 1 OPTION', 'COUPON 1 TEXT (1~4 LINE)', and 'COUPON 1 TEXT (9~12 LINE)'. On the right side, there are three buttons: 'START TIME', 'END TIME', and 'COUPON 1 TEXT (5~8 LINE)'. At the bottom center, there is a prominent red button labeled 'CANCEL TO RETURN'. At the bottom right, there is another button labeled 'COUPON 1 TEXT (13~16 LINE)'.

ENHANCED COUPON n. TEXT

- ▶ The **ENHANCED COUPON n TEXT** function is used to edit the coupon n text. Please input message in the field and select **OK** button. If it succeeded, “**OPERATION SUCCESSFUL!**” displays.

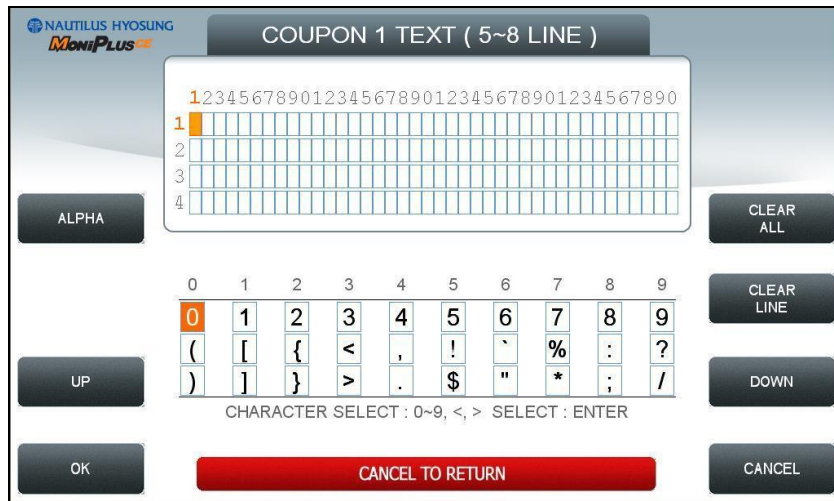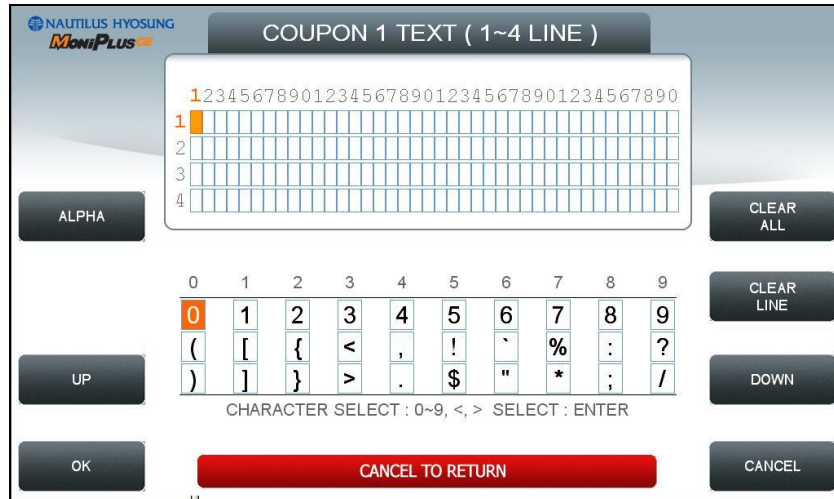

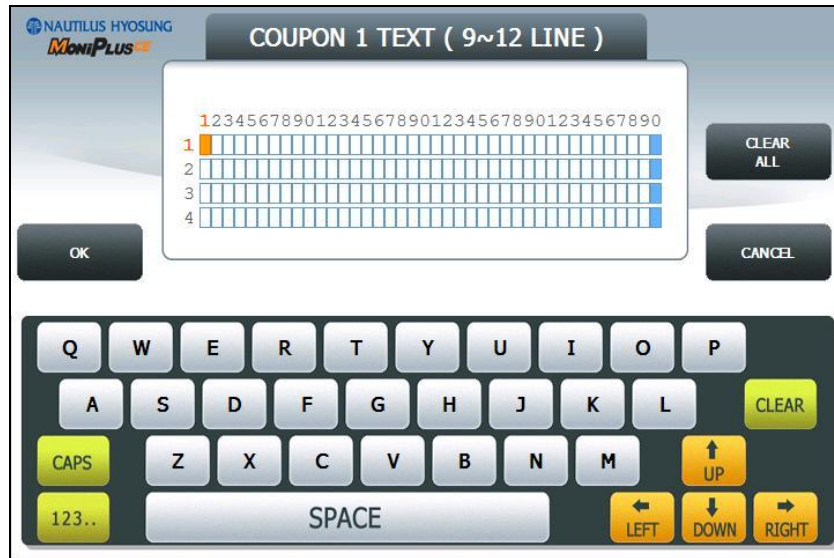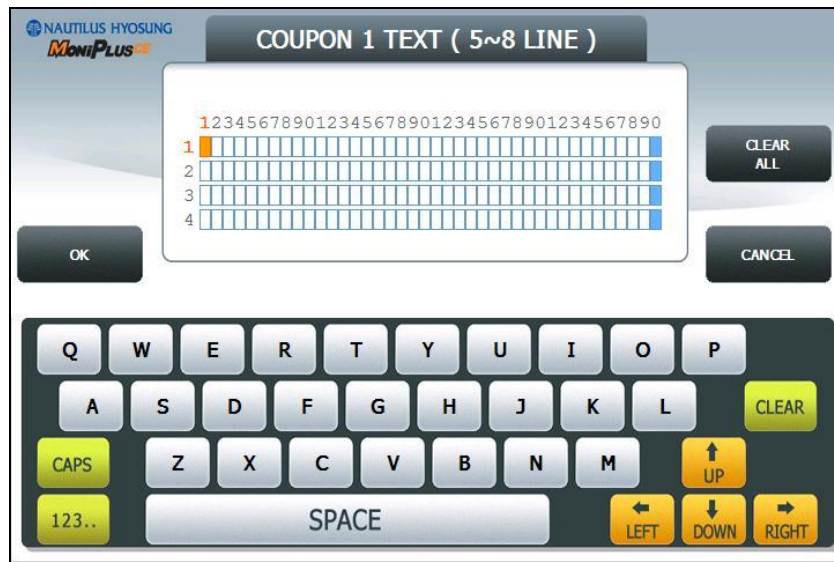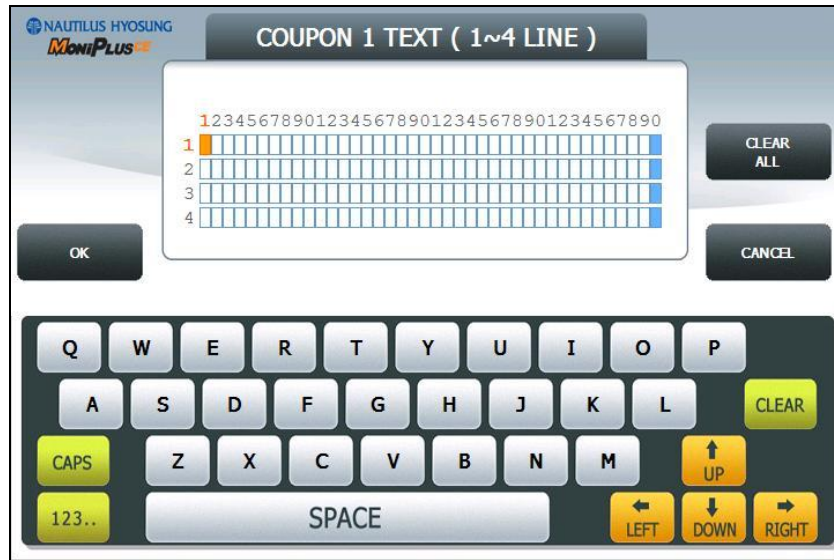


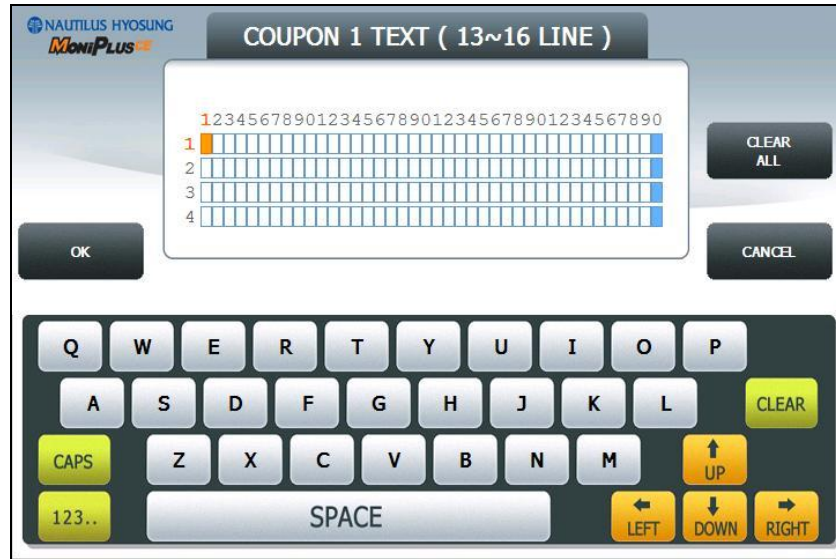

[Touch Type]

WELCOME ADVERTISEMENT

- ▶ **WELCOME ADVERTISEMENT** function provides **SIX** different screens.
If you press the **TIMER** button, you can change the advertisement display timer and the range is between 5 and 30 in welcome screen. Please press each button on this menu to go to next screen.

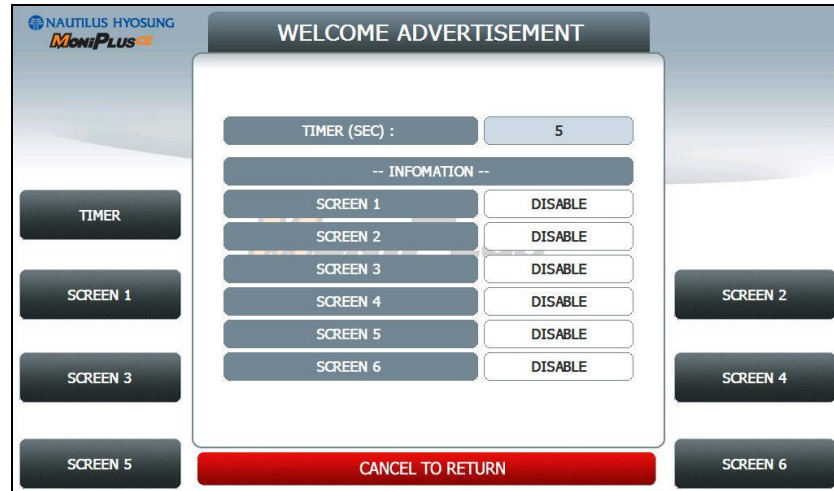

The welcome advertisement image can be updated by SW Update with JPG format images. For more information, please refer to “**Image File Update Guide**” document.


SCREEN n.

- ▶ Please press **SCREEN n EN/DISABLE** button to set up SCREEN n,



TRANSACTION ADVERTISEMENT

- ▶ **TRANSACTION ADVERTISEMENT** function provides **SIX** different screens.
If you press the **TIMER** button, you can change the advertisement display timer and the range is between 5 and 30 in welcome screen. Please press each button on this menu to go to next screen.

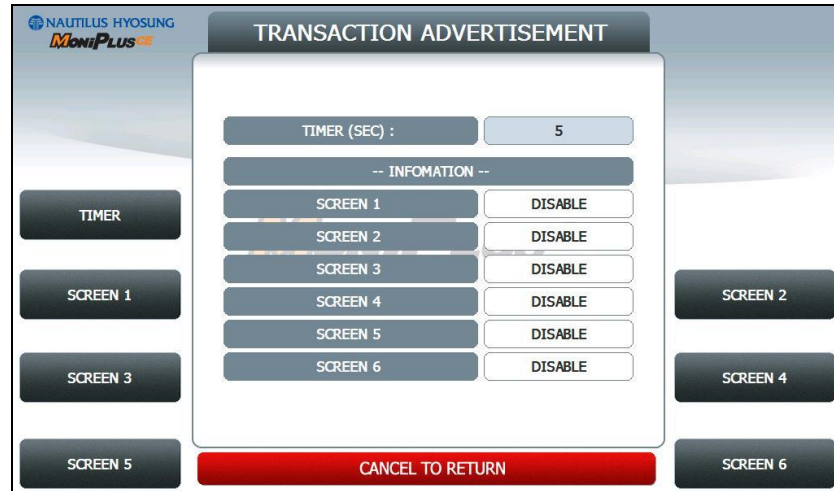

The transaction advertisement image can be updated by SW Update with JPG format images. For more information, please refer to “**Image File Update Guide**” document.


SCREEN n.

- ▶ Please press **SCREEN n EN/DISABLE** button to set up SCREEN n,



STANDARD 3 OPTION

- **STANDARD 3 OPTION** contains **STATUS MONITORING EN/DISABLE**, **COMMUNICATION HEADER**, **COMMUNICATION ID** and **CRC EN/DISABLE**.
In case of **COMMUNICATION HEADER** is enabled, **COMMUNICATION ID** option can be configured.

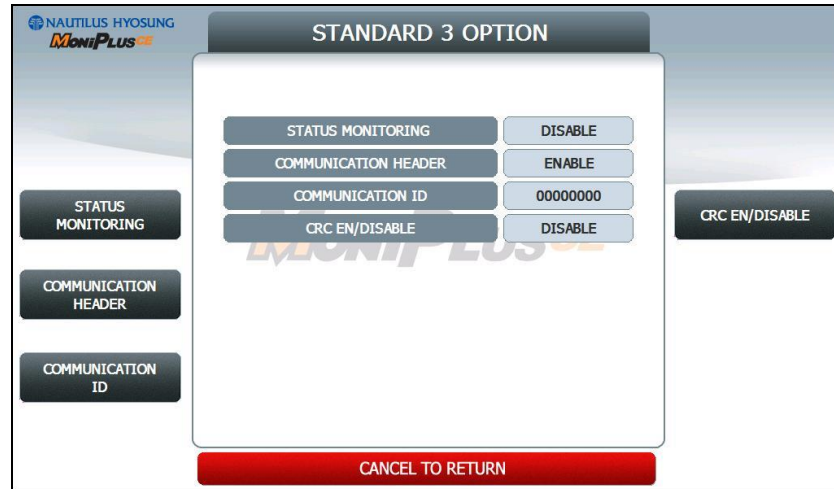


STANDARD 3 OPTION function is used to get the additional information when Triton message is selected.


1. **STATUS MONITORING** function is to decide whether status monitoring field in message is sent or not.
2. **COMMUNICATION HEADER** function is to decide whether communication header in message is included or not.
3. **COMMUNICATION ID** function is able to save the **COMMUNICATION ID**.
The **COMMUNICATION ID** has to be set if using the **COMMUNICATION HEADER** function.
4. **CRC(Cyclic Redundancy Checking) OPTION** function is to set up whether CRC is used or not during communication with host.

COMMUNICATION ID

- ▶ The **COMMUNICATION ID** function is used to edit the communication id. Please input the communication id in the field and select **OK** button. If it succeeded, **“OPERATION SUCCESSFUL!”** displays.

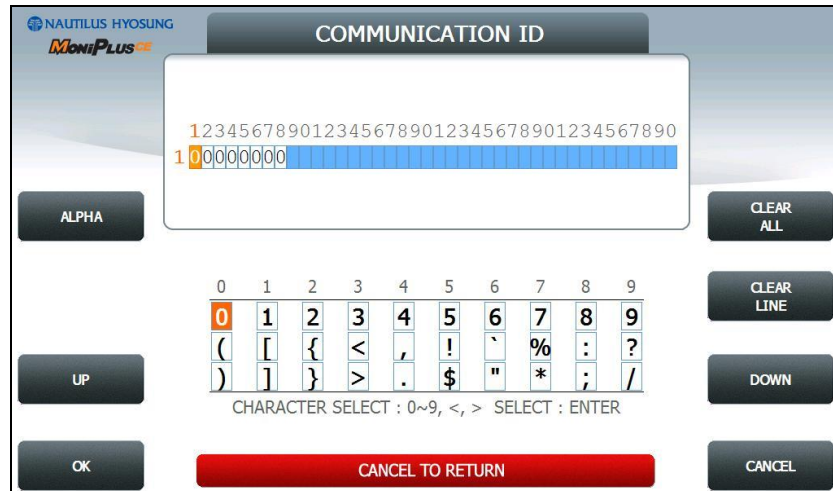


[Function Key Type]

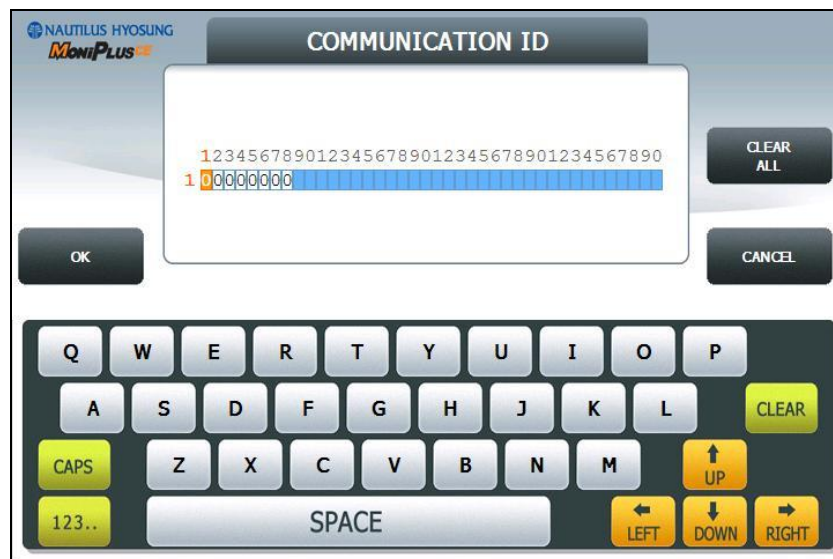

[Touch Type]

STANDARD 1 OPTION

- **STANDARD 1 OPTION** contains **TERMINAL STATUS EN/DISABLE**, **HOST ERROR EN/DISABLE** and **REVERSAL REASON EN/DISABLE**.

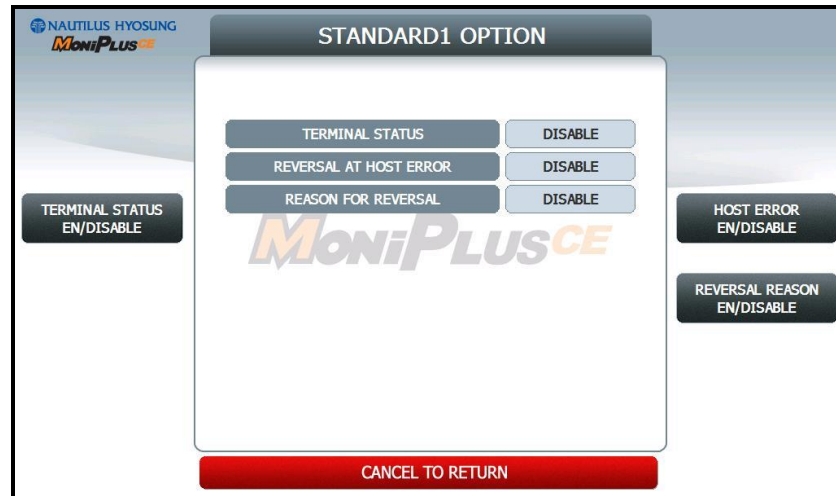


STANDARD 1 OPTION function is used to get the additional information when Triton message is selected.

1. **TERMINAL STATUS** function is to decide whether terminal status field in message is sent or not.
2. **HOST ERROR** function is to decide whether reversal message is sent or not when communication error occurred.
3. **REVERSAL REASON** function is to decide whether reason code("n") is sent or not when reversal message is sent to the host.

SELECT PROCESSOR

- ▶ SELECT PROCESSOR menu contains **COMMUNICATION, MESSAGE FORMAT, EOT/ENQ OPTION, TCP/IP TYPE and REVERSAL RETRY COUNT**

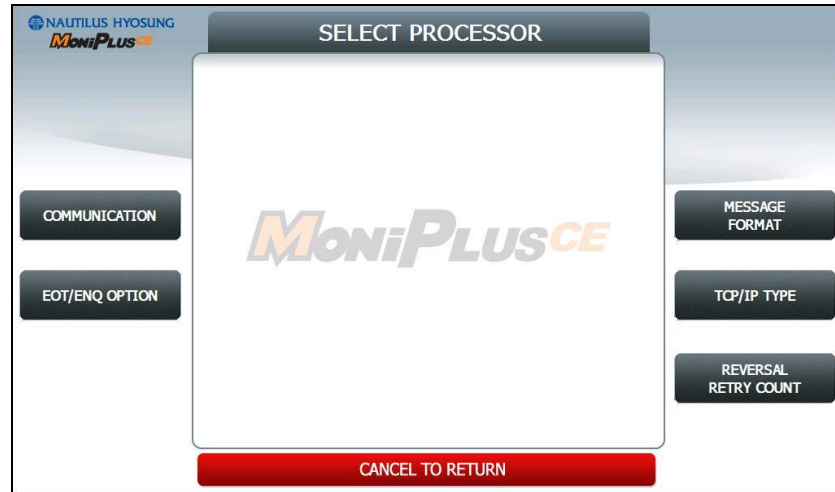


<Note!>

1. **EOT / ENQ OPTION** is displayed only if the Network is Dial up or TCP/IP Type is VISA FRAMED
2. **TCP/IP TYPE** is displayed only if Network is TCP/IP

COMMUNICATION


- ▶ This is to set up a type of line to communicate with Host. Select **DIALUP** or **TCP/IP**. In case of setting up DIALUP, communicate with host using modem. And in case of setting up TCP/IP, communicate with host using LAN.

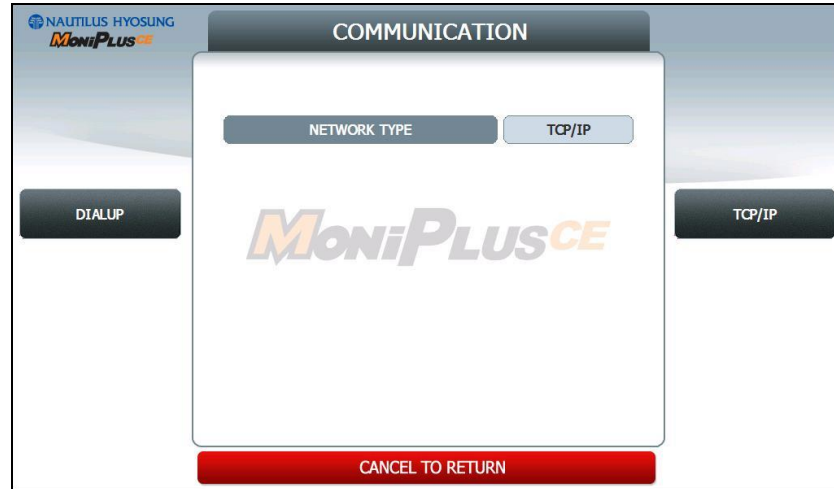**<Note!>**

In case of selecting "IN SERVICE" on OP MAIN, if the value is different from the original value when entering in OP mode, exit OP and execute reboot.

EOT/ENQ OPTION


- ▶ **EOT/ENQ OPTION** contains **GENERAL**, **EOT OPTIONAL**, **NO EOT REQUIRED** and **NO ENQ REQUIRED** functions. You can select one of these options

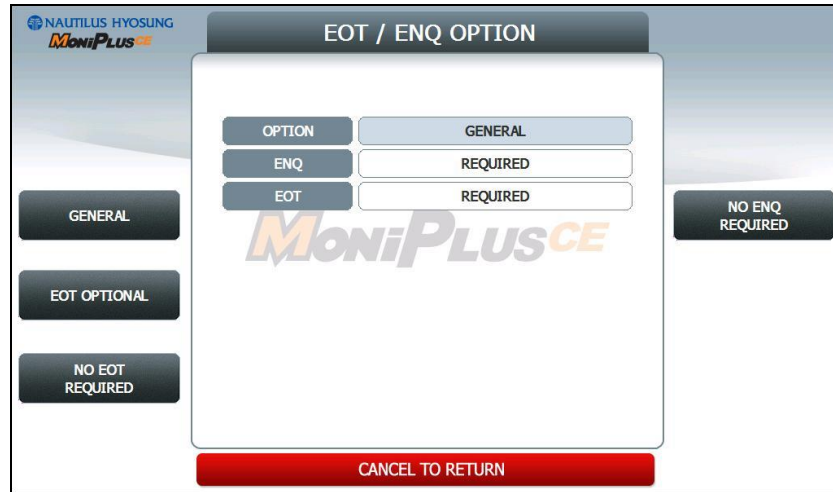

MESSAGE FORMAT


- ▶ This menu sets up message format to use during communicating with Host. You can select one of message type to communicate with a data processing company or bank in this menu (**STANDARD1**, **STANDARD2**, **STANDARD3** and **EPS**). If **STANDARD3** is selected, **STANDARD3 OPTION** button is displayed on the **CUSTOMER SETUP** Screen.

STANDARD 1 is a HYOSUNG message type and **STANDARD 2** is a CSP200 message type, **STANDARD 3** is Triton 9600 message type and **EPS** is an extended CSP200 message type.

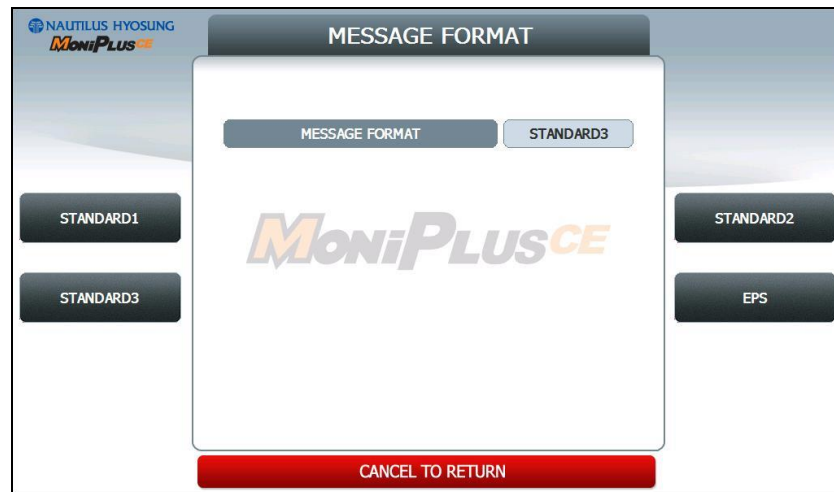

TCP/IP TYPE

- ▶ In case of supporting **TCP/IP**, this is providing a function setting up communication flow to use when communicating with host. In this menu, you can change **TCP/IP TYPE** and can decide whether 'ENABLE' or 'DISABLE' about **SSL OPTION**. There are three kind of **TCP/IP** type in this TCP/IP COMMUNICATION menu (**STANDARD TCP/IP, VISA FRAMED TCP/IP, and ACK CONTROLLED TCP/IP**).

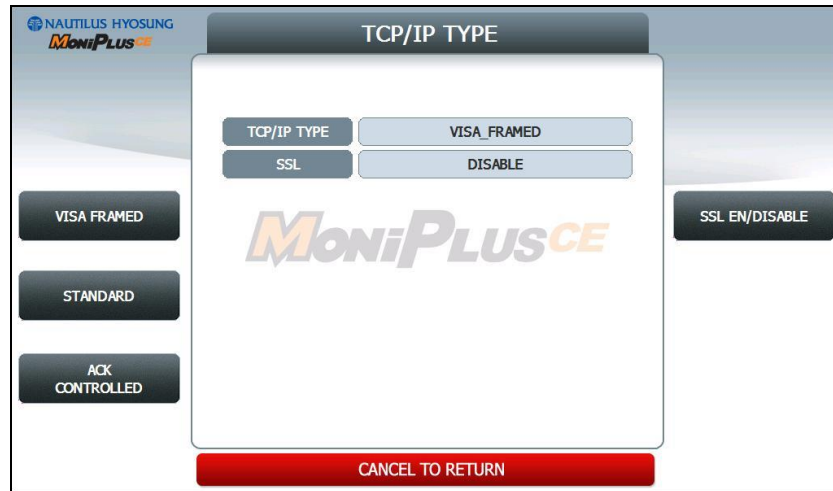

[TCP/IP TYPE screen except for USA]




[TCP/IP TYPE screen for USA]

The differences between two screens as depicted as above are **SSL CERT** and **DOWNLOAD CERT FROM USB** buttons. If **SSL EN/DISABLE** is set as **ENABLE**, **SSL CERT** button would appear. And if **SSL CERT EN/DISABLE** is set as **ENABLE**, **DOWNLOAD CERT. FROM USB** button would appear. **SSL CERT.**(Certificate issued by host to recognize the other side in communicating with each other) is the method for secure transaction. If a owner of ATM want to use the certificate issued by a host, what he/she have to do is to copy certificate file ,renamed as "rootcert.pem" to USB root path. And then just push **DOWNLOAD CERT. FROM USB** button for downloading it from USB.

REVERSAL RETRY COUNT


- ▶ **REVERSAL RETRY COUNT** function is used to set the try count of reversal transaction. **CURRENT REVERSAL RETRY COUNT** displays count of current setting value. You can enter the count and then press **ENTER** (or **CONFIRM**) if you want to change try count of reversal transaction. (You should ask your DP about count of reversal transaction before change try count.)

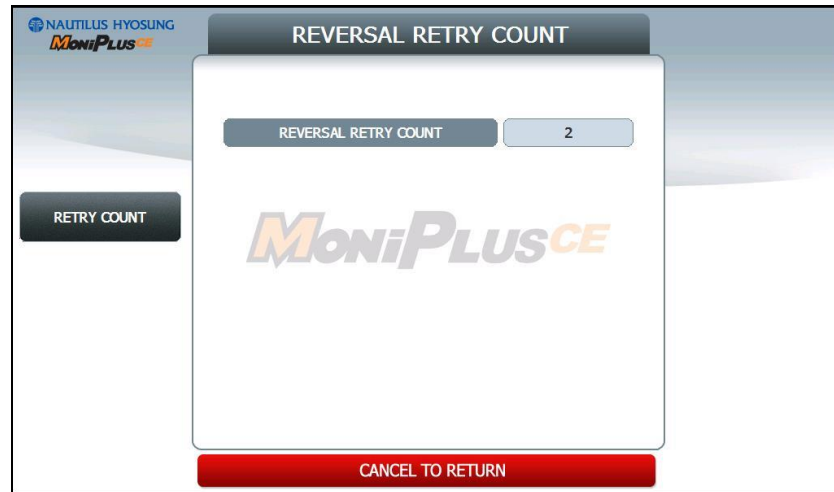

3.6 SYSTEM SETUP

- ▶ This system setup menu contains **DATE & TIME, CHANGE PASSWORD, SPEAKER VOLUME, MODEM PARAMETERS, TERMINAL IP, DEVICE SETUP, LANGUAGE** and **SYSTEM CONTROL**.

Please press each button on this menu to go to next screen. To go back to the previous screen, press the **CANCEL** key in pinpad.

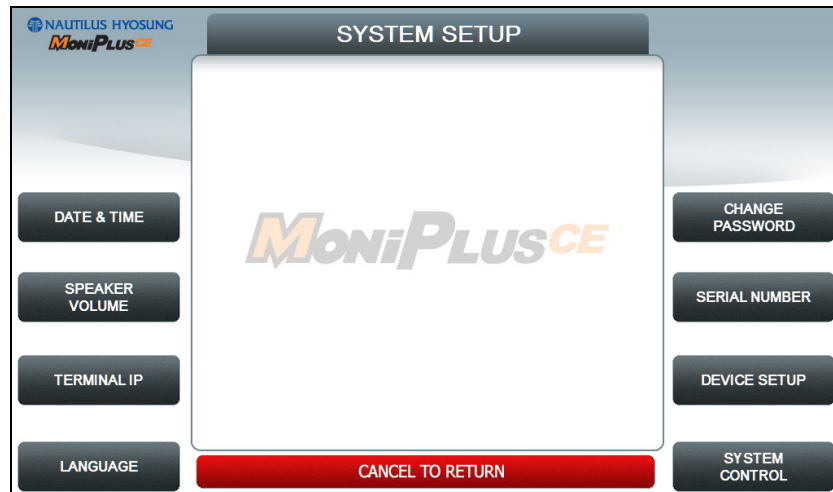

<Note!>

1. **TERMINAL IP** is displayed only if the Network is TCP/IP.
2. **MODEM PARAMETERS** is displayed only if Network is Dial up.

DATE & TIME

- ▶ You can set system date and time by pressing **YEAR**, **HOUR**, **MONTH**, **MINUTE** and **DAY** button. If you press each menu, the cursor will be positioned and you can change the value. This value is saved by pressing **APPLY** key, on the other hand, to go back to the previous screen, press the **CANCEL** key in pinpad.

NAUTILUS HYOSUNG
MoniPlus

DATE & TIME

MUST PRESS 'APPLY' BUTTON TO EFFECT THE VALUE CHANGES

	CURRENT	INPUT
YEAR	2010	
MONTH	05	
DAY	10	
HOUR	09	
MINUTE	00	


YEAR MONTH DAY HOUR MINUTE

HOUR MINUTE

CANCEL TO RETURN APPLY

SPEAKER VOLUME

- ▶ The **SPEAKER VOLUME** function is used to set speaker volume by using **DOWN** and **UP** buttons. Once the button is pressed, ATM beeps.

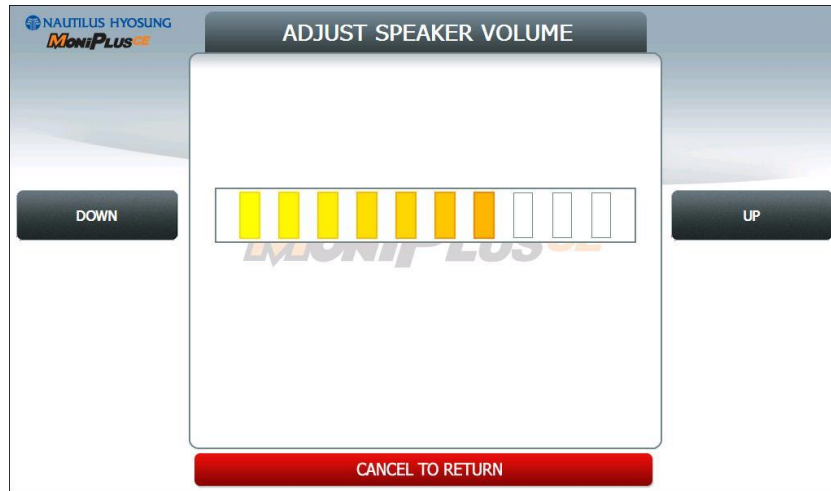

TERMINAL IP

- ▶ **TERMINAL IP** menu contains **DHCP EN/DISABLE**, **IP ADDRESS**, **SUBNET MASK**, **GATEWAY** and **DNS** buttons. If you press **DHCP EN/DISABLE** button will change DHCP status, ENABLE to DISABLE, or DISABLE to ENABLE. In case of DHCP is disabled, **IP ADDRESS**, **SUBNET MASK**, **GATEWAY** and **DNS** buttons will be displayed.


Field	Value
DHCP	DISABLE
IP ADDRESS	150.11.5.111
SUBNET MASK	255.255.0.0
GATEWAY	150.11.1.254
DNS	0.0.0.0

If **DHCP** value is **ENABLE**, ATM uses **DYNAMIC IP** to connect to host. Otherwise, ATM uses **STATIC IP**. If you change DHCP value from **ENABLE** to **DISABLE**, you should set up **STATIC IP** again use **IP ADDRESS**, **SUBNET MASK**, **GATEWAY** and **DNS** buttons.

It is able to input up to 15 units such as XXX.XXX.XXX.XXX

LANGUAGE


- ▶ This menu contains **TRANSACTION LANGUAGE** and **SUPERVISOR LANGUAGE**. Please press each button on this menu to go to next screen. To go back to the previous screen, press the **CANCEL** key in pinpad.

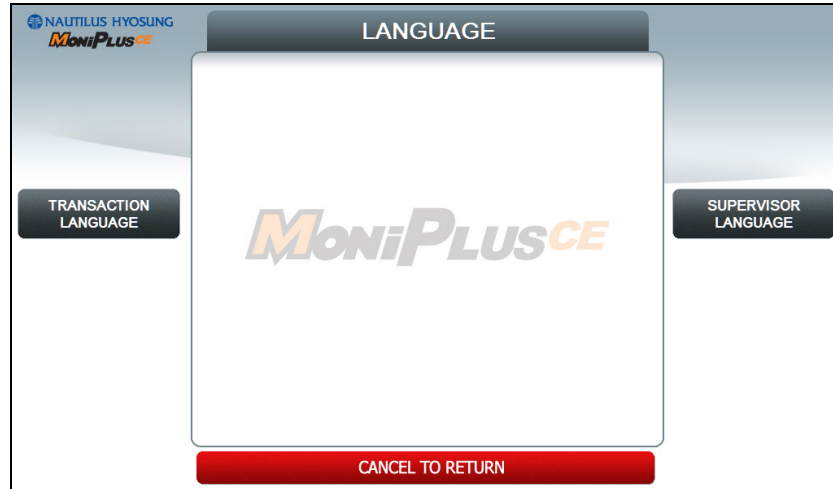

TRANSACTION LANGUAGE

- ▶ You can select language type to be displayed in transaction screens. There are six types of language.
 - **ENGLISH, SPANISH, FRENCH, CHINESE, KOREAN, JAPANESE**

You can change default language pressing **DEFAULT LANGUAGE SELECT** button. If you press each **EN/DISABLE** button, each language will be activated or inactivated.

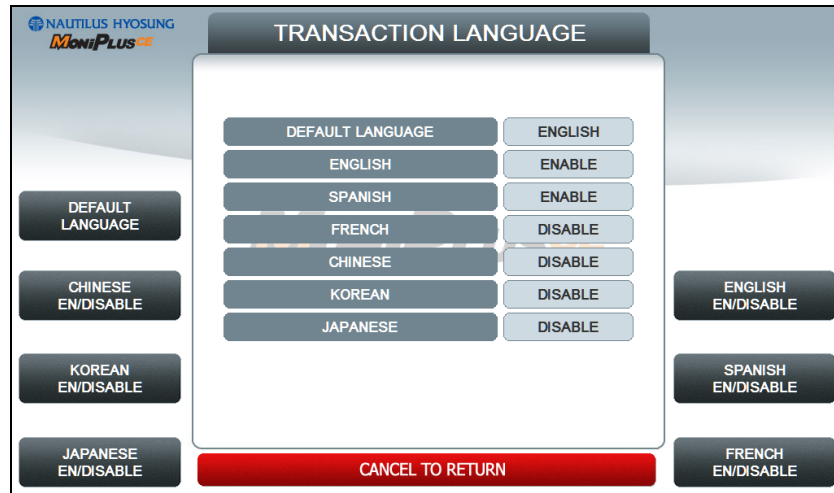

<Note!>

The Language which is selected as **DEFAULT LANGUAGE** cannot be changed.

SUPERVISOR LANGUAGE


- ▶ You can select language type to be displayed in supervisor screen. There are two types of language.
 - **ENGLISH, FRENCH**

Press the button of the language you want to use.



CHANGE PASSWORD

- ▶ You can change PASSWORD. Depending on authority, there are three passwords **OPERATOR PASSWORD**, **SERVICE PASSWORD** and **MASTER PASSWORD**.

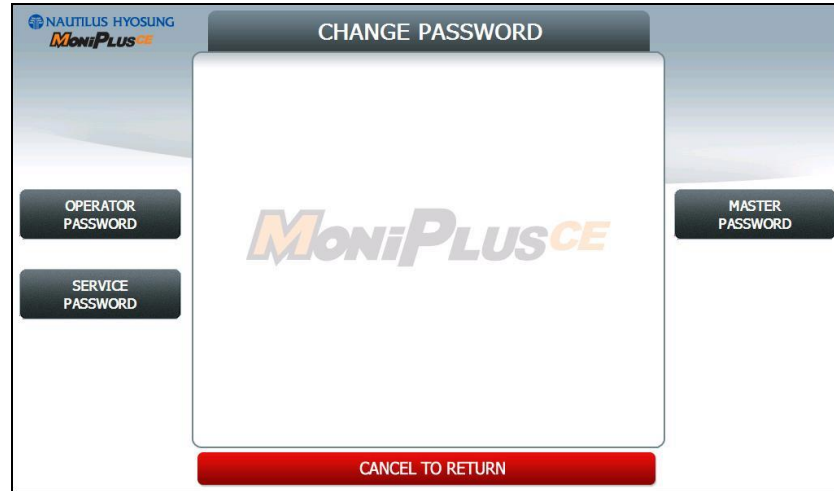

OPERATOR PASSWORD

- ▶ This menu enables you to change current operator password as new one. To change the current password, you should input the proper one in current password field. The factory default value of operator password is "111111".

The screenshot displays the 'OPERATOR PASSWORD' menu. At the top left, the 'NAUTILUS HYOSUNG' logo and 'MoniPlus' brand name are visible. The main title 'OPERATOR PASSWORD' is centered at the top. Below the title, there are three input fields labeled 'CURRENT PASSWORD', 'NEW PASSWORD', and 'CONFIRM PASSWORD'. Each field is accompanied by a small blue rectangular button. Below the input fields is a numeric keypad with buttons for digits 1-9, 0, a decimal point, and a comma. To the right of the keypad are three function buttons: 'ENTER' (blue), 'CANCEL' (orange), and 'CLEAR' (yellow). At the bottom of the screen, there is a prominent red button labeled 'CANCEL TO RETURN'.

SERVICE PASSWORD

- ▶ This menu enables you to change current service password as new one. To change the current password, you should input the proper one in current password field. The factory default value of service password is "222222".

The screenshot displays the 'SERVICE PASSWORD' menu. At the top left, the 'NAUTILUS HYOSUNG' logo and 'MoniPlus' branding are visible. The main title 'SERVICE PASSWORD' is centered at the top. Below the title, there are three input fields labeled 'CURRENT PASSWORD', 'NEW PASSWORD', and 'CONFIRM PASSWORD'. Each field is accompanied by a small blue button on its right side. Below these fields is a numeric keypad with buttons for digits 1-9, 0, a comma, a period, and an 'ENTER' button. To the right of the numeric keypad are three additional buttons: 'ENTER' (blue), 'CANCEL' (orange), and 'CLEAR' (yellow). At the bottom of the interface is a prominent red button labeled 'CANCEL TO RETURN'.


MASTER PASSWORD

- ▶ This menu enables you to change current master password as new one. To change the current password, you should input the proper one in current password field. The factory default value of master password is "555555".



MODEM PARAMETERS

- ▶ This MODEM PARAMETERS menu contains **HOST INITIAL STRING**, **RMS INITIAL STRING** and **MODEM TEST**.

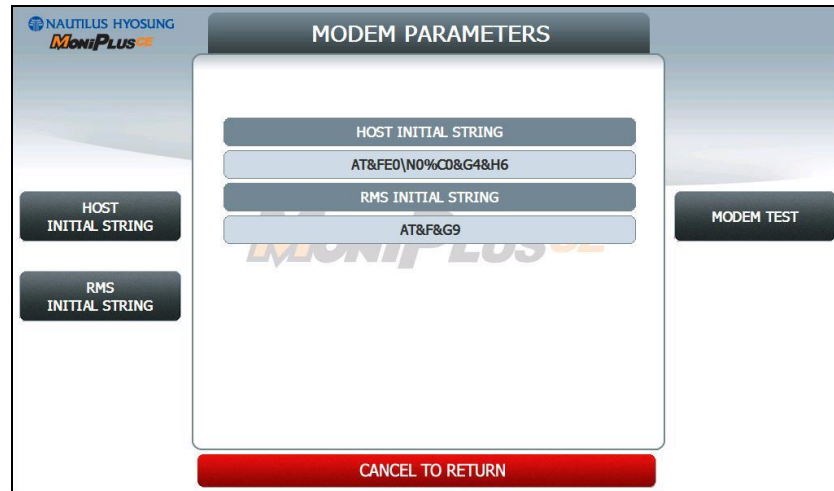

1. INITIAL STRINGs


The **HOST INITIAL STRING** and **RMS INITIAL STRING** functions are used to edit the modem initial string when the special circumstance is required by a nonstandard modem initial string. Before editing the initial string, consult with service personnel.

2. MODEM TEST


The **MODEM TEST** function is used to perform the modem reset test. When the error is occurred, contact the service personnel.

HOST INITIAL STRING

- ▶ The **HOST INITIAL STRING** function is used to edit the host initial string. Please input the host initial string in the field and select **OK** button. If it succeeded, “**OPERATION SUCCESSFUL!**” displays.

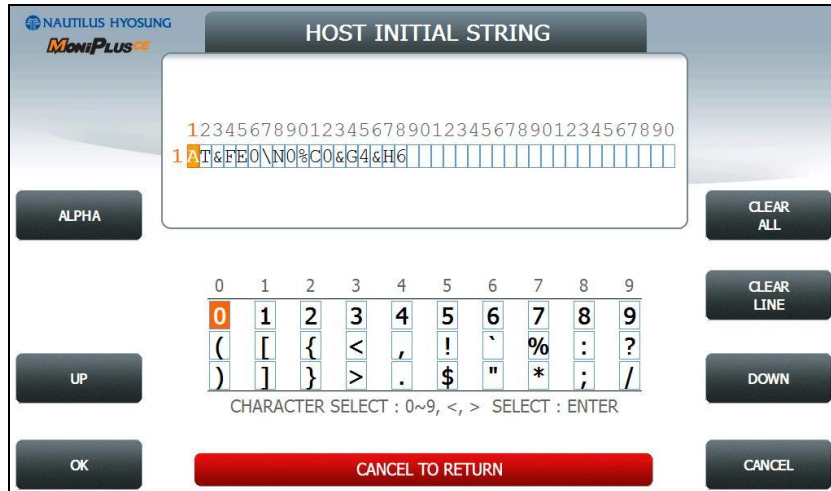


[Function Key Type]

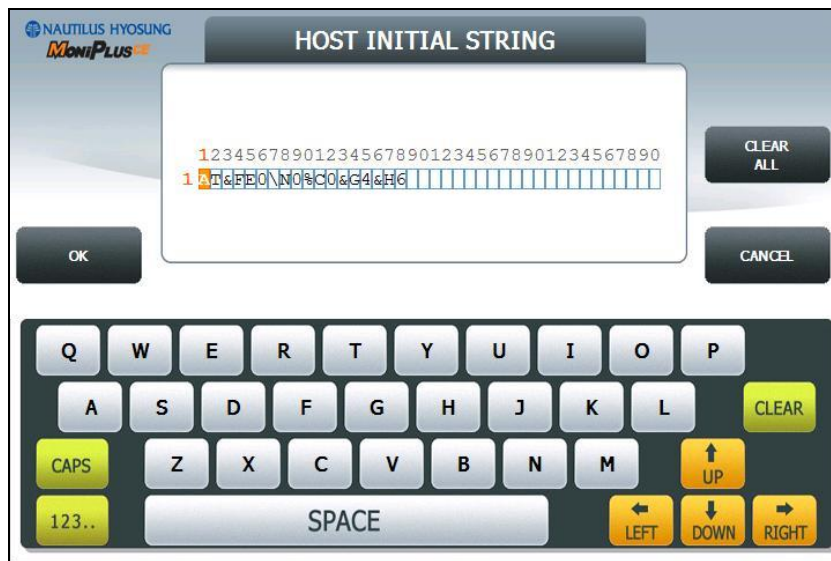


[Touch Type]

RMS INITIAL STRING

- ▶ The **RMS INITIAL STRING** function is used to edit the RMS initial string. Please input the RMS initial string in the field and select **OK** button. If it succeeded, **“OPERATION SUCCESSFUL!”** displays.

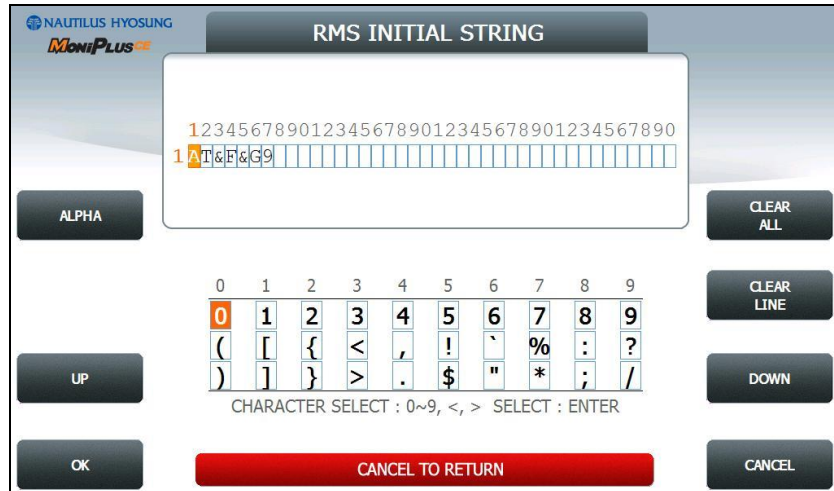


[Function Key Type]

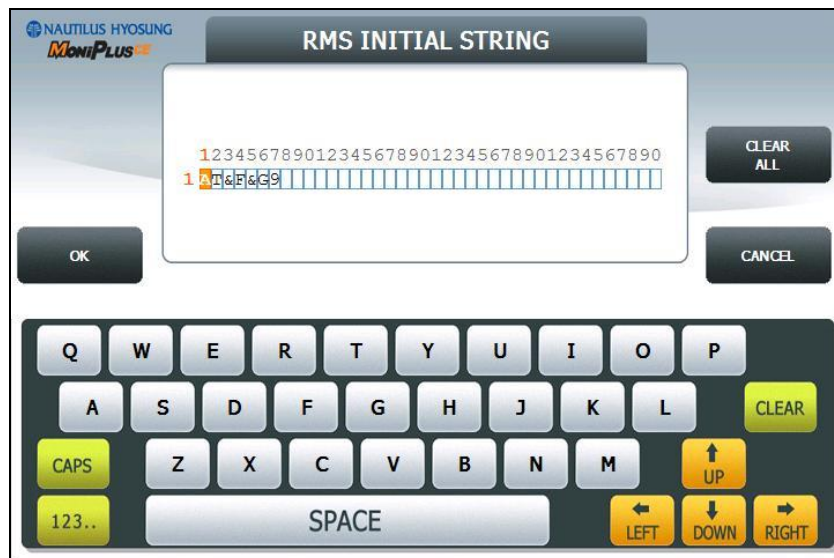

[Touch Type]

DEVICE SETUP

- ▶ This **DEVICE SETUP** menu contains **CDU SETUP**, **CARD READER SETUP**, **HALO LED SETUP**, **MoniVision** and **RFID EN/DISABLE**. Please press the button on this menu to go to next screen.

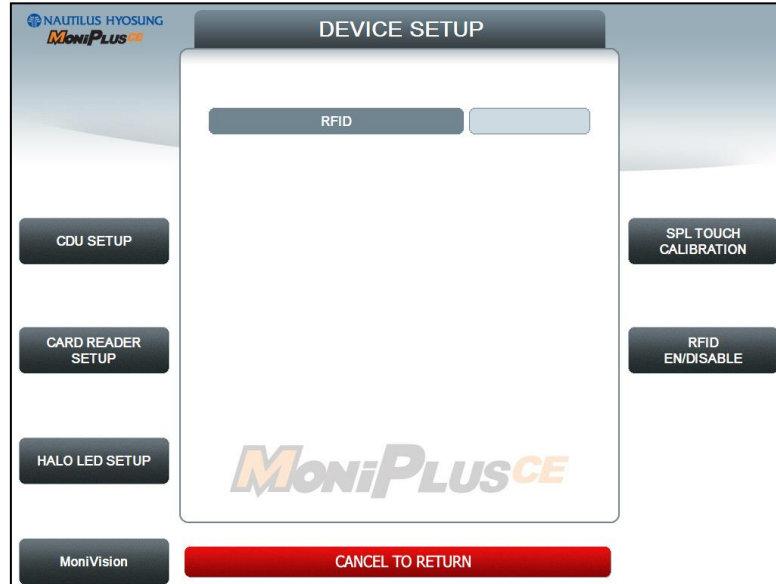

<Note!>

When you change CDU Setup Information, contact the service personnel.

<Note!>

When you want to set CDU in MX4000W, there is no button named as CDU setup. This is because there is only one cassette in MX4000W. So you do not need to set it. In MX4000W, if this button is not hidden, there is possibility to set CDU from stable condition to unknown, not defined state.

<Note!>


RFID EN/DISABLE is only available for MX2600SE, MX5200SE, MX5300SE and MX2800SE.

<Note!>

MoniVision is only available for MX2800SE.

CDU SETUP

- This **CDU SETUP** menu contains **COUNTRY**, **CDU TYPE**, **CASSETTE VOLUME** and **EXECUTE**. Please press each button on this menu to operate the related function..

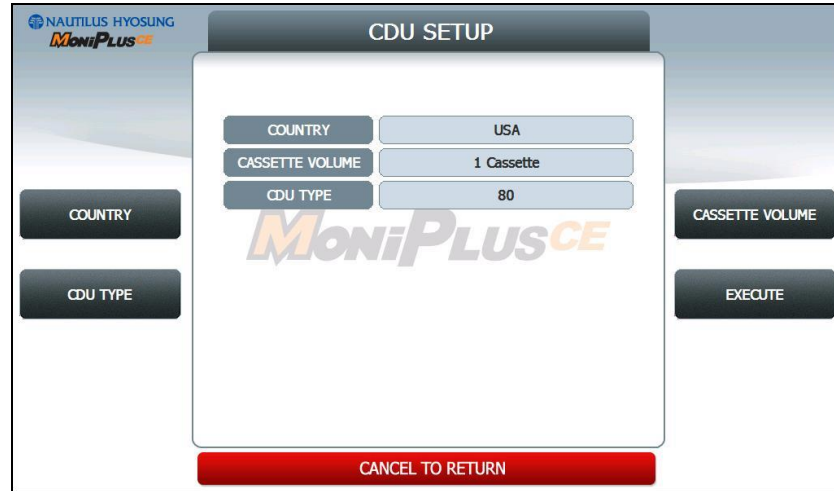

Press the buttons **COUNTRY**, **CDU TYPE** and **CASSETTE VOLUME**. Then the CDU SETUP INFORMATION will be changed.

If you changed the information correctly, press the **EXECUTE** button to **APPLY**.

1. COUNTRY

USA	CANADA	MEXICO	AUSTRALIA	NEW ZEALAND	OTHER
-----	--------	--------	-----------	-------------	-------

2. CDU TYPE

00	01	02	03
08	09	0A	0b
41	43	45	47
80	82		

3. CASSETTE VOLUME

1 CASSETTE	2 CASSETTE	3 CASSETTE	4 CASSETTE
------------	------------	------------	------------

CARD READER SETUP

- ▶ In **CARD READER SETUP**, you can select CARD READER (NH DIP Type, NH EMV Type, NH EMV2 Type) in the screen as shown as below.



If you choose 'NH EMV' button with anti skimming card reader equipped ATM, the hidden button-**ANTI SKIMMING**- would appear as depicted as below.



ANTI SKIMMING

- ▶ If you push (or touch) '**ANTI SKIMMING**' button, the screen for configuring the specifications of anti skimming will appear as depicted as below.




Each key has the function as explained as below.

1. **END/DISABLE**: Used to determine whether ANTI SKIMMING will be used or not.
2. **SHUTTER END/DISABLE**: Used to set the shutter up when an obstacle is attached to card reader.
3. **TIME THRESHOLD**: Used to determine the time interval when an obstacle is attached to card reader. For example, if the value of 'TIME THRESHOLD' is set as 10 seconds, after 10 seconds from the time when an obstacle would be attached to card reader, the ATM will recognize the attack to card reader.
4. **AUTO RECOVERY TIME**: Used to determine the time interval for recovering an ATM. For example, if the value of 'AUTO RECOVERY TIME' is set as 10 seconds, after 10 seconds from the time when an obstacle would be removed from ATM, the ATM will be in normal condition.
5. **APPLY**: Used to apply the configuration of 'ANTI SKIMMING'.

HALO LED SETUP

- In **HALO LED SETUP**, you can set **LED MODE** and **LED COLOR** for each **ATM STATUS**.

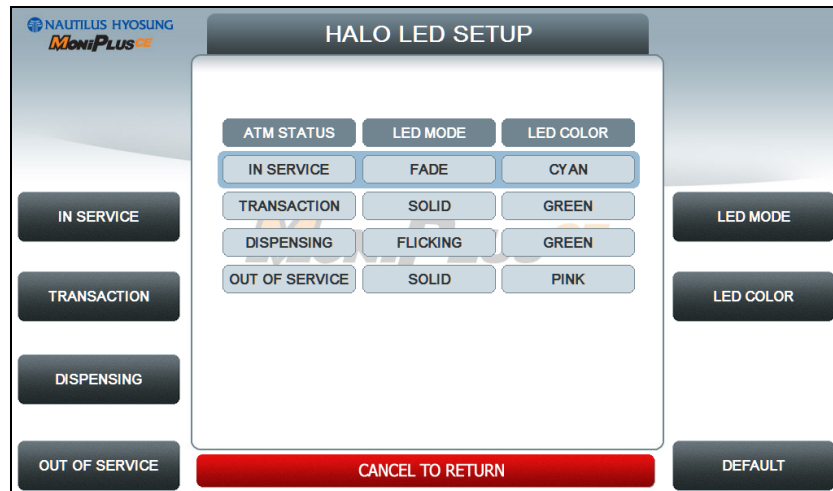

To select **ATM STATUS** you want to set, press the button on the left side of the screen. There are four ATM statuses.

- **IN SERVICE / TRANSACTION / DISPENSING / OUT OF SERVICE**

To change the led mode, press **LED MODE** button on the right side of the screen. There are four led modes.

- **OFF / SOLID / FLICKING / FADE**


To change the led color, press **LED COLOR** button on the right side of the screen. There are six led colors.

- **CYAN / BLUE / YELLOWGREEN / WHITE / GREEN / PINK**

You can restore values to default settings using **DEFAULT** button.

MoniVision

- In **MoniVision**, you can set **MoniVision**, **Live-Feed** and **Journal Pic**.

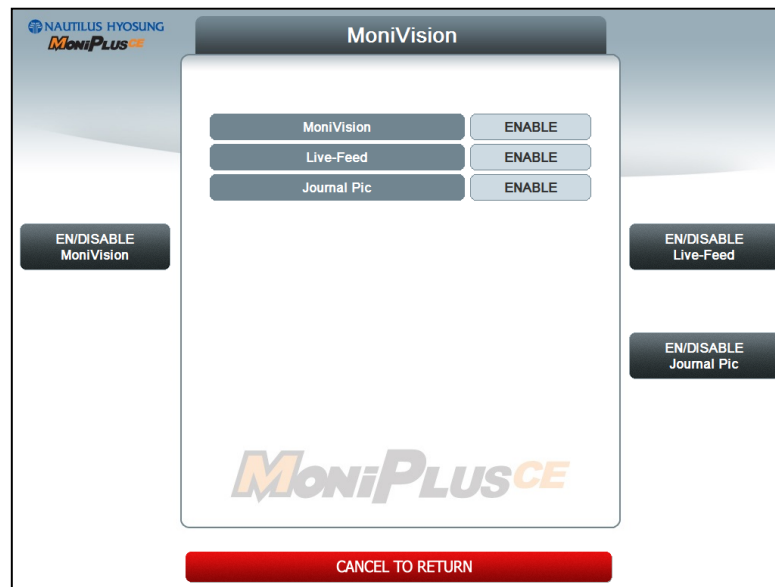

EN/DISABLE MoniVision

- When **MoniVision** is **ENABLE**, camera functions will be activated.

EN/DISABLE Live-Feed

- When **Live-Feed** is **ENABLE**, camera preview will be shown on password input screen during transaction.

EN/DISABLE Journal Pic


- When **Journal Pic** is **ENABLE**, ATM will take pictures of customer during transaction. You can see those pictures in **VIEW JOURNAL** menu.

SYSTEM CONTROL

- This **SYSTEM CONTROL** menu contains **SOFTWARE UPDATE, REBOOT / SHUTDOWN, BACKUP ALL JOURNAL TO USB, BACKUP JOURNAL BY DATE TO USB, BACKUP LOG TO USB, BACKUP NVRAM, RESTORE NVRAM** and **CLEAR NVRAM**.

Please press each button on this menu to go to next screen or to operate the related function.

And if you want to go back to the previous screen, press the **CANCEL** key.

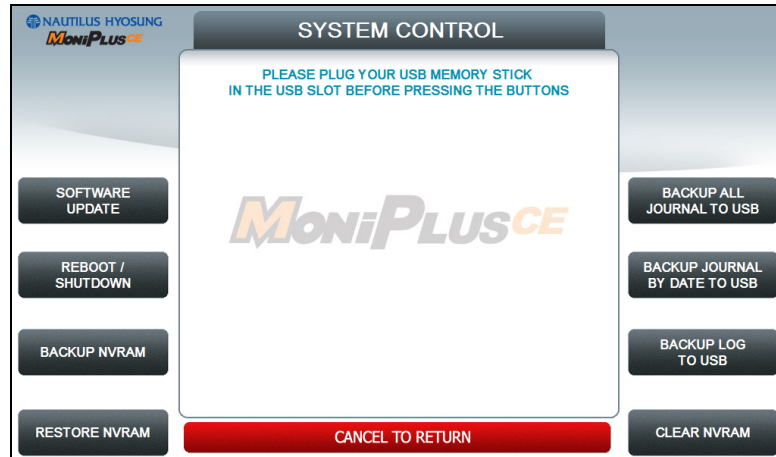

You can back up a various kinds of journal data and log data you want in this menu. Please make sure that USB drive is connected into USB slot before pressing the button. When **BACKUP ALL JOURNALS TO USB, BACKUP JOURNAL BY DATE TO USB** or **BACKUP LOG TO USB** button is selected, this data will be sent into USB flash drive. When **SOFTWARE UPDATE** is entered, it will change to the screen of **SOFTWARE UPDATE**. This is because Software Update functionality is supported at **SYSTEM CONTROL** menu. When **SYSTEM CONTROL** is submitted the files in USB flash drive will be copied to the ATM.


Terminal configuration data is saved at NVRAM, so **BACKUP NVRAM** and **RESTORE NVRAM** button is to use the backup and restore terminal configurations.

<Note!>


1. How to update the software, please refer to the Appendix.
2. **BACKUP NVRAM** and **RESTORE NVRAM** Button is only displayed when security door is opened.

REBOOT / SHUTDOWN

- ▶ You can set **SCHEDULED REBOOT**, or execute **REBOOT NOW / SHUTDOWN NOW**.

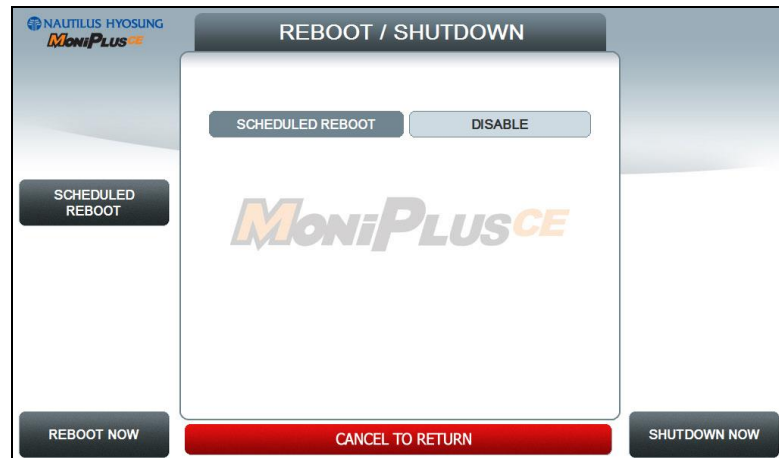

- ▶ A confirmation dialog would appear when you execute **REBOOT NOW** or **SHUTDOWN NOW**. If you press the **YES** button, the ATM will restart / shutdown.

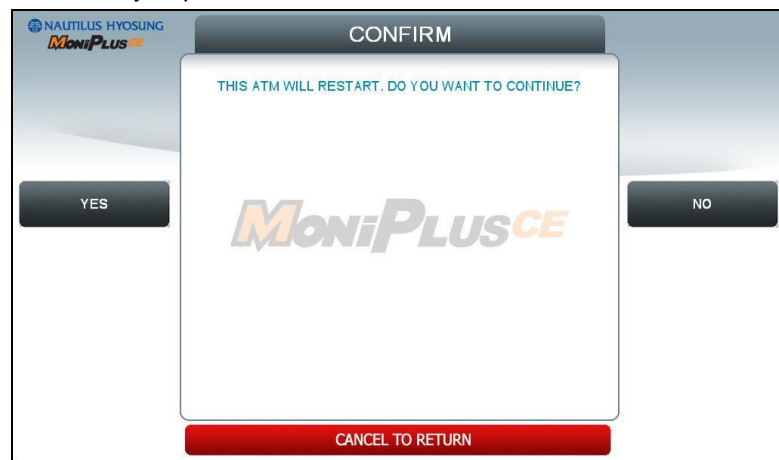

BACKUP JOURNAL BY DATE TO USB

- ▶ Input the **START DATE** and **END DATE** using **FROM** and **TO** buttons. And press the **SEARCH** button.
Then, the journal date between START DATE and END DATE will be sent to USB drive.

NAUTILUS HYOSUNG
MoniPlus

BACKUP JOURNAL BY DATE

AFTER ENTERING THE SEARCH DATE,
PRESS 'SEARCH' BUTTON.
IF JOURNAL ENTRIES ARE FOUNDED,
THE 'SAVE TO USB' BUTTON WILL APPEAR.

DATE TYPE : MM/DD/YYYY

TODAY 04/25/2010

FROM

TO

RESULT 0

FROM

TO

SEARCH

CANCEL TO RETURN

CLEAR NVRAM

- ▶ To clear NVRAM on the ATM, begin by entering the Operator Function Menu using the Master Password. Then enter **SYSTEM SETUP, SYSTEM CONTROL and CLEAR NVRAM** in sequence.



1. CLEAR ALL

This will delete all programmed parameters and make all setting information (including passwords) to the default settings. This does NOT include the master keys which are stored in EPP.

2. CLEAR SETTING

This will delete all programmed parameters and make all information (including passwords) to the default settings. This does NOT include the master keys which are stored in EPP, denomination, journal data.

3. CLEAR JOURNAL

This will delete all journal data permanently

4. CLEAR TRANS. SEQUENCE NO.

This function will reset the journal sequence number to <0000>. This may be useful if you switch processing or switch Terminal ID numbers and want to keep new records.

5. CLEAR LOG


This will delete all logs permanently

<Note!>

Be careful when using these features (NVRAM clearing) – The initialized data can NOT be recovered.

SET THE TYPE OF MACHINE


- ▶ After you select **CLEAR ALL** or **CLEAR SETTING** button, the screen will be changed into the screen as same as below.

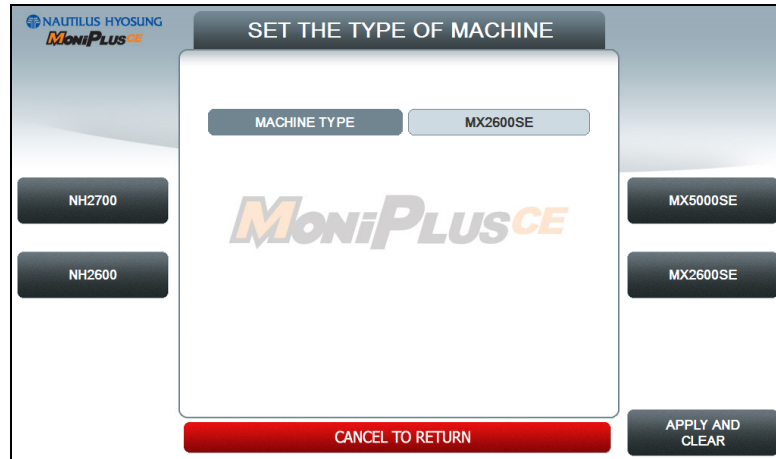

[NH2700 / MX5000SE / NH2600 / MX2600SE]


Since S/W can't detect the machine type automatically, you need to select the type of machine before clearing NVRAM.

If ATM is NH1800SE or MX4000W, buttons of those machine types will show up instead of NH2700, MX5000SE, NH2600 and MX2600SE.

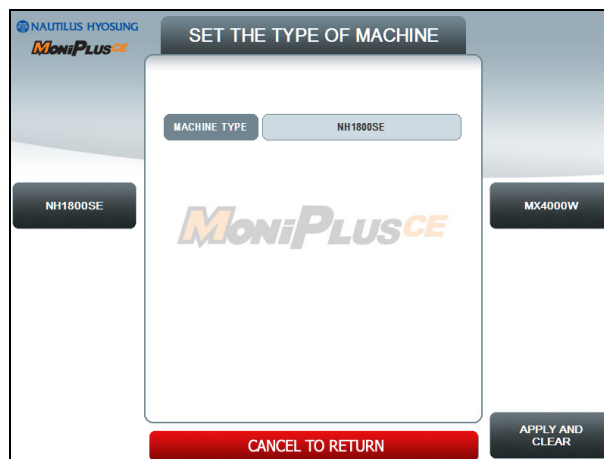

[NH1800SE / MX4000W]

If ATM is MX5200SE or MX5300SE, buttons of those machine types will show up like as below

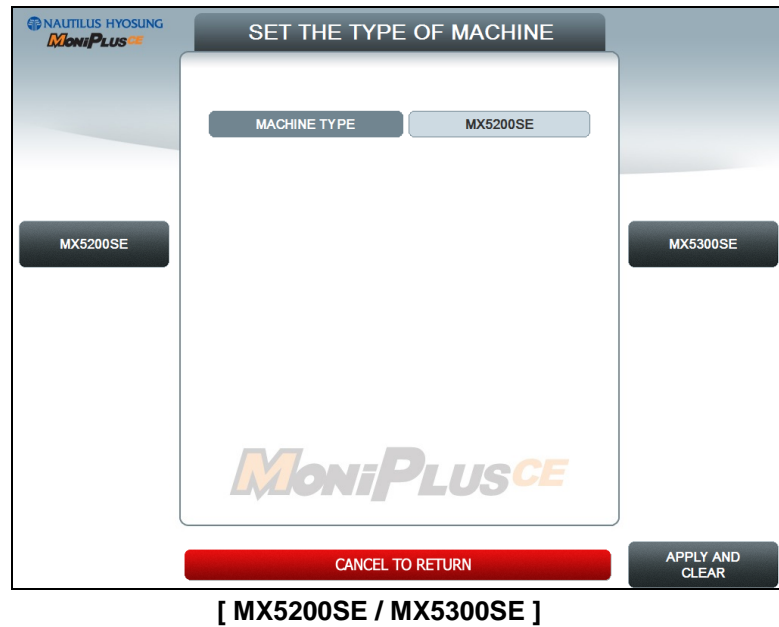

This screen won't be shown with MX2800SE, since its machine type doesn't need to be set.

After selecting the type of machine, just push **APPLY AND CLEAR** button. And then the screen would be changed into one as same as below to confirm your wish of clearing data in NVRAM.




3.7 HOST SETUP


- ▶ **[DIALUP]** This host setup menu contains **KEY MANAGEMENT**, **TELEPHONE NUMBER**, **TERMINAL ID**, **HEALTH CHECK MESSAGE**, **REMOTE MONITOR**, **ROUTING ID** and **AUTO DAY TOTAL**

[TCP/IP] This host setup menu contains **KEY MANAGEMENT**, **HOST ADDRESS**, **TERMINAL ID**, **HEALTH CHECK MESSAGE**, **REMOTE MONITOR**, **ROUTING ID** and **AUTO DAY TOTAL**.

Pressing function key beside menu button goes to next screen. To go back to the previous screen, press the **CANCEL** key in pinpad.

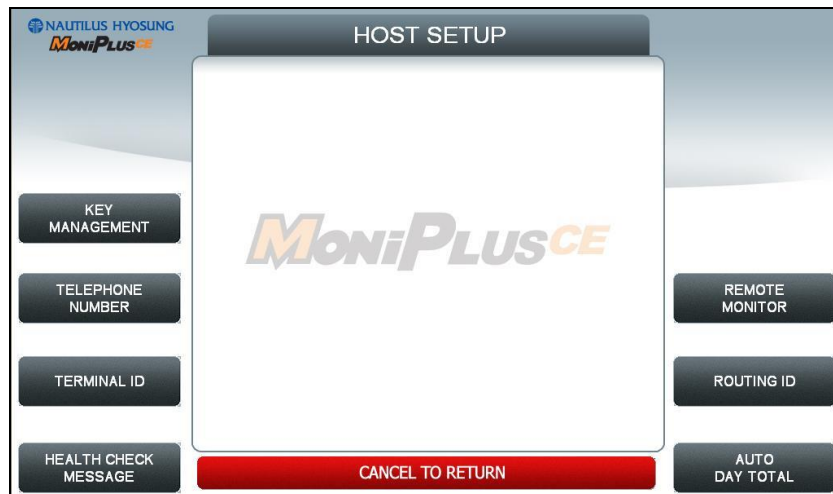

[DIALUP]

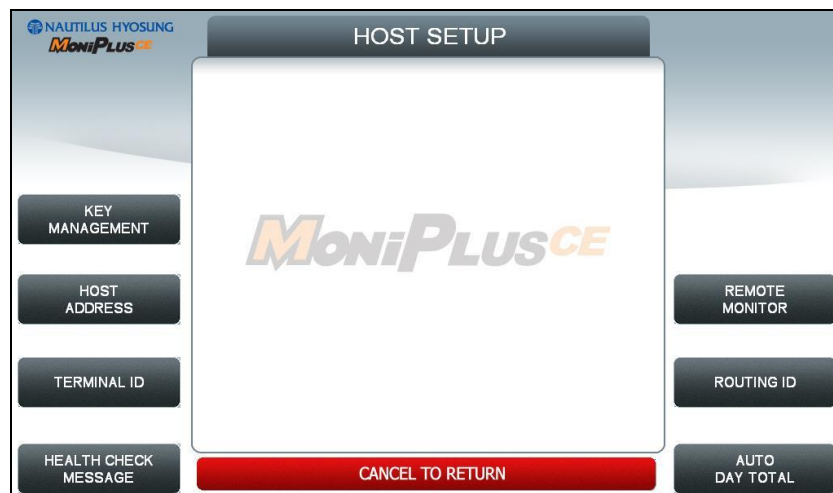


[TCP/IP]

<Note!>

ROUTING ID is displayed only if the message format is STANDARD1, 2 and EPS


KEY MANAGEMENT (for 128K EPP)

► START SCREEN

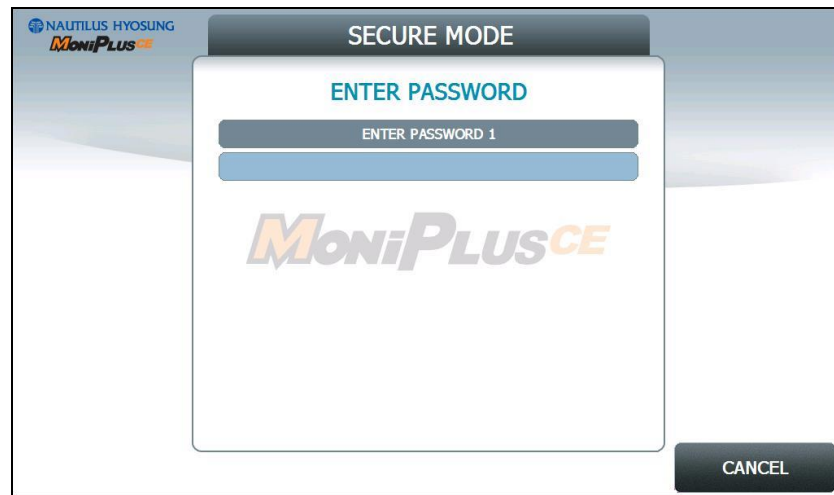

Enter the **PASSWORD 1** and **PASSWORD 2** to execute **KEY MANAGEMENT**.
(Default PASSWORD 1 is '000000'. And default PASSWPRD 2 is '000000' as well)

If you enter **PASSWORD 1** and **PASSWORD 2** correctly, the main screen of KEY MANAGEMENT will be displayed as below.

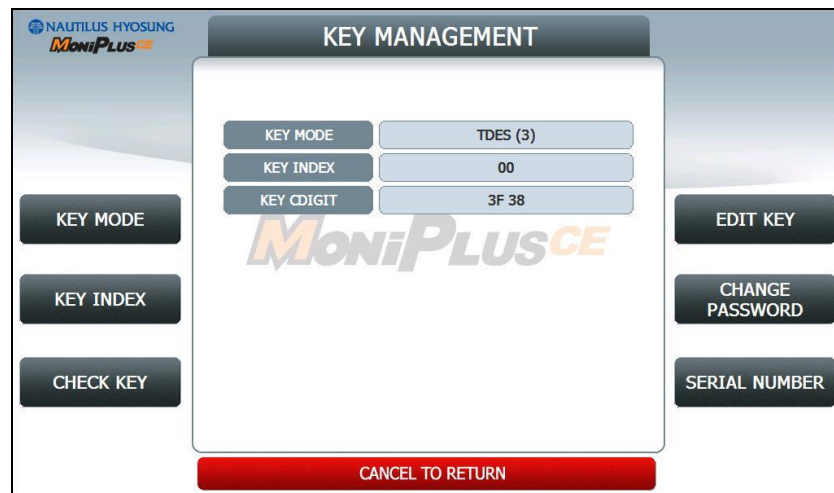

KEY MODE

- ▶ The **KEY MODE** can be changed by pressing **KEY MODE** button. Write down the description here.

There are various kinds of KEY MODE. Those are [DES], [TDES], [DUAL MASTER KEY], [MAC], [TDES, MAC], [TDES, TMAC], [UNIQUE KEY, DES], [UNIQUE KEY, TDES] and [UNIQUE KEY, MAC].

Accessing the KEY INDEX

1. Select the **HOST SETUP** in the OPERATOR FUNCTION menu.
2. Select the **KEY MANAGEMENT** in the HOST SETUP menu.
3. Select the **KEY MODE** in the KEY MANAGEMENT menu. Change the KEY MODE..

KEY INDEX

- ▶ The **KEY INDEX** function is used to set the KEY INDEX. The range is 0 to 15. You can enter multiple master keys and have to select one of them. For security issue, DP may change key index when they need to change keys.

Accessing the KEY INDEX

1. Select the **HOST SETUP** in the OPERATOR FUNCTION menu.
2. Select the **KEY MANAGEMENT** in the HOST SETUP menu.
3. Select the **KEY INDEX** in the KEY MANAGEMENT menu. Input the KEY INDEX and press ENTER key.

CHECK KEY

- ▶ The CHECK KEY function is used to display the check sum of all injected Keys. The key which is displayed as “_____” means it is in empty state. The authorized people can verify the injected key(s) with this menu after key injection.

NAUTILUS HYOSUNG
MoniPlus

CHECK KEY

[## : Only Part A] [** : Only Part B]

#0	3F 38	#8	
#1		#9	
#2		#10	
#3		#11	
#4		#12	
#5		#13	
#6		#14	
#7		#15	


CANCEL TO RETURN

Accessing the CHECK MASTER KEY


1. Select the **HOST SETUP** in the OPERATOR FUNCTION menu.
2. Select the **KEY MANAGEMENT** in the HOST SETUP menu.
3. Select the **CHECK KEY** in the KEY MANAGEMENT menu.
4. It will display the check sum of all injected master key.

EDIT KEY


- ▶ The **EDIT KEY** function is used to enter the Master Key, Unique Key and Mac Key. The authorized people by bank or DP will enter the Key(s) with this menu.

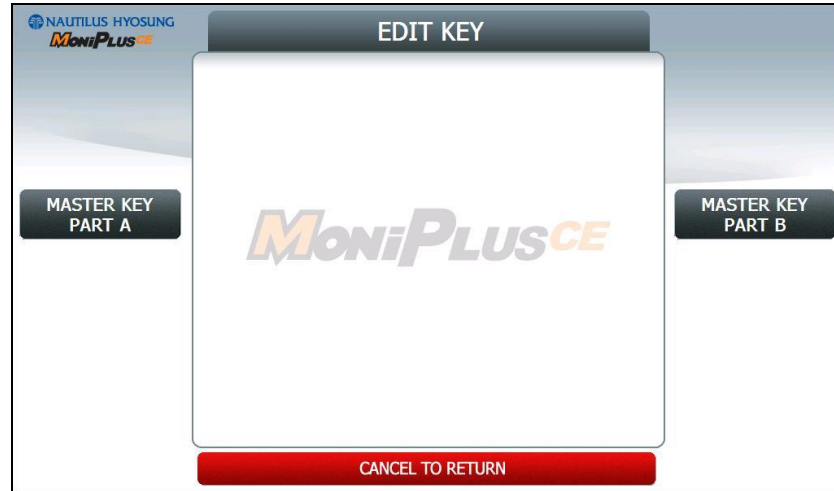


KEY MODE: [DES], [TDES], [DUAL MASTER KEY]

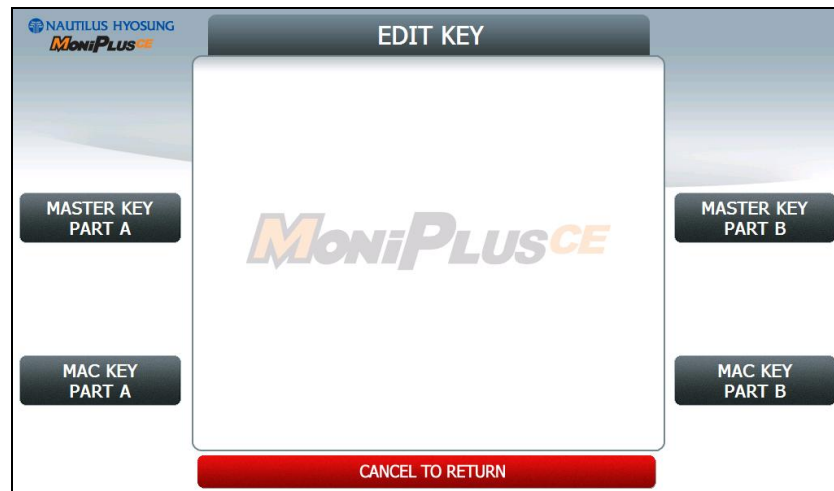

KEY MODE: [MAC], [TDES, MAC], [TDES, TMAC]

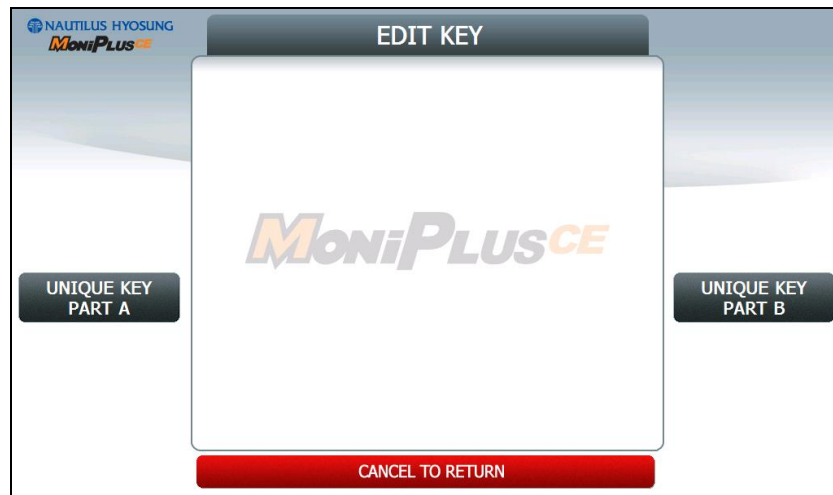

KEY MODE: [UNIQUE KEY, DES], [UNIQUE KEY, TDES]

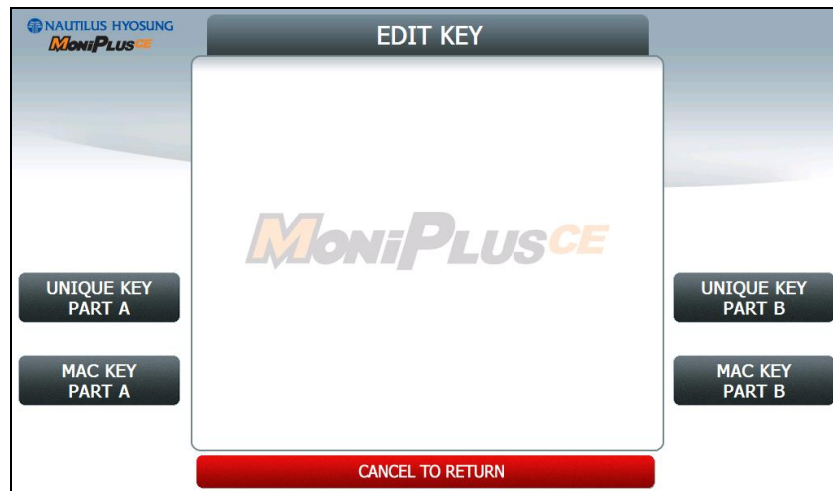

KEY MODE: [UNIQUE KEY, MAC]

Accessing the EDIT KEY

1. Select the **HOST SETUP** in the OPERATOR FUNCTION menu.
2. Select the **KEY MANAGEMENT** in the HOST SETUP menu.
3. Select the **EDIT KEY** in the KEY MANAGEMENT menu.

A. HOW TO EDIT MASTER KEY

1. Press **MASTER KEY PART A** button
2. Enter the MASTER KEY INDEX.
3. Enter the **MASTER KEY PART A**.
4. Verify the **MASTER KEY PART A**.
5. After inputting the **MASTER KEY PART A**, the **CHECK SUM** will be displayed.
Press **ENTER** after confirming the check sum.
6. Press **MASTER KEY PART B** button

7. Enter the MASTER KEY INDEX.
8. Enter the **MASTER KEY PART B**
9. Verify the **MASTER KEY PART B**.
10. After inputting the **MASTER KEY PART B**, the **CHECK SUM** will be displayed.
Press **ENTER** after confirming the check sum.

<Note!>

You have to input the **SAME KEY INDEX** for **MASTER KEY PART A** and **MASTER KEY PART B**.

B. HOW TO EDIT UNIQUE KEY

1. Press **UNIQUE KEY PART A** button
2. Enter the UNIQUE KEY INDEX.
3. Enter the **UNIQUE KEY PART A**.
4. Verify the **UNIQUE KEY PART A**.
5. After inputting the **UNIQUE KEY PART A**, the **CHECK SUM** will be displayed.
Press **ENTER** after confirming the check sum.
6. Press **UNIQUE KEY PART B** button
7. Enter the UNIQUE KEY INDEX.
8. Enter the **UNIQUE KEY PART B**
9. Verify the **UNIQUE KEY PART B**.
10. After inputting the **UNIQUE KEY PART B**, the **CHECK SUM** will be displayed.
Press **ENTER** after confirming the check sum.

<Note!>

You have to input the **SAME KEY INDEX** for **UNIQUE KEY PART A** and **UNIQUE KEY PART B**.

C. HOW TO EDIT MAC KEY

1. Press **MAC KEY PART A** button
2. Enter the MAC KEY INDEX.
3. Enter the **MAC KEY PART A**.
4. Verify the **MAC KEY PART A**.
5. After inputting the **MAC KEY PART A**, the **CHECK SUM** will be displayed. Press **ENTER** after confirming the check sum.
6. Press **MAC KEY PART B** button
7. Enter the MAC KEY INDEX.
8. Enter the **MAC KEY PART B**
9. Verify the **MAC KEY PART B**.
10. After inputting the **MAC KEY PART B**, the **CHECK SUM** will be displayed. Press **ENTER** after confirming the check sum.


<Note!>

You have to input the **SAME KEY INDEX** for **MAC KEY PART A** and **MAC KEY PART B**.


KEY MANAGEMENT (for 512K EPP)

► **START SCREEN**

If you select 'KEY MANAGEMENT' in 'HOST SETUP' screen, you will see the one as same as below.

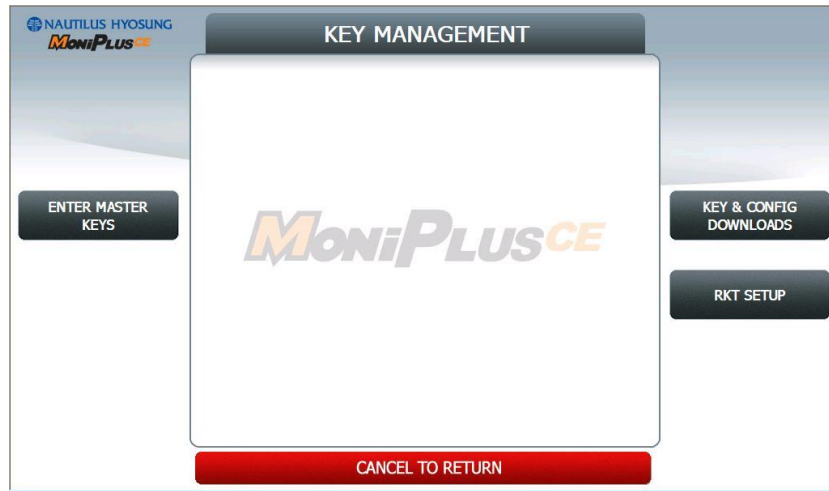

[STANDARD 1- RKT SUPPORTED]


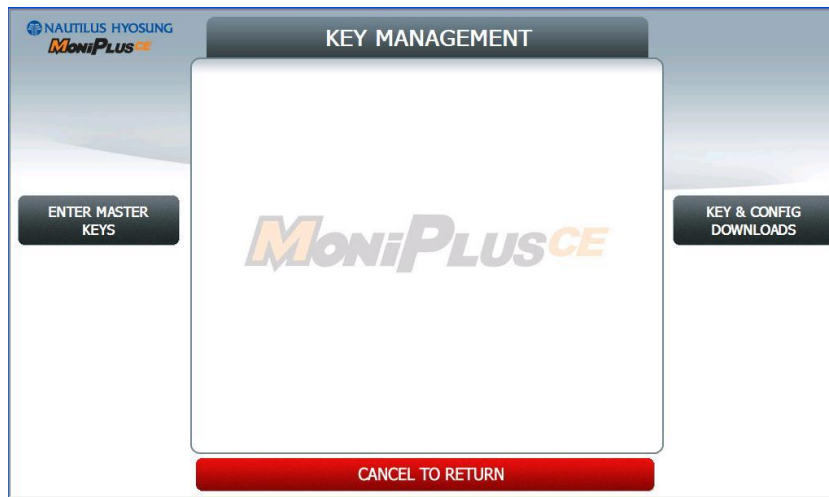


[STANDARD 3- RKT NOT SUPPORTED]

ENTER MASTER KEYS


► START SCREEN

If you select the '**ENTER MASTER KEYS**' button as depicted as above, you will see the screen as same as below to confirm whether you want to enter the screen for implanting master keys or not.

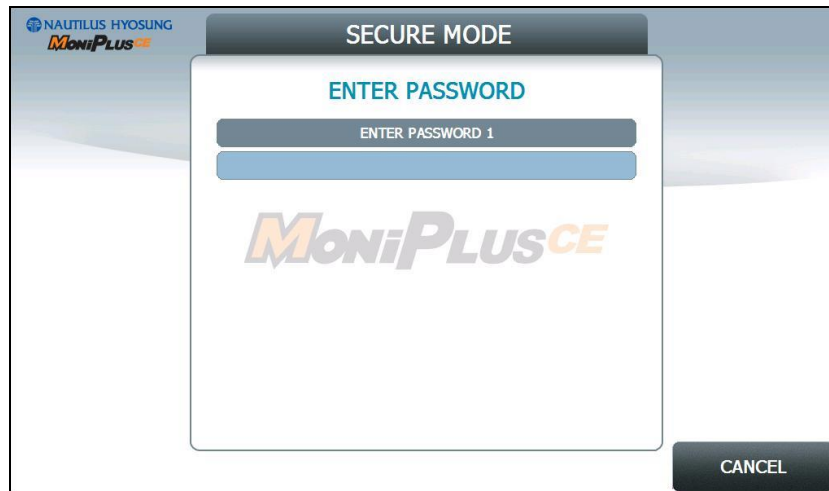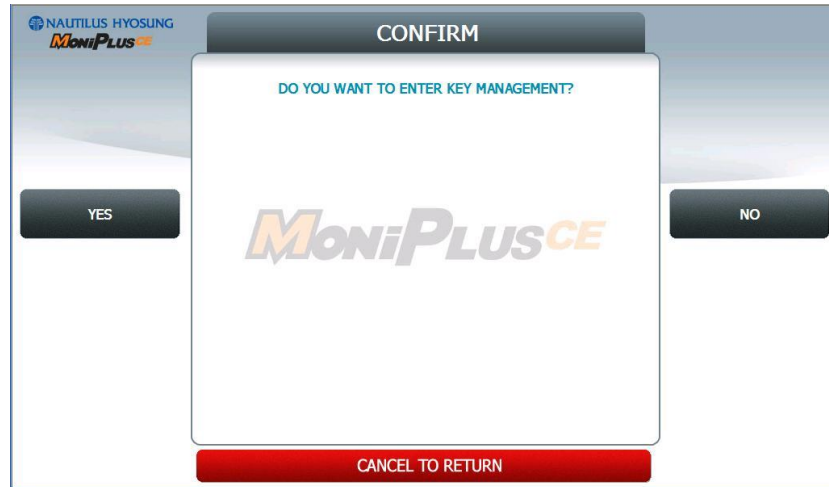


Enter the **PASSWORD 1** and **PASSWORD 2** to execute **KEY MANAGEMENT**.
(Default **PASSWORD 1** is '000000'. And default **PASSWPRD 2** is '000000' as well)

If you enter **PASSWORD 1** and **PASSWORD 2** correctly, the main screen of KEY MANAGEMENT will be displayed as below.

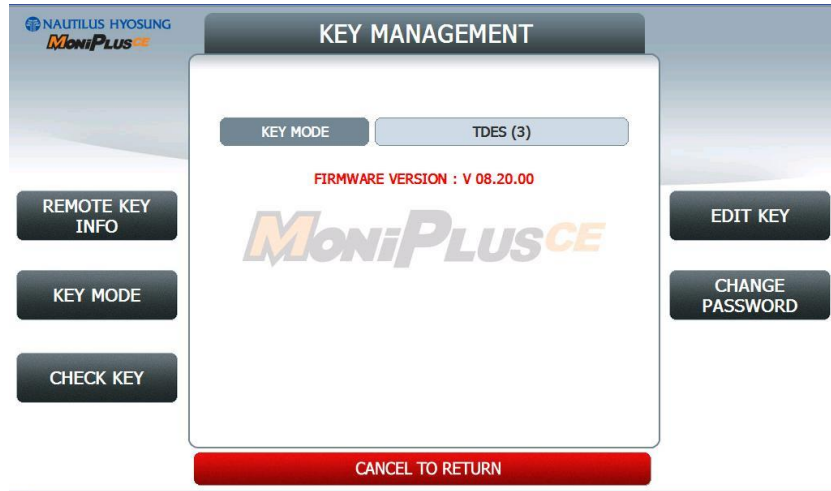

REMOTE KEY INFO

- ▶ If you choose '**REMOTE KEY INFO**' button in previous page, you will see the screen as depicted as below.

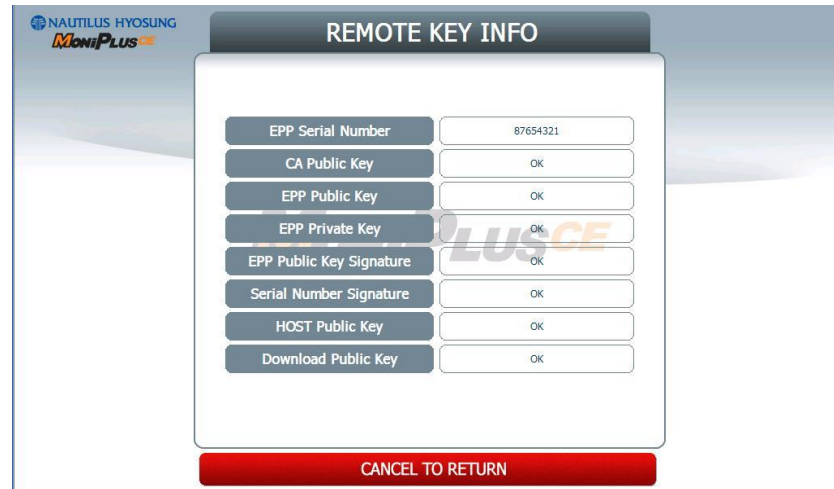

The screenshot shows a web interface titled 'REMOTE KEY INFO'. At the top left, there is a logo for 'NAUTILUS HYOSUNG' and 'MoniPlus'. The main content area contains a table with 8 rows, each representing a key element. The first row shows 'EPP Serial Number' with the value '87654321'. The remaining seven rows show 'CA Public Key', 'EPP Public Key', 'EPP Private Key', 'EPP Public Key Signature', 'Serial Number Signature', 'HOST Public Key', and 'Download Public Key', all with the value 'OK'. At the bottom of the form, there is a red button labeled 'CANCEL TO RETURN'.

Item	Value
EPP Serial Number	87654321
CA Public Key	OK
EPP Public Key	OK
EPP Private Key	OK
EPP Public Key Signature	OK
Serial Number Signature	OK
HOST Public Key	OK
Download Public Key	OK


There are 8 elements and these are used to support '**Remote Key Transfer(RKT)**' each. The 6 elements from Top one –EPP Serial Number- should be needed to implement the environment of RKT.

KEY MODE

- ▶ The **KEY MODE** can be changed by pressing **KEY MODE** button. Write down the description here.
There are various kinds of KEY MODE. Those are [**TDES(3)**], [**TDES, MAC(7)**], and [**TDES, TMAC(11)**].

CHECK KEY

- ▶ The CHECK KEY function is used to display the check sum of all injected Keys. The key which is displayed as “_____” means it is in empty state. The authorized people can verify the injected key(s) with this menu after key injection.

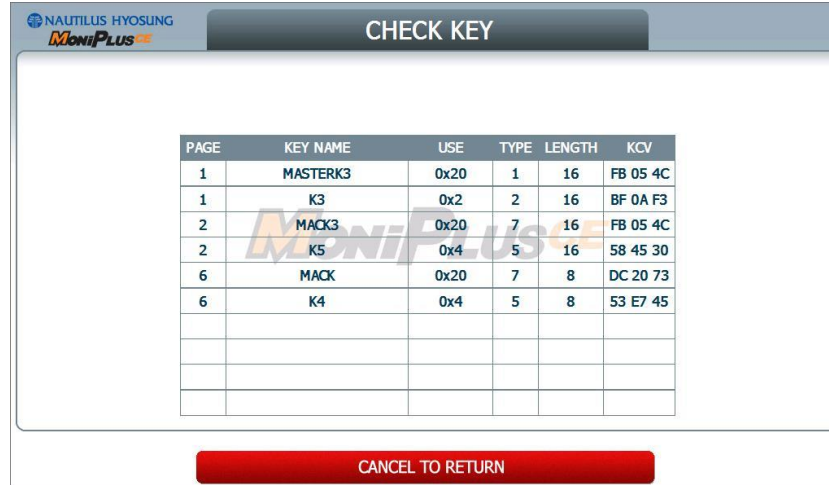


PAGE	KEY NAME	USE	TYPE	LENGTH	KCV
1	MASTERK3	0x20	1	16	FB 05 4C
1	K3	0x2	2	16	BF 0A F3
2	MACK3	0x20	7	16	FB 05 4C
2	K5	0x4	5	16	58 45 30
6	MACK	0x20	7	8	DC 20 73
6	K4	0x4	5	8	53 E7 45


CANCEL TO RETURN

EDIT KEY

- ▶ The **EDIT KEY** function is used to enter the Master Key, Unique Key and Mac Key. The authorized people by bank or DP will enter the Key(s) with this menu.

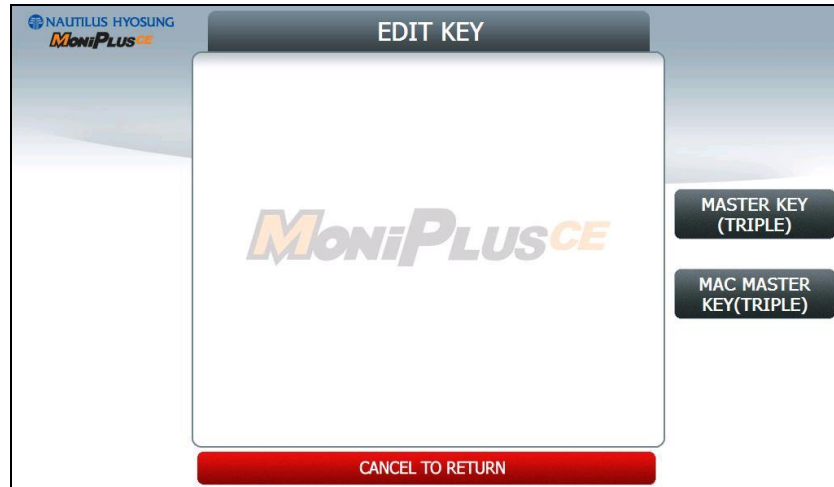

If you choose '**MASTER KEY (TRIPLE)**', which is used to encrypt the Personal Identity Number (PIN), you will see the screen as depicted below.

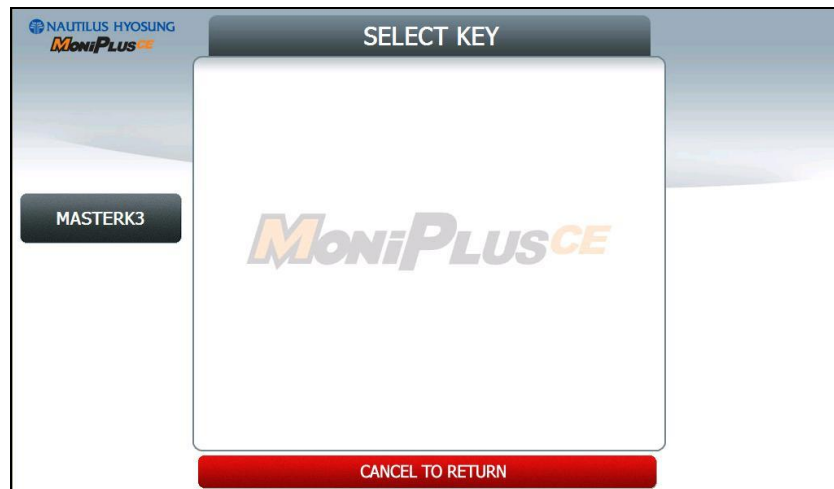

EDIT MASTERK3

- ▶ If you select the button of '**MASTERK3**', you will see the screen as depicted as below.



If you choose '**YES**' button, you will see the screen as depicted as below.



If you choose 'ENTRY' button, you will see the screen as depicted as below.



If entering the first part 32-digit master key is successful, you will see the screen as depicted as below.



In this screen, if you want to import the first part 32-digit master key, what you have to do is just selecting the 'IMPORT' button.

The next thing left is to import the second 32-digit master key. If you choose the 'IMPORT' button in previous page, you will see the screen as depicted as below to continue the procedure.



The procedure to import the second master key is as same as the first one. The whole process to import two master keys can be summarized as below.

[SUMMARY]

FOR IMPORTING 2 DIFFERENT PIN MASTER KEYS


1. Select the **HOST SETUP** in the **OPERATOR FUNCTION** menu.
2. Select the **KEY MANAGEMENT** in the **HOST SETUP** menu.
3. Select the **EDIT KEY** in the **KEY MANAGEMENT** menu.

<Note!>

1. There is **no procedure for verifying the imported master key**, so you must be careful in entering master key number.
2. If there is **no difference between PART A PIN MASTER KEY and PART B PIN MASTER KEY**, there would be error in importing whole master keys.

MASTERK3 IMPORTING ERROR

- ▶ If your importing 2 PIN MASTER KEYS is wrong, you will see the screen as depicted as below.

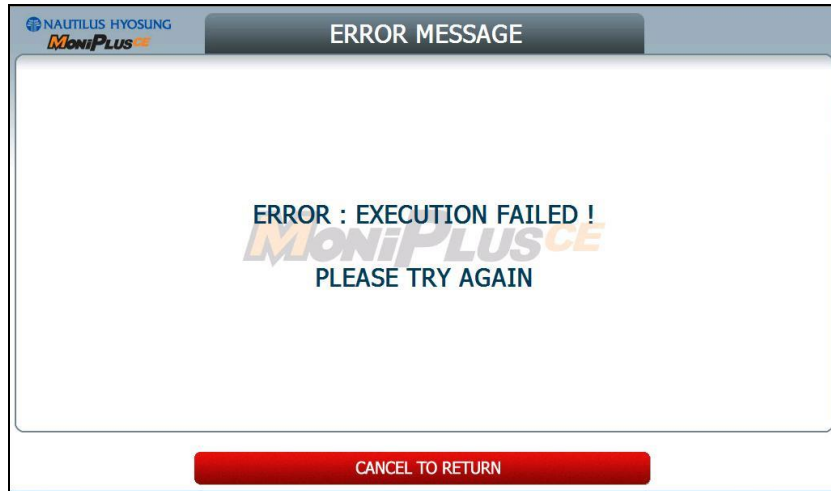


EDIT MACK3

- ▶ **Editing MAC MASTER KEYS is same to editing PIN MASTER KEYS.** But if user choose 'TDES' by 'KEY MODE' button, there is no need to import MAC MASTER KEYS. So the screen as depicted as below is only shown when a owner of ATM choose 'TDES, TMAC(11)' mode.



For Example, if a owner of ATM select 'TDES, MAC(7)' mode, the screen as depicted as below will be shown on the screen.

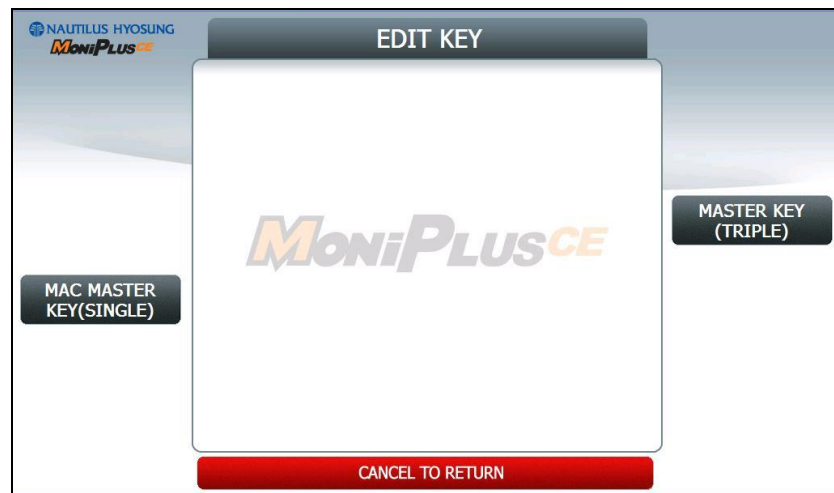


And if you choose MAC MASTER KEY(SINGLE) button, you will see the screen as depicted as below.




CHANGE PASSWORD

- ▶ If you want to change the password for entering **'KEY MANAGEMENT'**, you can do that by just selecting change password in **KEY MANAGEMENT** screen. If you push (or touch) the **'CHANGE PASSWORD'** button, you can see the screen as depicted as below.

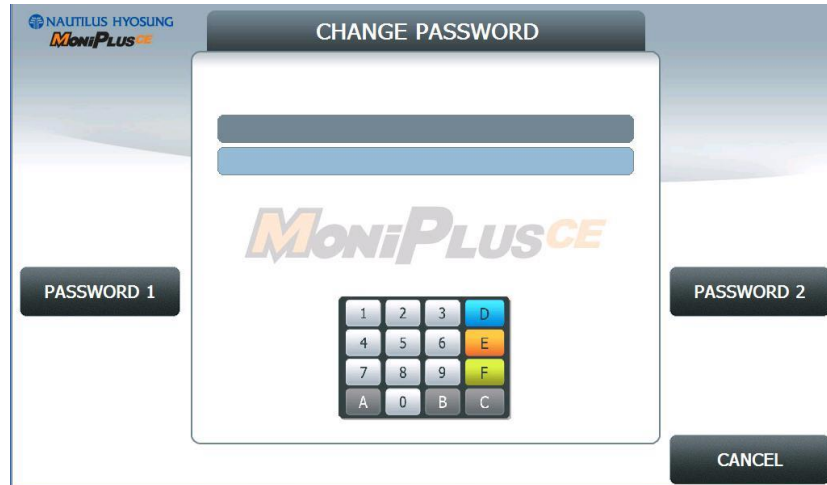

KEY & CONFIG DOWNLOADS


- ▶ If a user want to receive '**WORKING KEY**' (NOT RECEIVING MASTER KEY!!!), he/she can do that by just selecting 'KEY & CONFIG DOWNLOAD' on the 'KEY MANAGEMENT ' screen as depicted as "**ENTER MASTER KEY**" (explained before) . After selecting it, the screen as below would appear.

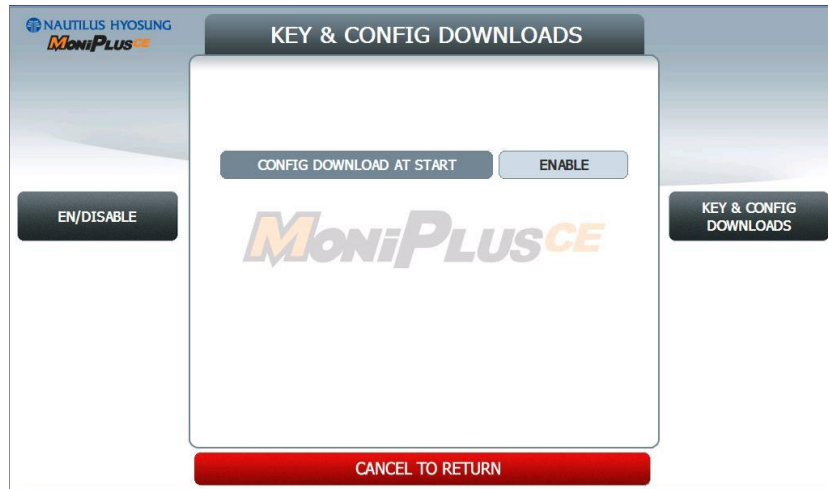

If '**CONFIG DOWNLOAD AT START**' is set as '**ENABLE**', the ATM would receive a '**WORKING KEY**' when the ATM is switched on.

RKT SETUP

- ▶ If a user want to receive '**MASTER KEY**' (NOT RECEIVING WORKING KEY!!!), he/she can do that by just selecting 'RKT SETUP' on the 'KEY MANAGEMENT' screen as depicted as **5.9.9.1(explained before)** . After selecting it, the screen as below would appear.

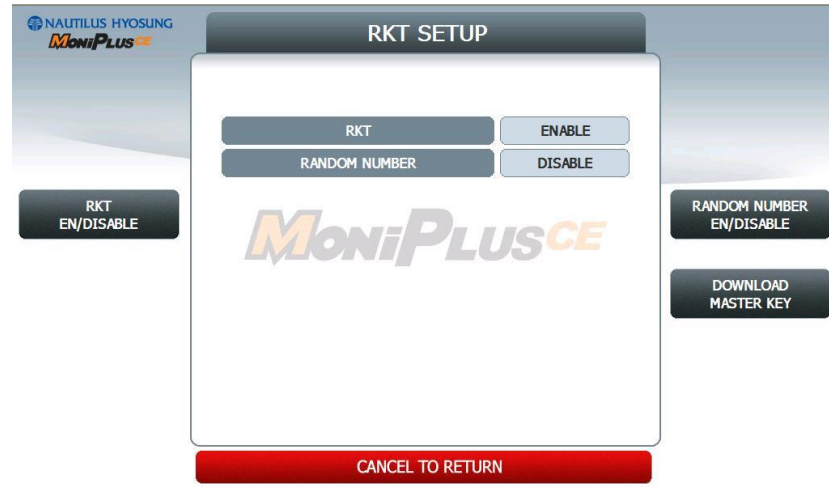

First of all, this RKT menu can only appear in the case of user`s selecting the message format of '**STANDARD1**'. So do not be embarrassed at seeing no appearance of RKT menu.

If '**RKT EN/DISABLE**' is set as '**ENABLE**', the hidden button would be toggled up to be seen. '**RANDOM NUMBER EN/DISABLE**' makes it possible to insert random number into transmitted **MASTER KEY** to enhance the security of ATM – HOST communication.

'**DOWNLOAD MASTER KEY**' make it feasible to receive the **MASTER KEY** from a **HOST** at once.

TELEPHONE NUMBER (Dial-Up only)

- ▶ If you press each button on this menu, phone number of host can be input. You can input character, number and special symbol up to 1~20 digits by using '<' or '>'. This function is used to enter the primary phone number and the back-up phone number of the host. When dialing to host is failure (busy, no answer or etc), ATM switches to other phone number automatically.

The screenshot shows the 'TELEPHONE NUMBER' menu interface. At the top left, it displays 'NAUTILUS HYOSUNG' and 'MoniPlus'. The main title is 'TELEPHONE NUMBER'. Below the title, there are two input fields: 'HOST PHONE 1' with the value '0589' and 'HOST PHONE 2' with the value '0590'. Below these fields are two buttons labeled 'HOST PHONE 1' and 'HOST PHONE 2'. The 'MoniPLUSCE' logo is centered in the background. At the bottom, there is a red button labeled 'CANCEL TO RETURN'.

HOST ADDRESS

- ▶ **HOST ADDRESS** contains **URL EN/DISABLE**, **HOST ADDRESS 1**, **PORT NUMBER 1**, **HOST ADDRESS 2** and **PORT NUMBER 2**.


Press **PORT NUMBER 1** and **PORT NUMBER 2** buttons, and then the values can be input on this screen. These values can be saved by pressing **ENTER** key. **HOST ADDRESS 1** and **HOST ADDRESS 2** buttons go to the next page. To go back to the previous screen, press the **CANCEL** key in pinpad.

The screenshot shows the 'HOST ADDRESS' configuration screen. At the top left is the 'NAUTILUS HYOSUNG MoniPlus' logo. The main title is 'HOST ADDRESS'. The screen contains several input fields and buttons:

- URL EN/DISABLE** button on the left.
- DISABLE** button next to the URL EN/DISABLE field.
- ADDRESS1** input field.
- ADDRESS2** input field.
- PORT NUMBER1** input field with a value of **0**.
- PORT NUMBER2** input field with a value of **0**.
- ADDRESS1** button on the right.
- ADDRESS2** button on the right.
- PORT NUMBER1** button on the right.
- PORT NUMBER2** button on the right.
- CANCEL TO RETURN** button at the bottom center.

HOST ADDRESS 1

- ▶ The **HOST ADDRESS 1** function is used to edit the host address 1.
Please input the host address 1 in the field and select **OK** button. If it succeeded, **“OPERATION SUCCESSFUL!”** displays.

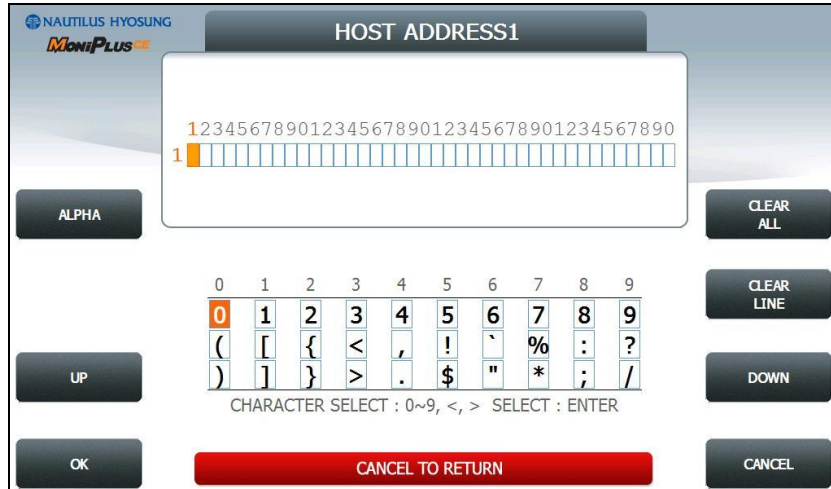


[Function Key Type]




[Touch Type]

HOST ADDRESS 2

- ▶ The **HOST ADDRESS 2** function is used to edit the host address 2. Please input the host address 2 in the field and select **OK** button. If it succeeded, “**OPERATION SUCCESSFUL!**” displays.

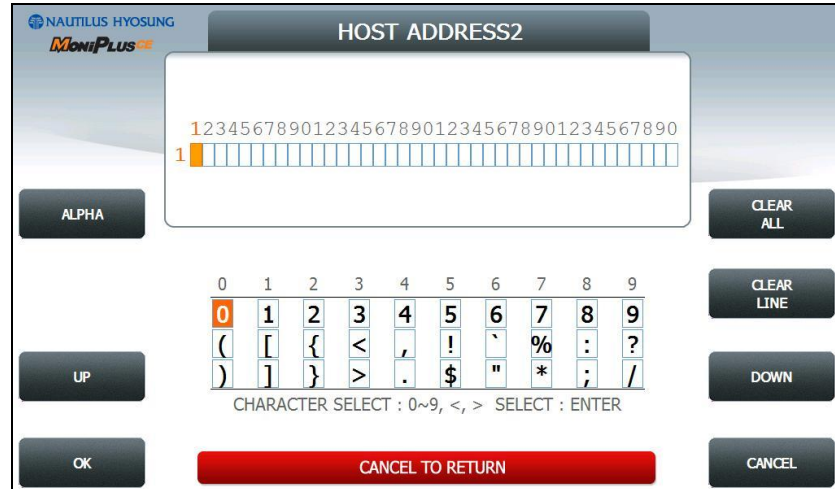

[Function Key Type]

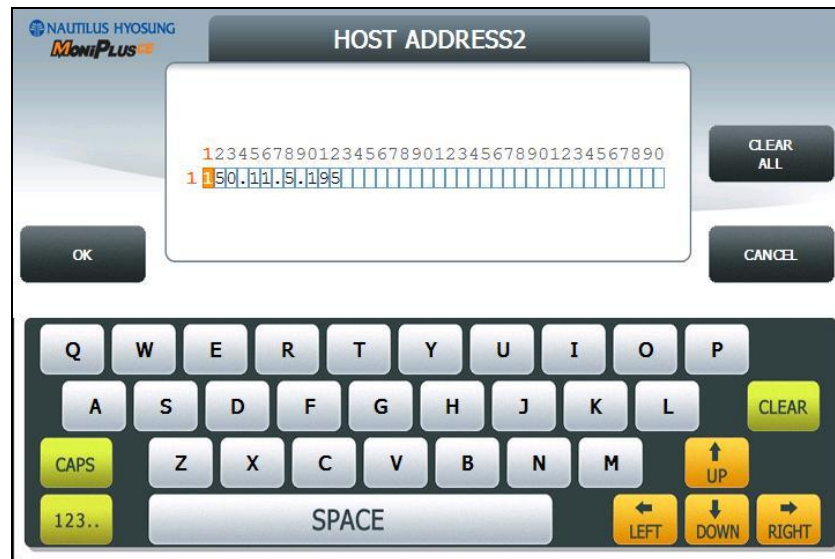


[Touch Type]


TERMINAL ID

- ▶ The **TERMINAL ID** function is used to edit the terminal id number of ATM. Please input the terminal id in the field and select **OK** button. If it succeeded, “**OPERATION SUCCESSFUL!**” displays.

Host will identify ATM by looking at terminal ID. Terminal ID will be included in host message and will be printed on the receipt.

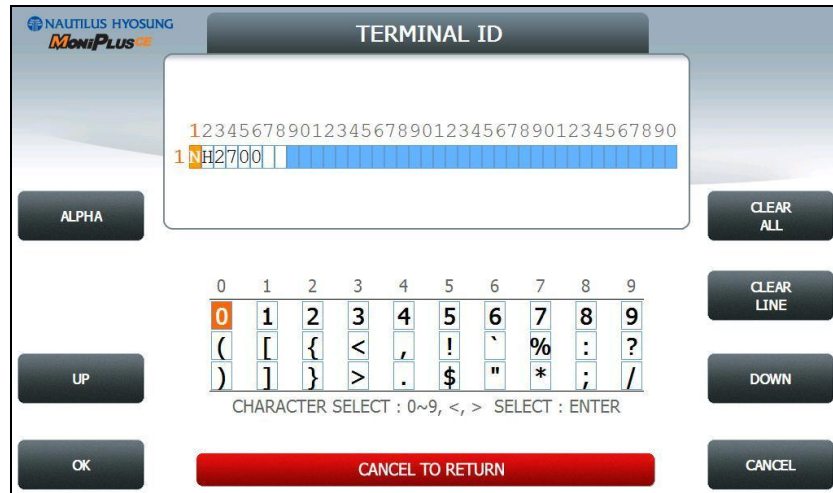


[Function Key Type]

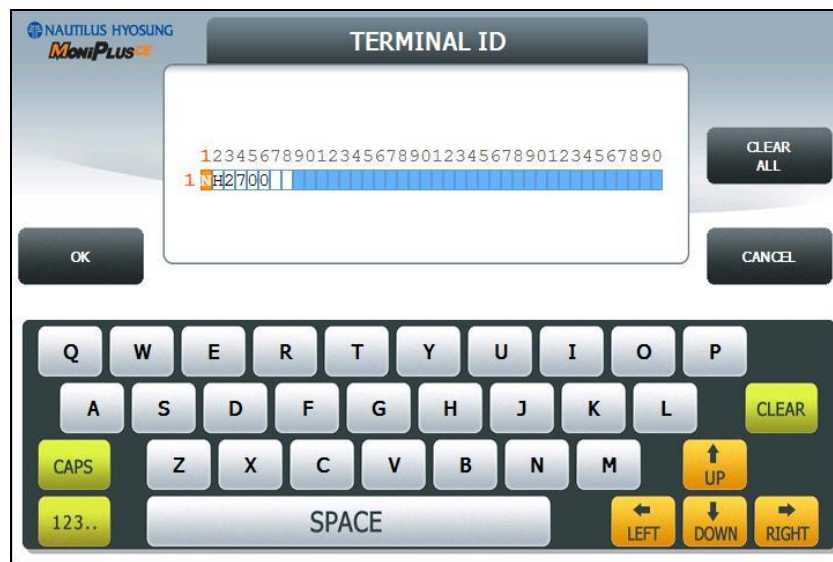

[Touch Type]


HEALTH CHECK MESSAGE

- ▶ If you press **EN/DISABLE** button, either "ENABLE" or "DISABLE" can be selected. ATM sends its status periodically to the host when **HOST SEND** is set up to "Enable". The interval is dependent on "**SEND INTERVAL**".
If you press **SEND INTERVAL** button, the value of SEND INTERVAL can be adjusted. (1 ~ 24). This value is saved by pressing **ENTER** button.

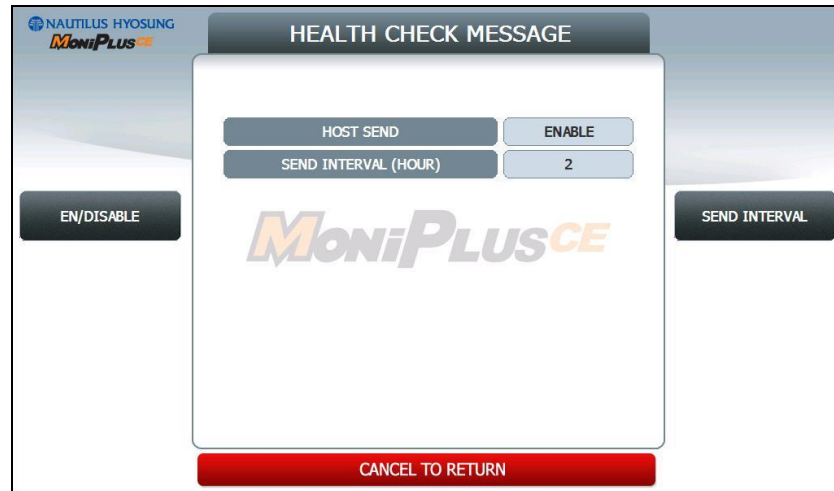

REMOTE MONITOR


- ▶ Display which is to set the information for using Remote Management System (RMS)
 1. **RMS EN/DISABLE** function is used to connect to the RMS mode to enable or to disable. The default option is “ENABLE”.
 2. **RMS STATUS SEND EN/DISABLE** function is used to send the status message to RMS in enable or in disable.
 3. The **RMS PASSWORD** function is used to set the RMS password to connect to ATM from RMS.

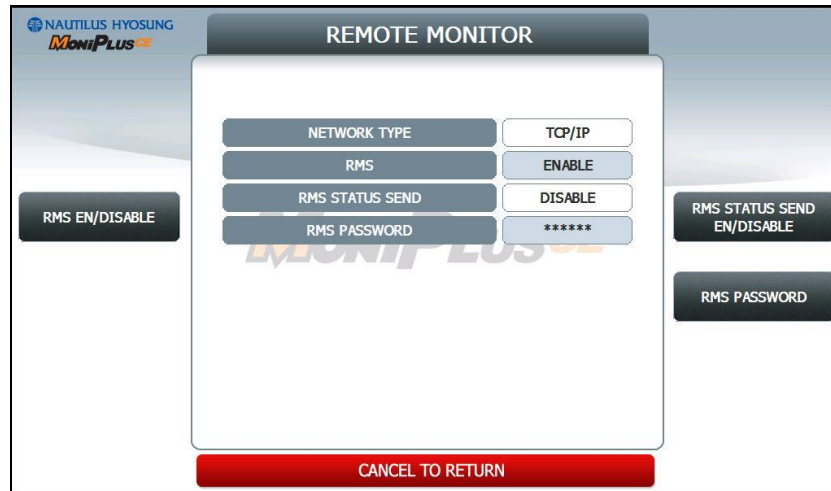


RMS EN/DISABLE

[DIALUP] Display which is to set the **RMS RING COUNT** for the reception on standby of the ATM.

[TCP/IP] Display which is to set the **RMS LISTENING PORT** for the reception on standby of the ATM. Default port is 5555

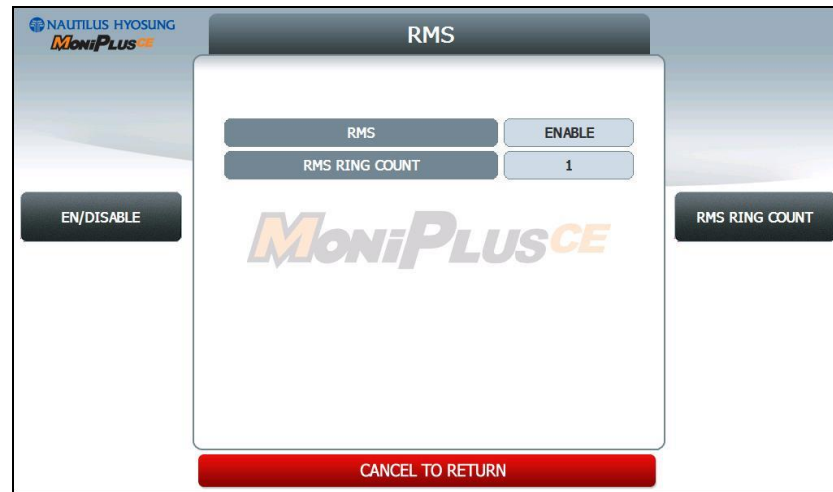

[DIALUP]

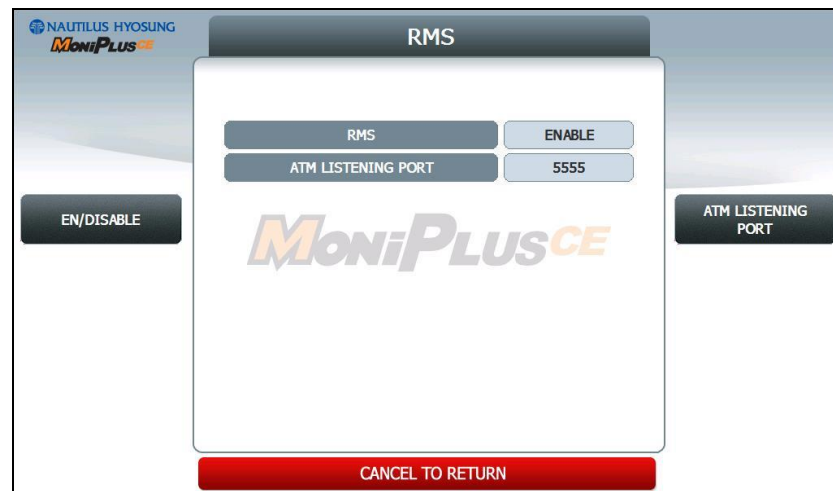

[TCP/IP]

RMS STATUS SEND EN/DISABLE

- ▶ Display which is to set the function to transfer STATUS to RMS from the ATM.

Setting	Value
STATUS SEND	ENABLE
INTERVAL	0
PHONE 1	0046
PHONE 2	0046

[DIAL-UP]

1. RMS STATUS SEND

- Display whether RMS STATUS SEND function is ENABLE or DISABLE.
- Set the value using **EN/DISABLE** button.

2. INTERVAL

- Display “RMS STATUS SEND” cycle (unit: hours)
- Set the value using **INTERVAL** button. (Input the number from 1 to 24.)

3. PHONE 1, PHONE 2

- Display RMS TELEPHONE NUMBER for RMS COMMUNICATION
- Set the values using **PHONE NUMBER 1** and **PHONE NUMBER 2**. (Input the number up to 20.)

[TCP/IP]

1. RMS STATUS SEND

- Display whether RMS STATUS SEND function is enabled or not.
- Set the value using **EN/DISABLE** button.

2. RMS INTERVAL

- Display “RMS STATUS SEND” cycle (unit: hours)
- Set the value using **INTERVAL** button. (Input the number from 1 to 24.)

3. URL EN/DISABLE

- Display whether to use URL or IP ADDRESS. If the value is ENABLE, that means the ATM uses URL ADDRESS.
- Set the value using **URL EN/DISABLE** button.

4. RMS ADDRESS


- Display “RMS ADDRESS”.
- Set the value using **RMS ADDRESS** button. If you press this button, It goes to next screen.

5. RMS LISTENNING PORT


- Display “RMS LISTENNING PORT”.
- Set the value using **RMS LISTENNING PORT** button. (Input the number from 0 to 65535)
- Default port is 9999

RMS ADDRESS

- ▶ The **RMS ADDRESS** function is used to edit the RMS address. Please input the RMS address in the field and select **OK** button. If it succeeded, **“OPERATION SUCCESSFUL!”** displays

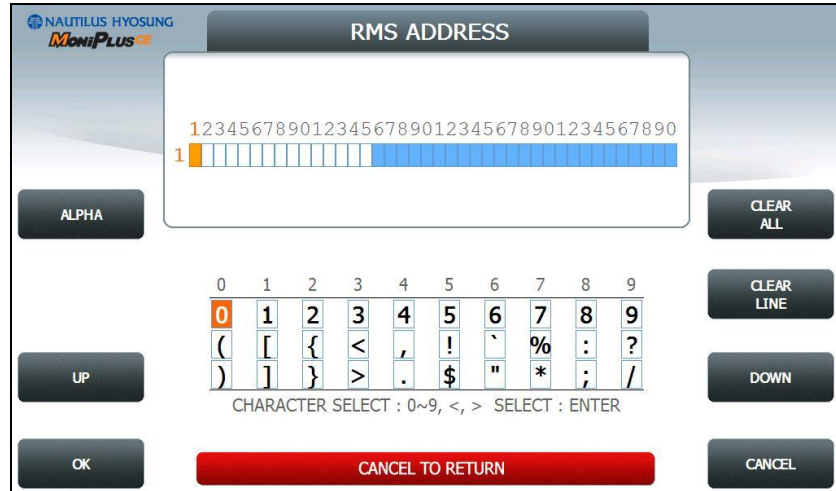

[Function Key Type]

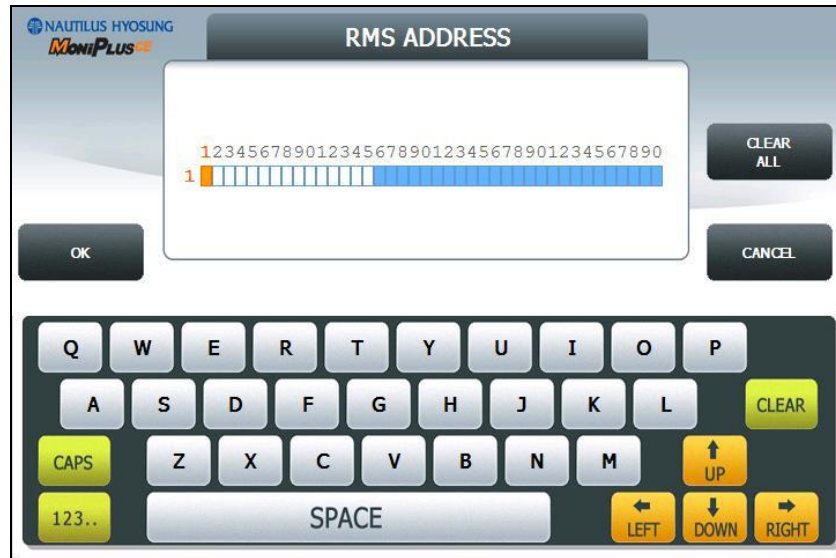


[Touch Type]

ROUTING ID


- ▶ The **ROUTING ID** function is used to edit the Routing ID Number of ATM. Routing ID refers to the Bank ID. This field is contained to STANDARD 1, STANDARD 2 and EPS format.

Please input the routing id in the field and select **OK** button. If it succeeded, **“OPERATION SUCCESSFUL!”** displays.

To go back to the previous screen, press the **CANCEL** key in pinpad.

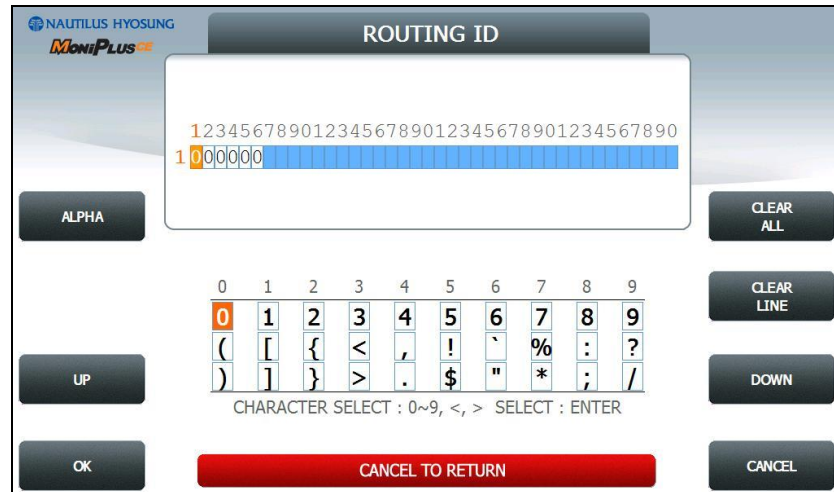

[Function Key Type]

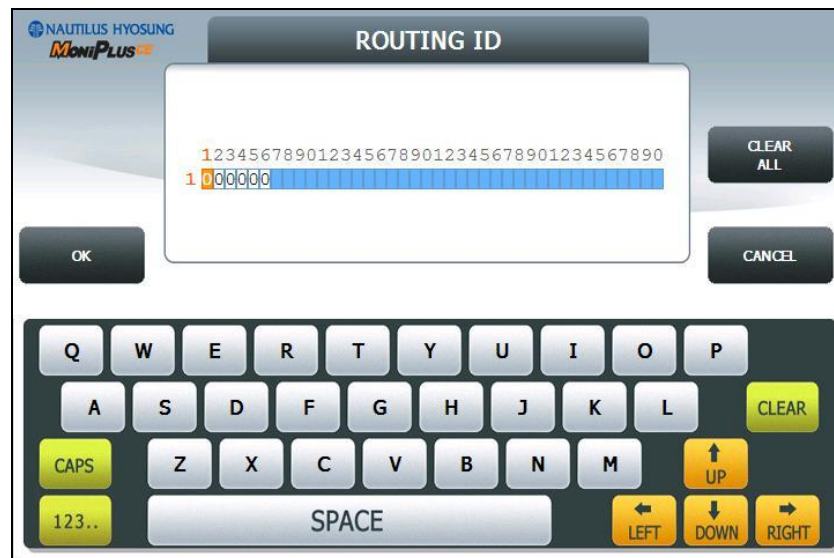

[Touch Type]

AUTO DAY TOTAL

- **AUTO DAY TOTAL** feature allows the ATM to complete a Day Total operation (Without Actually closing out the machine) at a predetermined time each day. This is useful if you are doing accounting of your ATM on a day-to-day basis. Your processor cuts off its transactions each day at a set time. By enabling Auto Day Total at the same time, your day's balance should match the host. This information will appear as a journal record so, you will need to access your journal to print or view the totals.

1. EN/DISABLE

- Display whether AUTO DAY TOTAL function is enabled or not.
- Set the value using **EN/DISABLE** button.

2. TOTAL TYPE


- Display AUTO DAY TOTAL TYPE
 DAY TOTAL: ATM sends total to your processor then initialize total
 TRIAL DAY TOTAL: ATM sends total to your processor
- Set the value using **TOTAL TYPE** button.

3. HOUR / MINUTE

- Display the time for the ATM to total itself
- Set the value using **HOUR** and **MINUTE** button.

3.8 TRANSACTION SETUP

- ▶ This transaction setup menu contains **DISPENSE LIMIT**, **LOW CURRENCY CHECK EN/DISABLE**, **FAST CASH** and **DENOMINATION**. By pressing each button, you can execute each function or enter each sub menu. To go back to the previous screen, press the **CANCEL** key in pinpad.

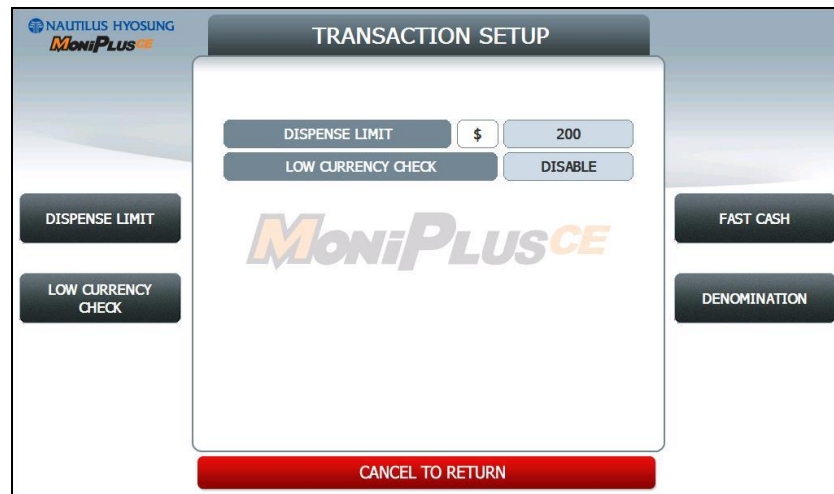

1. DISPENSE LIMIT

This function is used to set the maximum amount of notes that can be dispensed per transaction. The amount must be a multiple of denomination. And the maximum dispensed count a transaction must not be over a total of 50 notes.

(eg. You can't input amount over \$5000 on DISPENSE LIMIT if the denomination is set as \$100 on ATM.)

<Note!>

In MX4000W, the maximum limit to dispense notes in one transaction physically is 20. So you can't input amount over \$400 if the denomination is set as \$20 on ATM.


2. LOW CURRENCY CHECK EN/DISABLE

This function is used to set the detection of cassette low level (100 bills or less). If enabled, hardware will report the low condition to the software and the machine will go to "OUT OF SERVICE" mode under low note condition.

FAST CASH

- ▶ **FAST CASH** function is used to set the cash amount which is to be displayed on the FAST CASH screen. The maximum amount must be less than the **DISPENSE LIMIT**.

You can set 6 kinds of values which are frequently requested by customer using this function. By using this function, customers withdraw the money more easily.

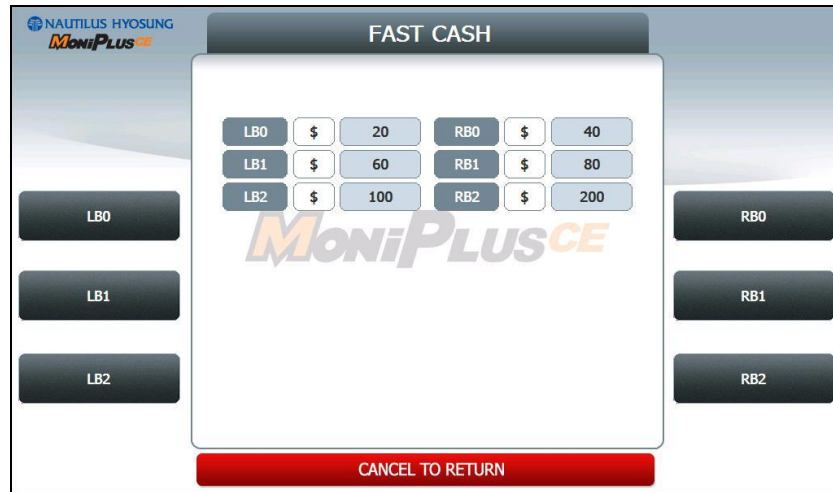

DENOMINATION

- ▶ This function is used to set the denomination of note to be set in the cassette. Pressing function key beside menu button selects the cassette to set the denomination of note. Input the note value you want and press the **ENTER** key in the pinpad. If you completed the all cassette setting, you have to press **APPLY** button to effect the value changes.

DENOMINATION		
MUST PRESS 'APPLY' BUTTON TO EFFECT THE VALUE CHANGES		
CDU CURRENCY	USD	
1ST CASSETTE	10	
2ND CASSETTE	N/A	
3RD CASSETTE	N/A	
4TH CASSETTE	N/A	
CANCEL TO RETURN		APPLY

<Note!>

After Clearing all the information of NVRAM, the information of currency would be deleted. So you must set the currency again as \$10, 20, 50, 100, 200. If there is no information of currency, the screen will display error code of '20005(00)'.

<Note!>

In setting the information of currency, you must log on as Master authority-default password for logging on as Master is "555555" as explained in the first chapter. -and before pressing **APPLY** button, the door of ATM must be opened. This is because only person who have the authority to open the door, can set the currency information which is very important to the owner of ATM as he want to change

Chapter 4. SITE MAP

- This site map shows the structure of the operator menu tree to aid in searching menu. In case of touch type, if you press each menu **SETTLEMENT**, **JOURNAL**, **REPORT**, **DIAGNOSTICS**, **CUSTOMER SETUP**, **SYSTEM SETUP**, **HOST SETUP** or **TRANSACTION SETUP**, then it will enter each sub-menu.



Chapter 5. QUICK REPLENISH

- ▶ This menu provides convenience for replenishing note at once. This menu consists of **DAY TOTAL**, **CASSETTE TOTAL**, **ADD CASH** and **RESULT**.




If you press **YES** button, the QUICK REPLENISH will start.


5.1 DAY TOTAL / CASSETTE TOTAL

► It will perform **DAY TOTAL** and **CASSETTE TOTAL** first.

1. **DAY TOTAL** : Do settlement with host. After settlement, clear transaction information.

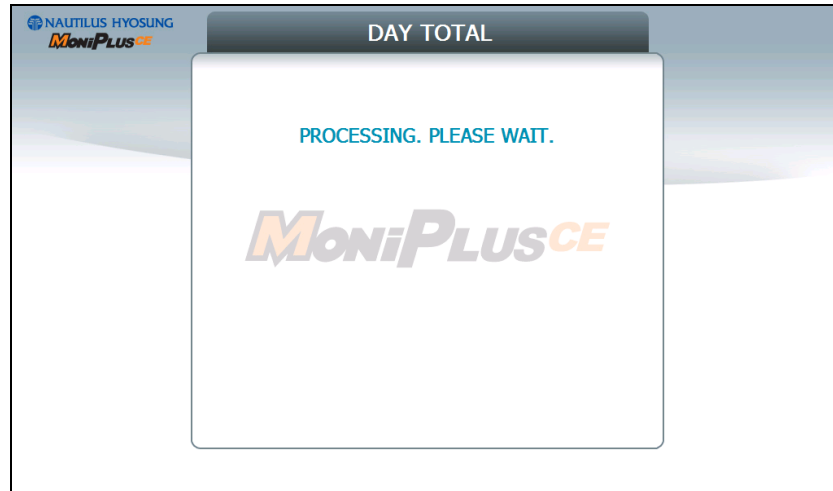

2. **CASSETTE TOTAL** : Clear note count information.

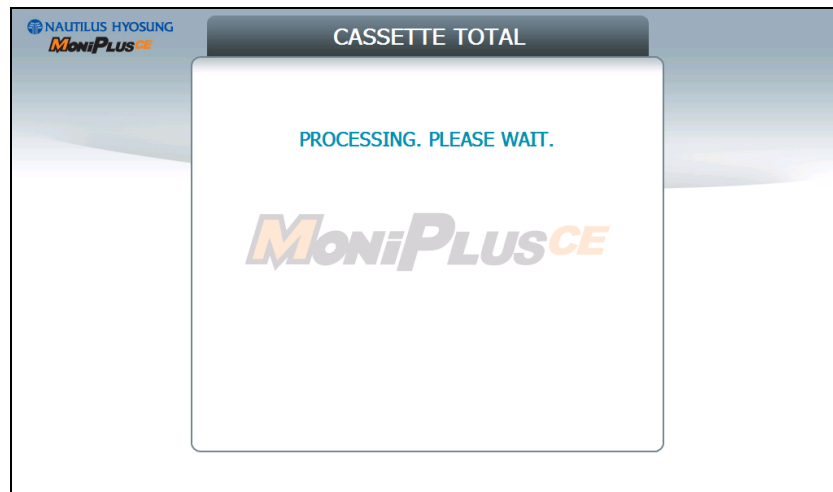

5.2 ADD CASH

- ▶ After performing **DAY TOTAL** and **CASSETTE TOTAL**, **ADD CASH** screen will be shown as below.

By pressing button on this menu, you can select cassette to add note count. (Cassette numbers are designated from top to bottom). Input the note count you want to add and press the **ENTER** key in the pinpad. If you completed the all cassettes, you have to press **APPLY** button to effect the value changes.

<Note!>

The total note count you enter must not exceed the maximum note count.
(Max. note count : 2,000/CST)

NAUTILUS HYOSUNG
MoniPlus[®]

ADD CASH

MUST PRESS 'APPLY' BUTTON TO EFFECT THE VALUE CHANGES

	DENOM.	BILL COUNT	
1ST CST	\$20	0	
2ND CST	N/A	N/A	
3RD CST	N/A	N/A	
4TH CST	N/A	N/A	

1ST CST

CANCEL TO RETURN

APPLY

5.3 RESULT

- ▶ After performing **QUICK REPLENISH**, the result will be shown as below.



Chapter 6. QUICK CONFIGURATION

- ▶ This menu provides convenience to configure **ATM Setup Information** at once. This menu consists of **NETWORK SETUP**, **MESSAGE FORMAT SETUP**, **TERMINAL ID SETUP**, **PASSWORD SETUP** and **RESULT CONFIGURATION**.




6.1 TCP/IP

- ▶ This chapter shows how to configure for TCP/IP Setup Information.


COMMUNICATION

- ▶ This is to set up a type of line to communicate with Host. Select **TCP/IP**. In case of setting up TCP/IP, communicate with host using LAN.

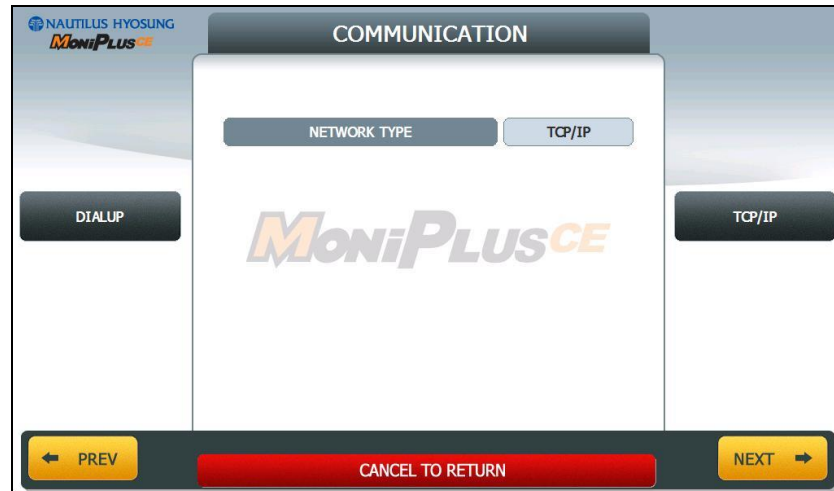

TCP/IP TYPE

- ▶ In case of supporting **TCP/IP**, this is providing a function setting up communication flow to use when communicating with host. In this menu, you can change **TCP/IP TYPE** and can decide whether 'ENABLE' or 'DISABLE' about **SSL OPTION**. There are three kind of **TCP/IP** type in this TCP/IP COMMUNICATION menu (**STANDARD TCP/IP, VISA FRAMED TCP/IP, and ACK CONTROLLED TCP/IP**).

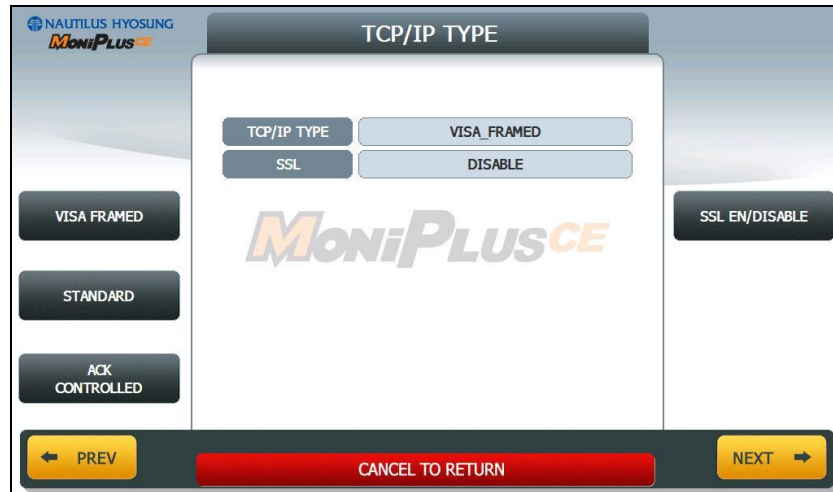

[The screen except for USA]

<Note!>

When you press **NEXT** button, if you configured TCP/IP TYPE to VISA FRAMED, then it goes to Section “EOT/ENQ OPTION”. If not, then it goes to Section “HOST ADDRESS”




[The screen for USA]

SSL CERT. EN/DISABLE was explained before. So in this chapter it will be skipped.

EOT/ENQ OPTION

- ▶ **EOT/ENQ OPTION** contains **GENERAL**, **EOT OPTIONAL**, **NO EOT REQUIRED** and **NO ENQ REQUIRED** functions. You can select one of these options.

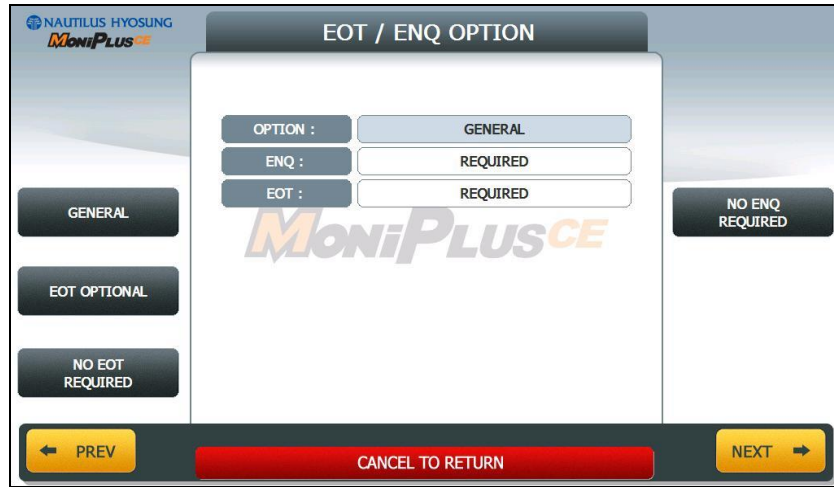

HOST ADDRESS


- ▶ **HOST ADDRESS** contains **URL EN/DISABLE**, **HOST ADDRESS 1** and **PORT NUMBER 1**.

Press **PORT NUMBER 1** button, and then the values can be input on this screen. These values can be saved by pressing **ENTER** key. The **HOST ADDRESS 1** button is used to edit the host address 1. Please input the host address 1 in the field.

The screenshot shows the 'HOST ADDRESS' configuration screen. At the top left is the 'NAUTILUS HYOSUNG MoniPlus' logo. The title 'HOST ADDRESS' is centered at the top. The main area contains three input fields: 'HOST URL' with a 'DISABLE' button to its right, 'ADDRESS 1' (empty), and 'PORT NUMBER 1' with a '0' button to its right. On the left side, there is an 'EN/DISABLE' button. On the right side, there are 'ADDRESS 1' and 'PORT NUMBER 1' buttons. At the bottom, there are three navigation buttons: 'PREV' (left arrow), 'CANCEL TO RETURN' (red bar), and 'NEXT' (right arrow).

TERMINAL DHCP

- ▶ If **DHCP** value is **ENABLE**, ATM uses **DYNAMIC IP** to connect to host. Otherwise, ATM uses **STATIC IP**. If you configure DHCP value to **DISABLE** and press **NEXT**, it goes to **TERMINAL IP SETUP** Screen.

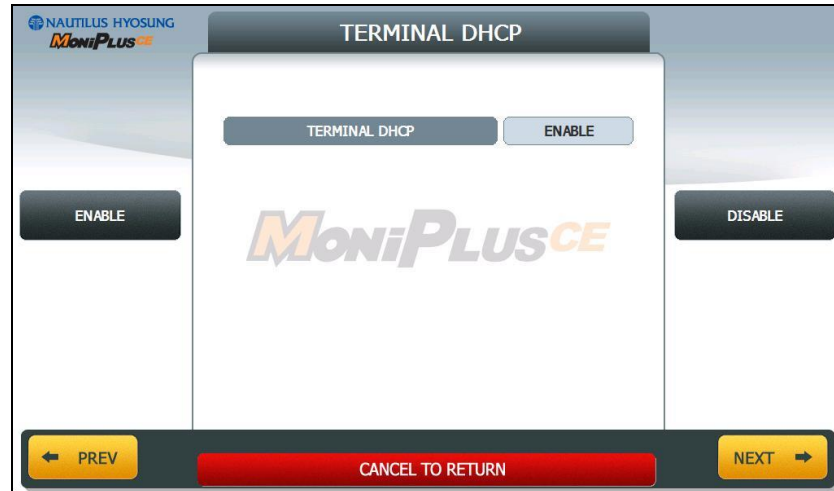

<Note!>

When you press **NEXT** button, if you configured DHCP to **DISABLE**, then it goes to Section "TERMINAL IP". If not, then it goes to Section "MESSAGE FORMAT"

TERMINAL IP

- ▶ Set up STATIC IP using **IP ADDRESS**, **SUBNET MASK**, **GATEWAY** and **DNS** buttons.

It is able to input up to 15 units such as XXX.XXX.XXX.XXX


The screenshot displays the 'TERMINAL IP' configuration interface. At the top left, the logo for NAUTILUS HYOSUNG MoniPlus is visible. The main area contains four rows of configuration fields, each with a label button on the left and a text input field on the right. The fields are: IP ADDRESS (192.168.0.100), SUBNET MASK (255.255.0.0), GATEWAY (192.168.0.254), and DNS (0.0.0.0). Below these fields are four additional buttons: IP ADDRESS, GATEWAY, SUBNET MASK, and DNS. At the bottom of the screen, there are three navigation buttons: a yellow 'PREV' button with a left arrow, a red 'CANCEL TO RETURN' button, and a yellow 'NEXT' button with a right arrow.

Field Label	Value
IP ADDRESS	192.168.0.100
SUBNET MASK	255.255.0.0
GATEWAY	192.168.0.254
DNS	0.0.0.0

MESSAGE FORMAT

- ▶ This menu sets up message format to use during communicating with Host. You can select one of message type to communicate with a data processing company or bank in this menu (**STANDARD1**, **STANDARD2**, **STANDARD3** and **EPS**).

STANDARD 1 is a HYOSUNG message type and **STANDARD 2** is a CSP200 message type, **STANDARD 3** is Triton 9600 message type and **EPS** is an extended CSP200 message type.

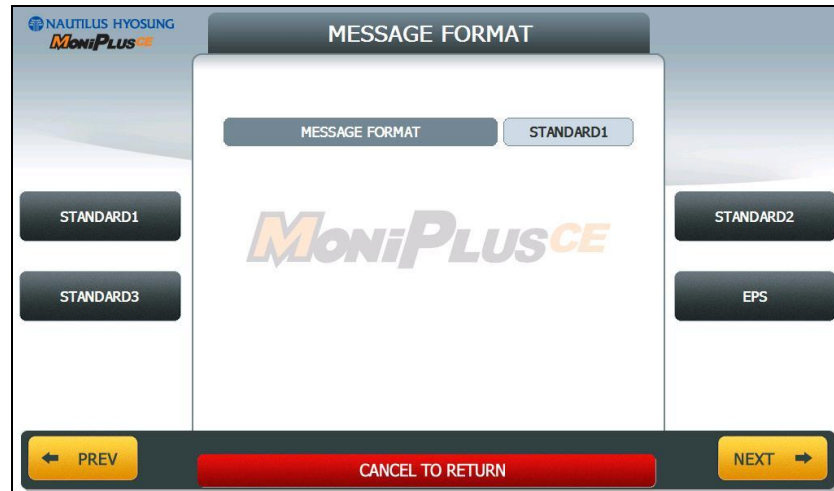


<Note!>

When you press **NEXT** button, if you configured MESSAGE FORMAT to STANDARD 3, then it goes to Section "STANDARD3 OPTION". If not, then it goes to Section "ROUTING ID"

ROUTING ID

- ▶ The **ROUTING ID** function is used to edit the Routing ID Number of ATM. Routing ID refers to the Bank ID. This field is contained to STANDARD 1, STANDARD 2 and EPS format.

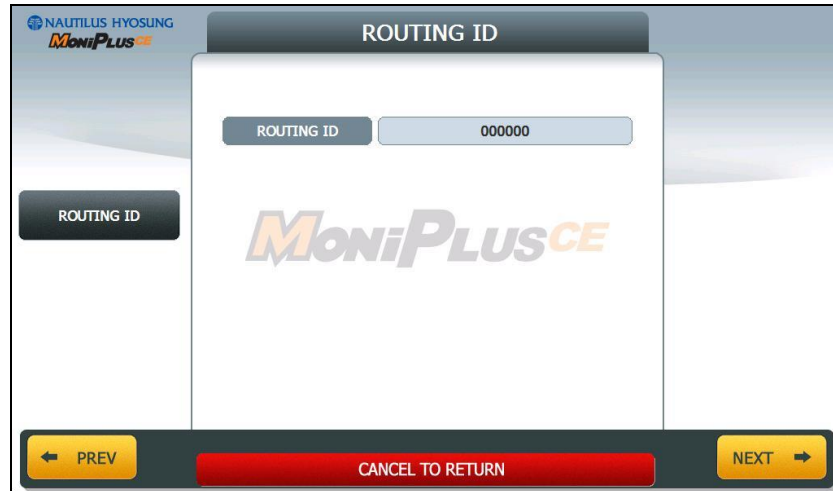

<Note!>

When you press **NEXT** button, it goes to Section "TERMINAL ID".

STANDARD 3 OPTION

- ▶ **STANDARD 3 OPTION** contains **STATUS MONITORING EN/DISABLE**, **COMMUNICATION HEADER**, **COMMUNICATION ID** and **CRC EN/DISABLE**. In case of **COMMUNICATION HEADER** is enabled, **CRC EN/DISABLE** option can be configured.

STANDARD 3 OPTION	
STATUS MONITORING	DISABLE
COMMUNICATION HEADER	DISABLE
COMMUNICATION ID	00000000
CRC EN/DISABLE	DISABLE

Navigation buttons: STATUS MONITORING, COMMUNICATION HEADER, CRC EN/DISABLE


Bottom bar: PREV, CANCEL TO RETURN, NEXT

STANDARD 3 OPTION function is used to get the additional information when Triton message is selected.

1. **STATUS MONITORING** function is to decide whether status monitoring field in message is sent or not.
2. **COMMUNICATION HEADER** function is to decide whether communication header in message is included or not.
3. **COMMUNICATION ID** function is able to save the **COMMUNICATION ID**. The **COMMUNICATION ID** has to be set if using the **COMMUNICATION HEADER** function.
4. **CRC(Cyclic Redundancy Checking) OPTION** function is to set up whether CRC is used or not during communication with host.

TERMINAL ID

- ▶ The **TERMINAL ID** function is used to edit the terminal id number of ATM. Host will identify ATM by looking at terminal ID. Terminal ID will be included in host message and will be printed on the receipt.

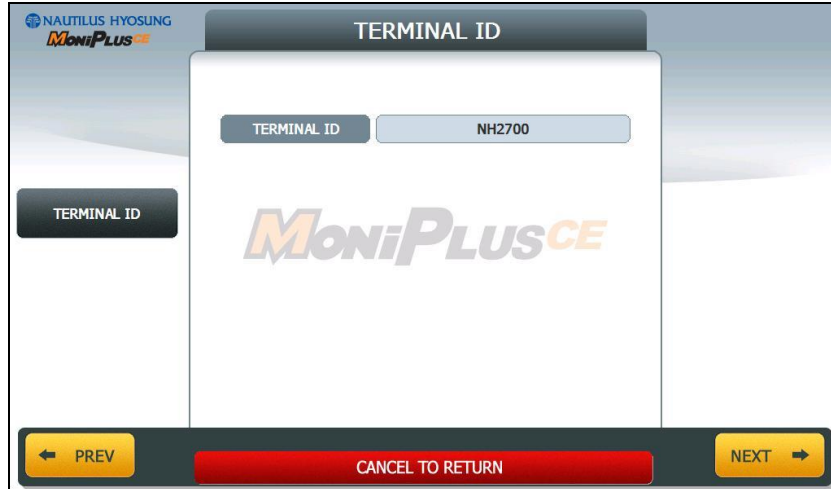


PASSWORD SETUP (MASTER PASSWORD)

- ▶ This menu enables you to change current master password as new one. To change the current password, you should input the proper one in current password field. The factory default value of master password is "555555".



RESULT

- ▶ After performing **QUICK CONFIGURATION**, the result will be shown as below.

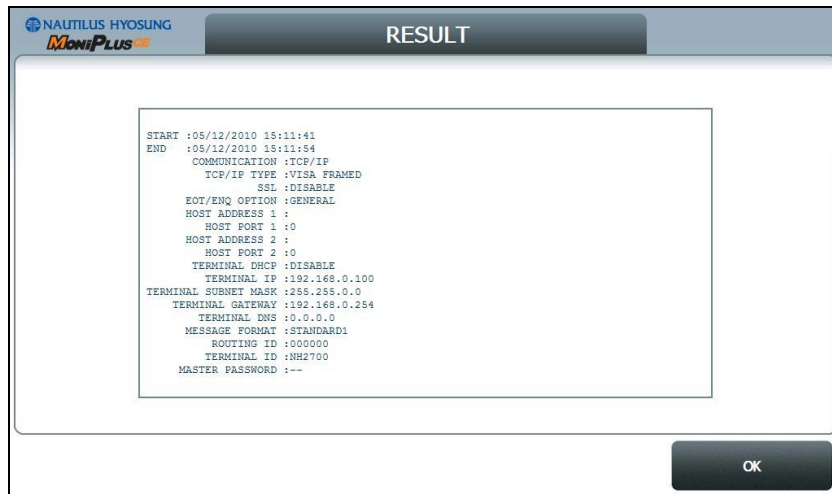


6.2 DIAL UP

- ▶ This chapter shows how to configure for DIALUP Setup Information.

COMMUNICATION

- ▶ This is to set up a type of line to communicate with Host. Select **DIALUP**. In case of setting up DIALUP, communicate with host using modem.

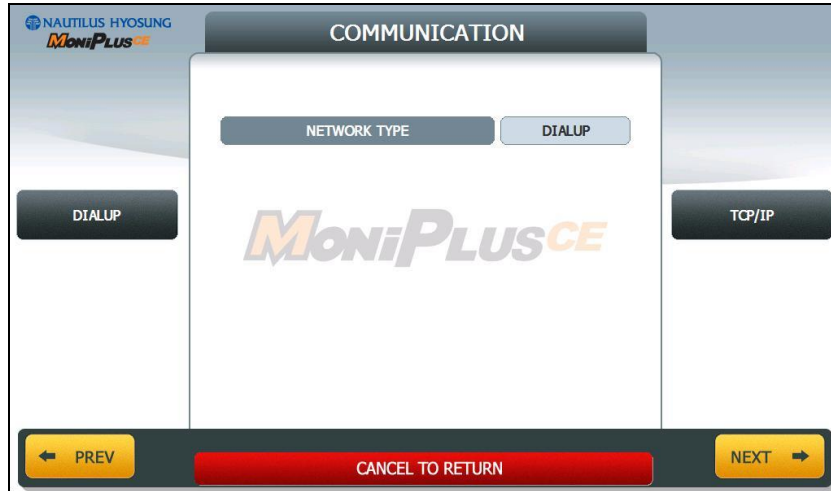

EOT / ENQ OPTION

- ▶ **EOT/ENQ OPTION** contains **GENERAL**, **EOT OPTIONAL**, **NO EOT REQUIRED** and **NO ENQ REQUIRED** functions. You can select one of these options.

The screenshot shows the 'EOT / ENQ OPTION' configuration screen. The interface includes a top header with the 'NAUTILUS HYOSUNG MoniPLUS CE' logo. The main area contains three input fields: 'OPTION : GENERAL', 'ENQ : REQUIRED', and 'EOT : REQUIRED'. On the left side, there are three buttons: 'GENERAL', 'EOT OPTIONAL', and 'NO EOT REQUIRED'. On the right side, there is a button labeled 'NO ENQ REQUIRED'. At the bottom, there are three navigation buttons: 'PREV' (left arrow), 'CANCEL TO RETURN' (red bar), and 'NEXT' (right arrow). A large 'MoniPLUS CE' watermark is visible in the center of the screen.


TELEPHONE NUMBER (HOST PHONE 1)

- ▶ If you press each button on this menu, phone number of host can be input. You can input character, number and special symbol up to 1~20 digits by using '<' or '>'.



MESSAGE FORMAT

- ▶ This menu sets up message format to use during communicating with Host.
You can select one of message type to communicate with a data processing company or bank in this menu (**STANDARD1**, **STANDARD2**, **STANDARD3** and **EPS**).
STANDARD 1 is a HYOSUNG message type and **STANDARD 2** is a CSP200 message type, **STANDARD 3** is Triton 9600 message type and **EPS** is an extended CSP200 message type.

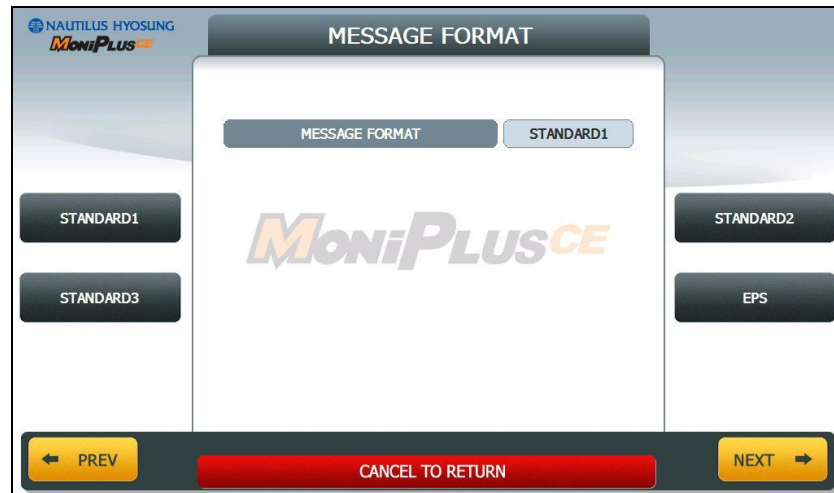


<Note!>

When you press **NEXT** button, if you configured MESSAGE FORMAT to STANDARD 3, then it goes to Section "STANDARD3 OPTION". If not, then it goes to Section "ROUTING ID".

ROUTING ID

- ▶ The **ROUTING ID** function is used to edit the Routing ID Number of ATM. Routing ID refers to the Bank ID. This field is contained to STANDARD 1, STANDARD 2 and EPS format.

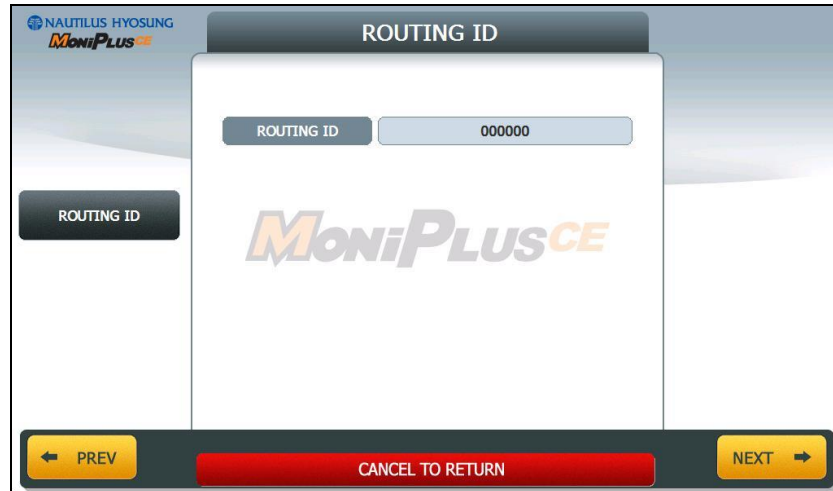

<Note!>

When you press **NEXT** button, it goes to Section "TERMINAL ID".

STANDARD3 OPTION

- **STANDARD 3 OPTION** contains **STATUS MONITORING EN/DISABLE**, **COMMUNICATION HEADER**, **COMMUNICATION ID** and **CRC EN/DISABLE**.
In case of **COMMUNICATION HEADER** is enabled, **CRC EN/DISABLE** option can be configured.

Function	Value
STATUS MONITORING	DISABLE
COMMUNICATION HEADER	DISABLE
COMMUNICATION ID	00000000
CRC EN/DISABLE	DISABLE


Navigation buttons: PREV, CANCEL TO RETURN, NEXT

STANDARD 3 OPTION function is used to get the additional information when Triton message is selected.

1. **STATUS MONITORING** function is to decide whether status monitoring field in message is sent or not.
2. **COMMUNICATION HEADER** function is to decide whether communication header in message is included or not.
3. **COMMUNICATION ID** function is able to save the **COMMUNICATION ID**.
The **COMMUNICATION ID** has to be set if using the **COMMUNICATION HEADER** function.
4. **CRC(Cyclic Redundancy Checking) OPTION** function is to set up whether CRC is used or not during communication with host.


TERMINAL ID

- ▶ The **TERMINAL ID** function is used to edit the terminal id number of ATM. Host will identify ATM by looking at terminal ID. Terminal ID will be included in host message and will be printed on the receipt.

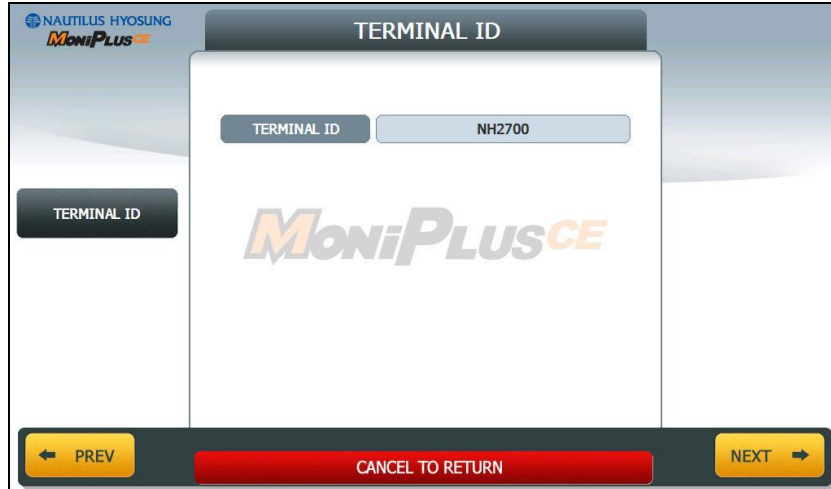


PASSWORD SETUP (MASTER PASSWORD)

- ▶ This menu enables you to change current master password as new one. To change the current password, you should input the proper one in current password field. The factory default value of master password is "555555".

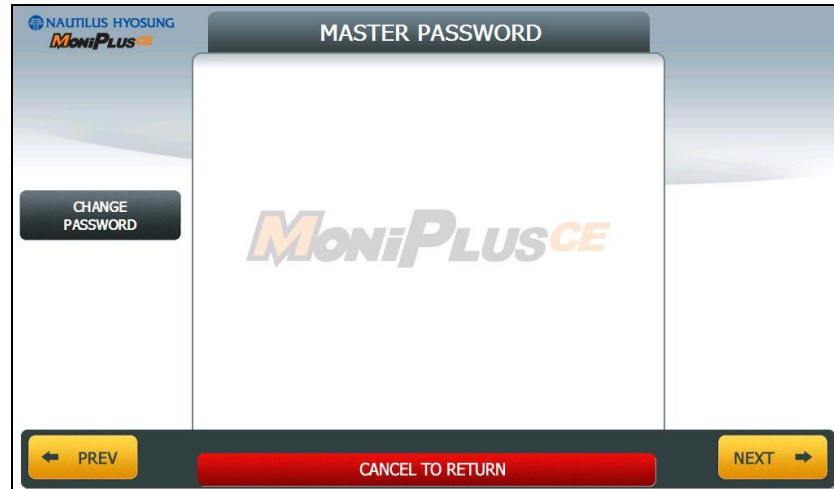

RESULT

- ▶ After performing **QUICK CONFIGURATION**, the result will be shown as below.

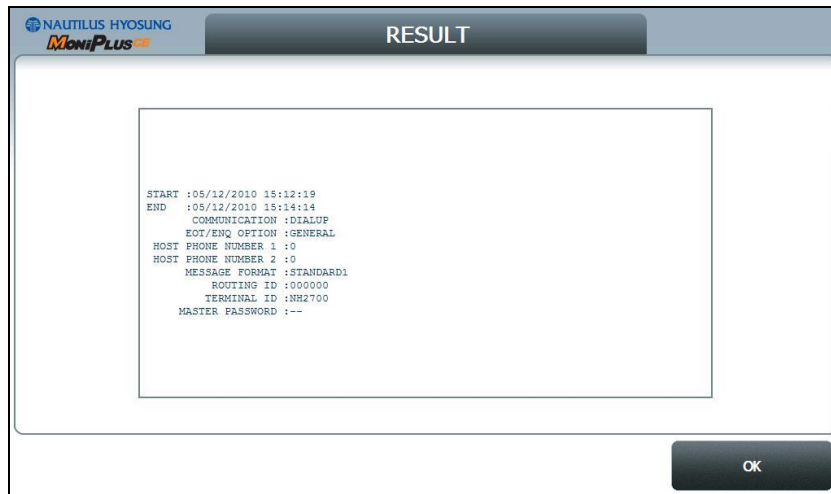

Appendix

Software Quick Installation Guide

Clear NVRAM


► NVRAM

There are many important data in the NVRAM such as journal and configuration data. To clear all of configuration and journal data to the initial status, clear NVRAM after S/W installation.


If you upgrade ATM machine operating in the field, you must backup journal and remember configuration information before clearing NVRAM.

► Clear NVRAM


1. Enter Supervisor Menu as Master Password

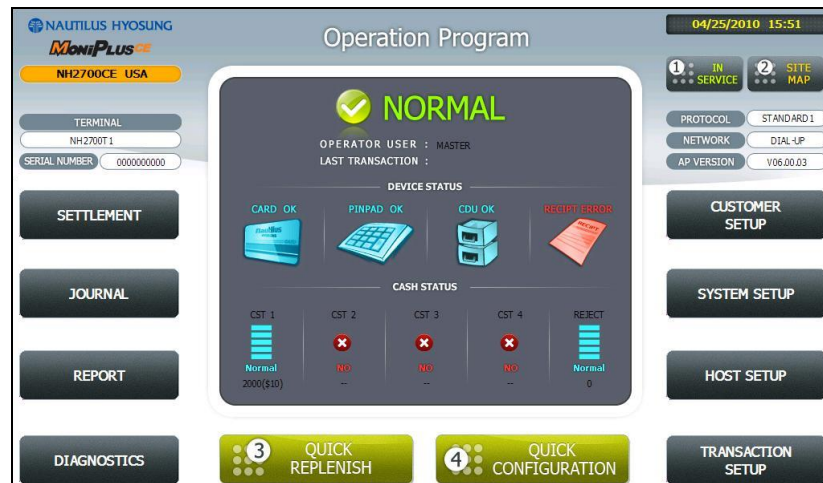

2. Select "SYSTEM SETUP" menu

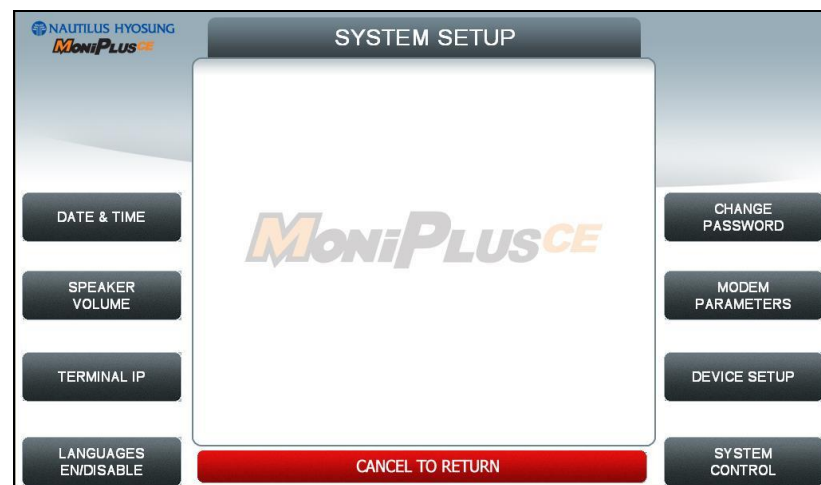


3. Select "SYSTEM CONTROL" menu

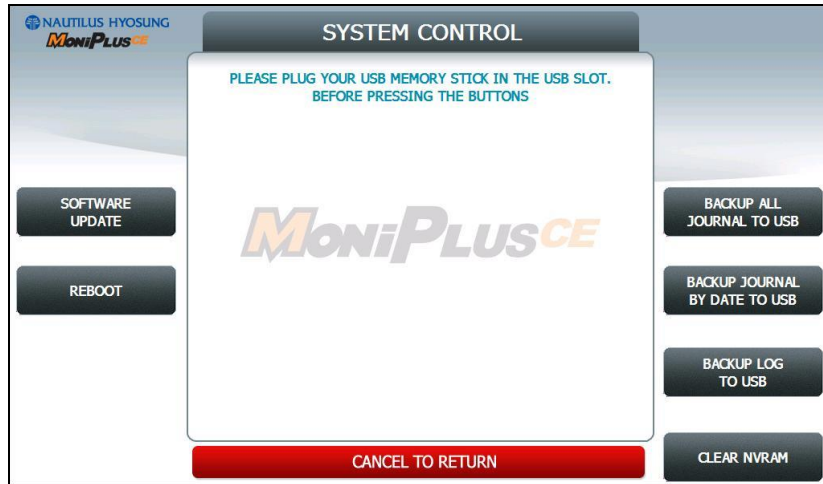

4. Select "CLEAR ALL" menu.



In S/W released for USA, there is necessity to check the type of machine in the case of NH1800SE / MX4000W, or NH2700 / NH2600 / MX2600SE / MX5000SE, or MX5200SE / MX5300SE. So if you select CLEAR ALL button or CLEAR SETTING button, the next screen would be changed as like as below to check the type manually.

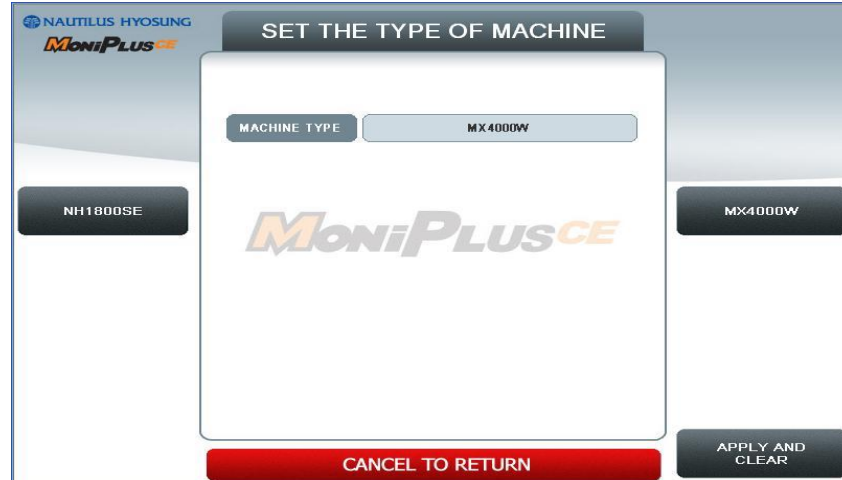

After choosing the type of machine, just push 'APPLY AND CLEAR' button. And then changed machine kind would be applied to information of S/W.


5. Confirm and select "Yes" menu.
6. All NVRAM data will be cleared and ATM will be automatically rebooted.

Installation Guide


Dial-up Initial Setting

► DIAL-UP SETTING

1. Input Master password to enter main screen.

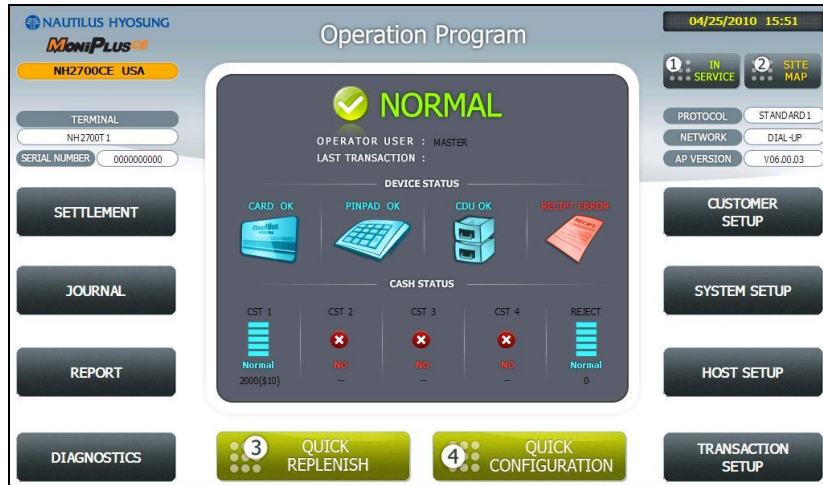

2. Select "HOST SETUP" menu.

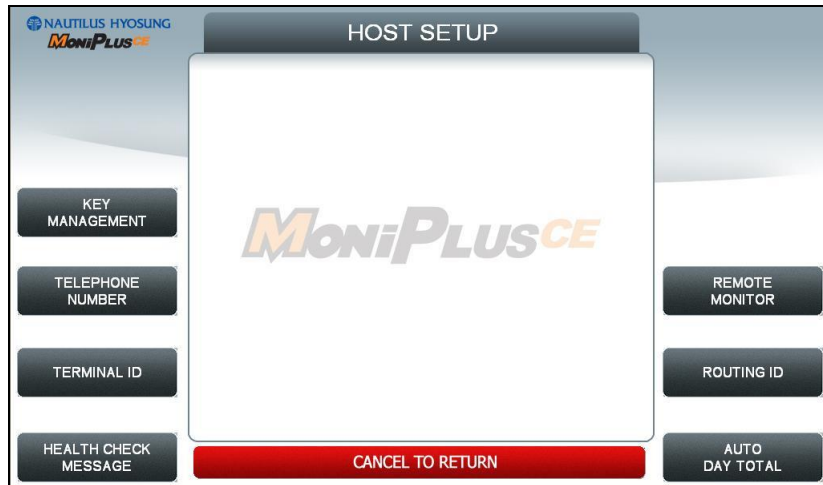

3. Select "TELEPHONE NUMBER" menu.



4. Be sure to input the telephone numbers both in the HOST PHONE #1 and in the HOST PHONE #2 after selecting "HOST PHONE #1" and "HOST PHONE #2" menu and click '**ENTER**' on the pinpad.

5. After above procedures, press **IN SERVICE** button or '**1**' key on the pinpad in the main screen.


TCP/IP Initial Setting

► TCP/IP SETTING

1. Input Master password to enter main screen.




2. Select "CUSTOMER SETUP" menu.

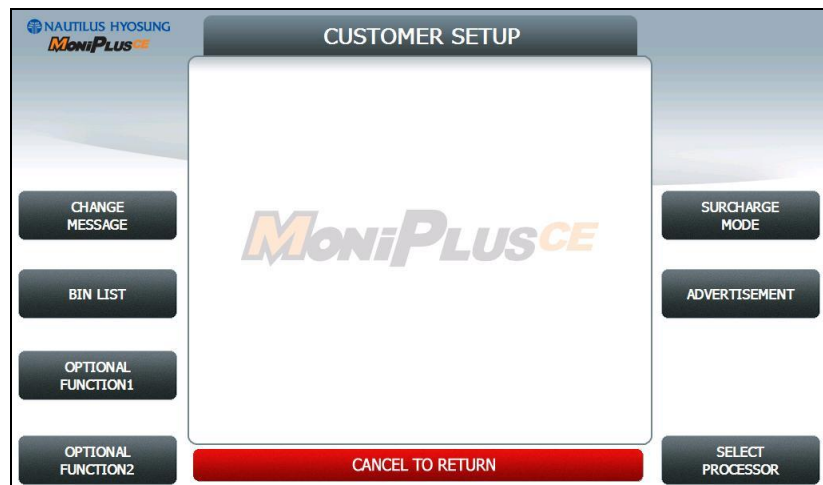


3. Select "SELECT PROCESSOR" menu.




4. Select "COMMUNICATION" menu.

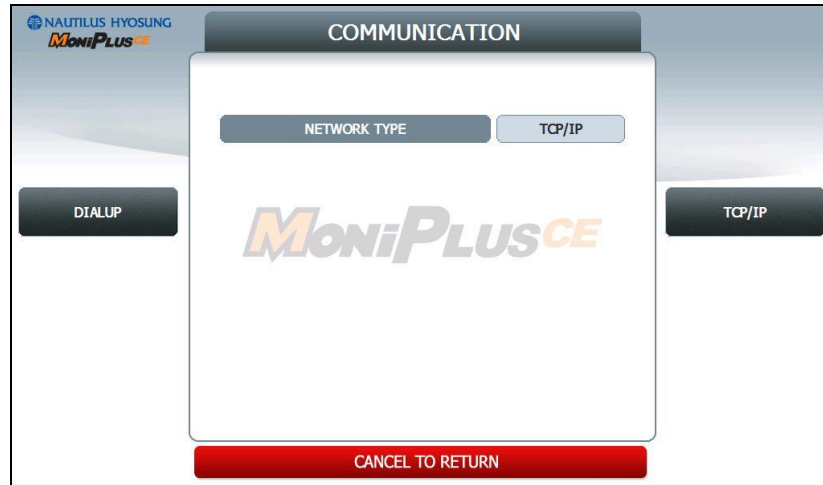


5. Select "TCP/IP" menu and message in the COMMUNICATION box will be changed from DIALUP to TCP/IP.
6. Click 'CANCEL' button and SELECT PROCESSOR screen will be back.
7. Select "MESSAGE FORMAT" menu in the SELECT PROCESSOR screen.

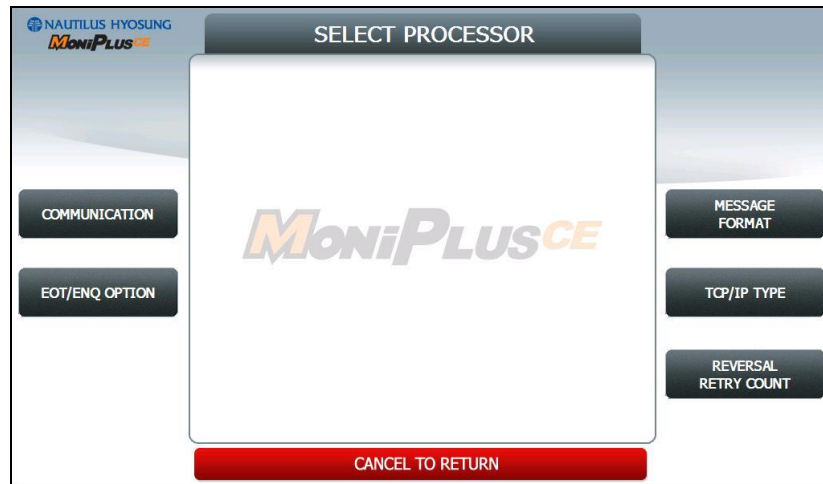

8. Select "STANDARD1" menu in the MESSAGE FORMAT screen. Click 'CANCEL' button to go SELECT PROCESSOR screen.

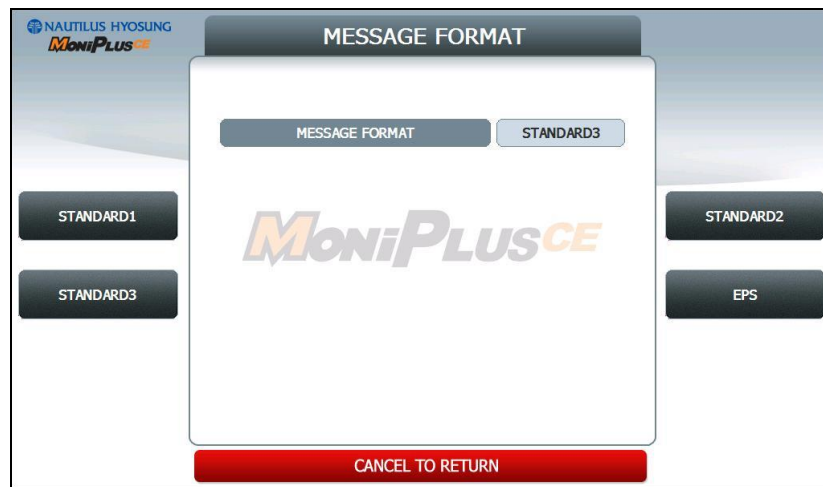

9. Select "TCP/IP TYPE" menu in the SELECT HOST screen.
10. Set "STANDARD" in the TCP/IP TYPE menu and set DISABLE in the SSL OPTION menu. Click 'CANCEL' button to go SELECT PROCESSOR screen.

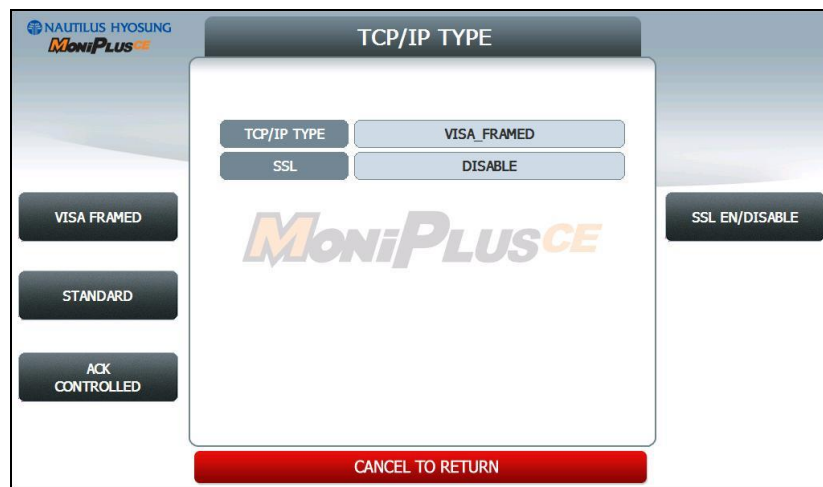


In S/W released for USA, there is the menu for SSL CERT. EN/DISABLE as like as below. If a owner want to use SSL CERT(certificiate issued by host to recognize the other side when communicating with each other) please, set the SSL CERT. EN/DISABLE as 'ENABLE'.




And there is a certificate in USB, please download it by just pressing 'DOWNLOAD CERT. FROM USB' button. However, the thing you should remember in this step is to make the certificate named as 'rootcert.pem' and locate this certificate in root path in USB drive.

11. Click 'CANCEL' button and CUSTOMER SETUP screen will be shown. Click 'CANCEL' button once more to go to the OP MAIN screen. And select "SYSTEM SETUP" menu.

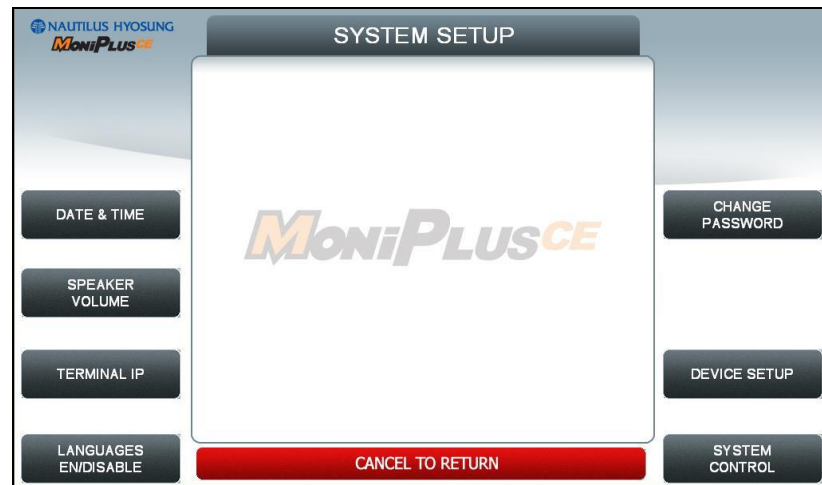

12. Select "TERMINAL IP" menu.


13. Set “DHCP EN/DISABLE” as DISABLE to activate buttons related with “STATIC IP”

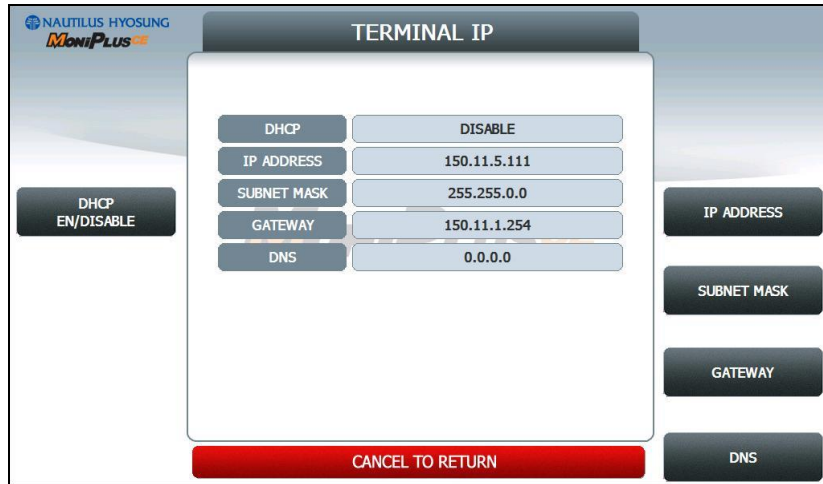

14. Select “IP ADDRESS”, “GATEWAY”, “SUBNET MASK” and “DNS” and set the input values individually.

15. Select “HOST SETUP” menu in the OP MAIN screen.

16. Select “HOST ADDRESS” menu in the HOST SETUP screen.

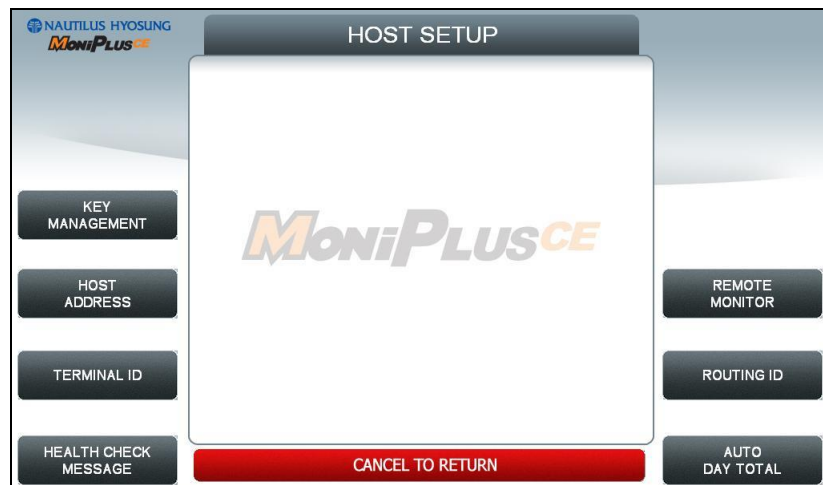

17. Select "URL EN/DISABLE" menu in the HOST ADDRESS screen.

The screenshot shows the "HOST ADDRESS" configuration screen. At the top left is the "NAUTILUS HYOSUNG MoniPlus" logo. The main area contains a central panel with the following elements:

- "URL EN/DISABLE" label with a "DISABLE" button to its right.
- "ADDRESS1" label with an input field below it.
- "ADDRESS2" label with an input field below it.
- "PORT NUMBER1" label with an input field containing "0" to its right.
- "PORT NUMBER2" label with an input field containing "0" to its right.
- A red "CANCEL TO RETURN" button at the bottom of the central panel.

On the left side of the screen, there is a "URL EN/DISABLE" button. On the right side, there are four buttons: "ADDRESS1", "ADDRESS2", "PORT NUMBER1", and "PORT NUMBER2".

18. Select "HOST ADDRESS 1", "PORT NUMBER 1", "HOST ADDRESS 2", "PORT NUMBER 2" in the HOST ADDRESS screen and set input values individually.
19. After finishing all setting up, press **IN SERVICE** button '1' or **CANCEL** key on the pinpad in the main screen. Then ATM will be rebooted automatically with the "REBOOTING" message shown.


Transaction Screen Flow

This chapter shows you the demonstration screen.

Transaction Process (ENGLISH)

► AP MAIN

This is a main AP screen and the customer can start to do transaction by inserting and quickly removing the card on card reader.

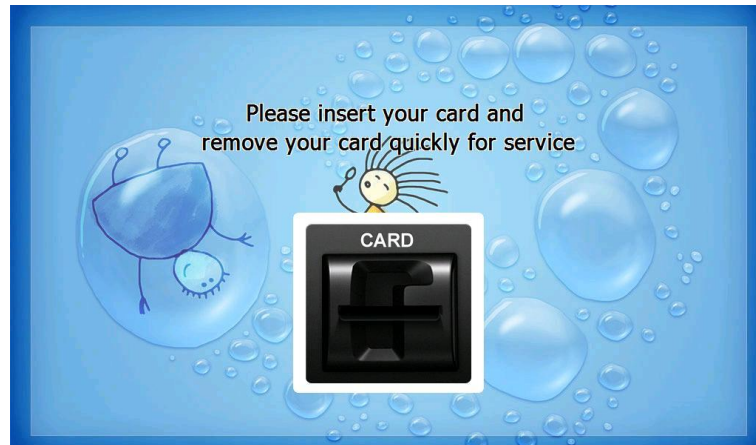

► SELECT LANGUAGE

Language a customer would like to use in transaction can be selected in this screen.



► ENTER PIN

This screen is to enter PIN of customer's card.




► SELECT TRANSACTION

This screen is to select transaction type the customer wants to transact such as withdrawal, balance inquiry and transfer is selected in this screen.




► WITHDRAWAL: FEE NOTICE

This screen is to show a customer the information of surcharge.

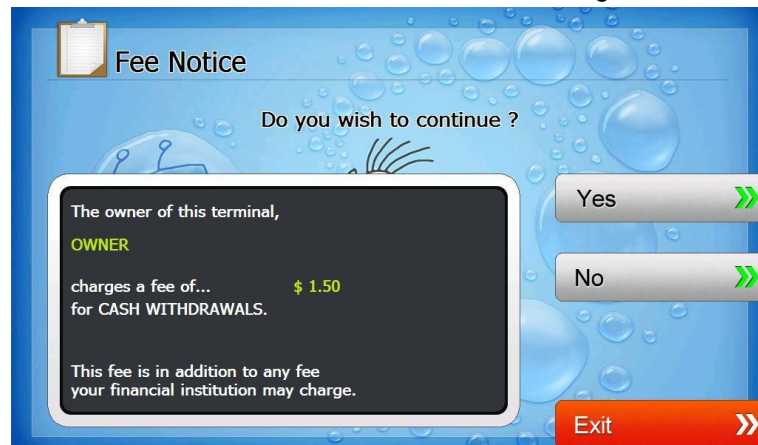

► WITHDRAWAL: RECEIPT SELECTION

This screen is to ask a customer if he/she wants to get the receipt or not.

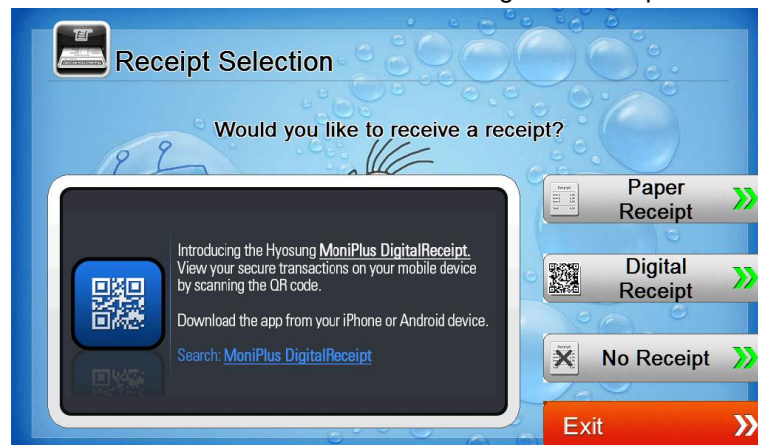

► **WITHDRAWAL: SELECT ACCOUNT (Checking, Saving, Credit Card)**


This screen is to ask a customer where he/she wants to withdraw in checking, saving, credit card




► **WITHDRAWAL: SELECT THE AMOUNT OF WITHDRAWAL**

This screen is to select the amount of withdrawal. If there is not any amount to withdraw, please select the “OTHER” key and can input the amount the customer would like to withdraw.

1. Amount Selection

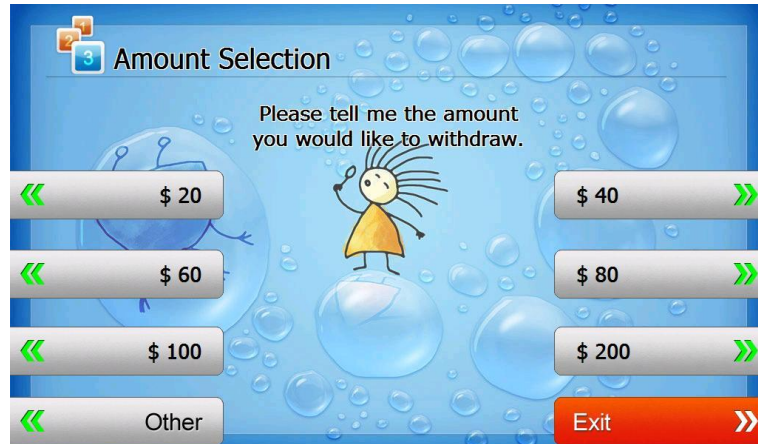


2. Amount Input (Other)

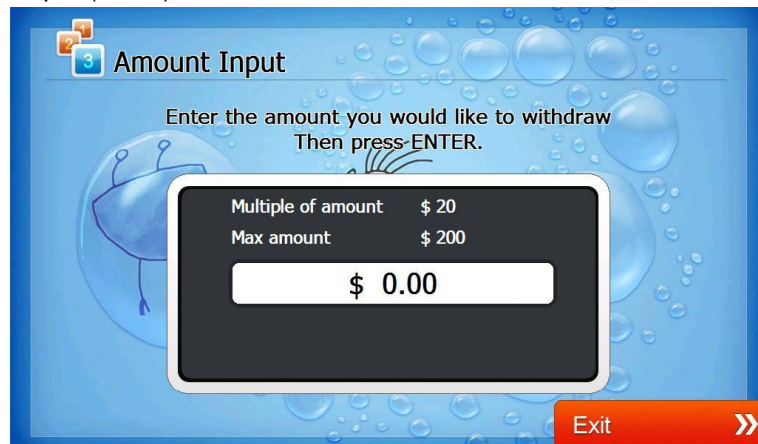


► WITHDRAWAL: CONNECTING HOST

This screen is to show the customer that the transaction is in progress.

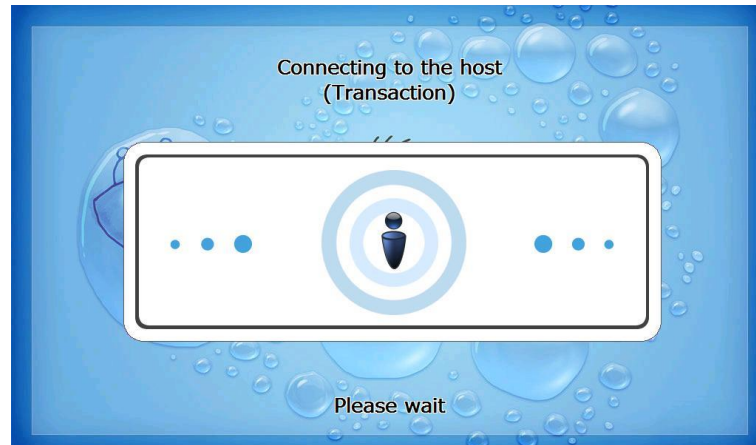
**► WITHDRAWAL: DISPENSING MONEY AND TAKE MONEY**

This screen is to show the customer that his/her request amount is dispensing and to notify the customer to take his/her money.

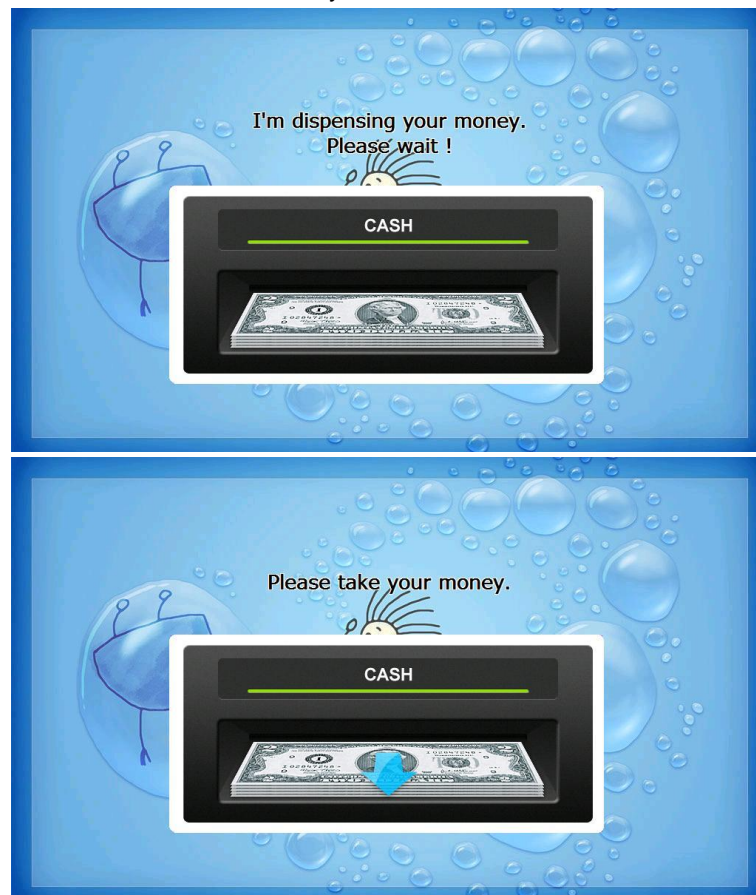


► **WITHDRAWAL: PRINTING TRANSACTION AND TAKE RECEIPT**

This screen is to show the customer that his/her transaction record is printing and to notify the customer to take his/her receipt.

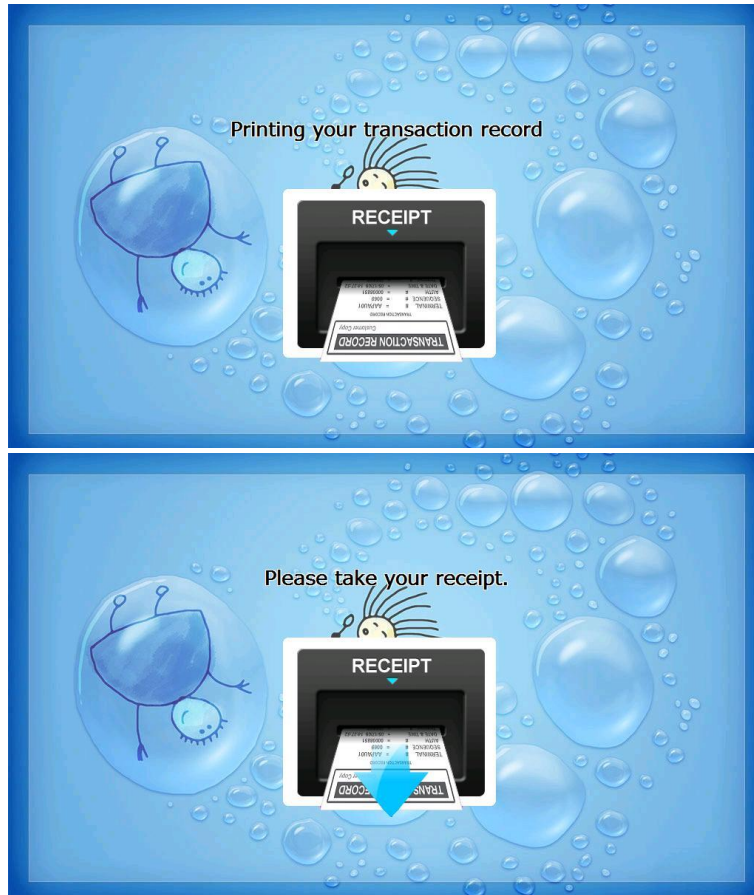


► **WITHDRAWAL: THANK YOU**

This screen is to show the customer that the transaction has been successfully completed.

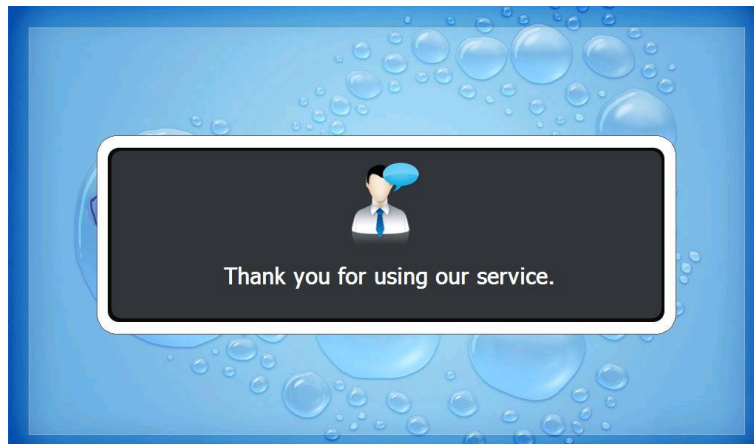

► **TRANSFER: SELECT RECEIPT PRINTING OR NOT**

This screen is to ask a customer if he/she gets the receipt or not.

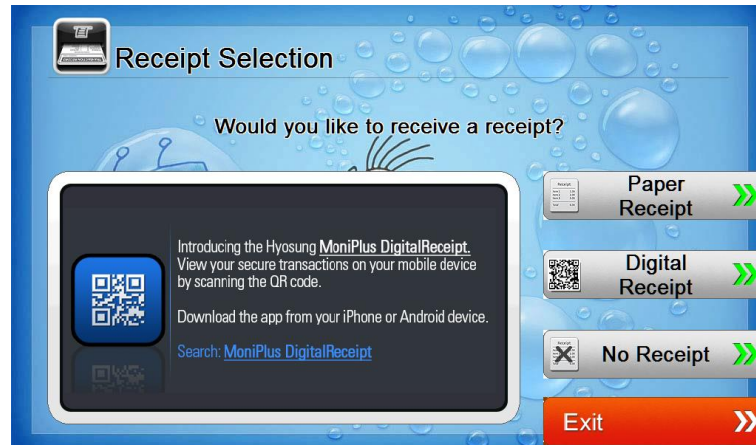


► **TRANSFER: SELECT ACCOUNT TO TRANSFER FROM**

This screen is to ask a customer where he/she wants to transfer from; checking, saving, credit card




► **TRANSFER: SELECT ACCOUNT TO TRANSFER TO**

This screen is to ask a customer where he/she wants to transfer to; checking, saving, credit card

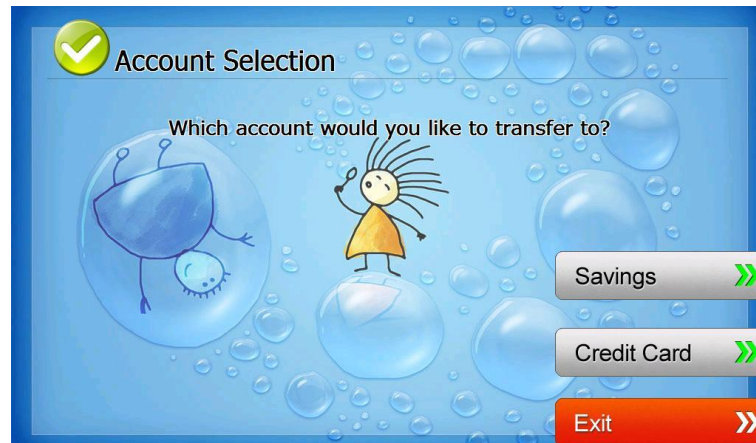


► TRANSFER: ENTER TRANSFER AMOUNT


This screen is to select the amount of transfer.

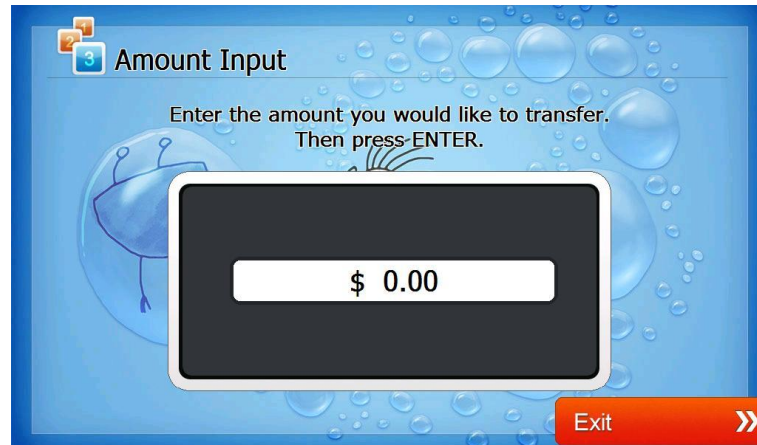
**► TRANSFER: CONNECTING HOST**

This screen is to show the customer that the transaction is in progress.

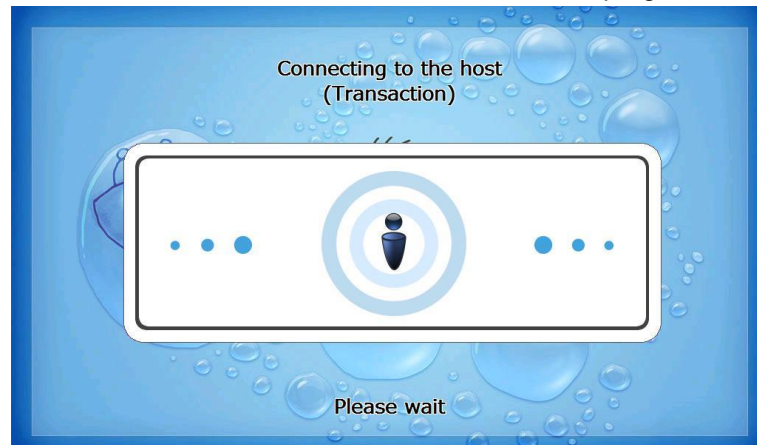**► TRANSFER: PRINTING TRANSACTION AND TAKE RECEIPT**


This screen is to show the customer that his/her transaction record is printing and to notify the customer to take his/her receipt.

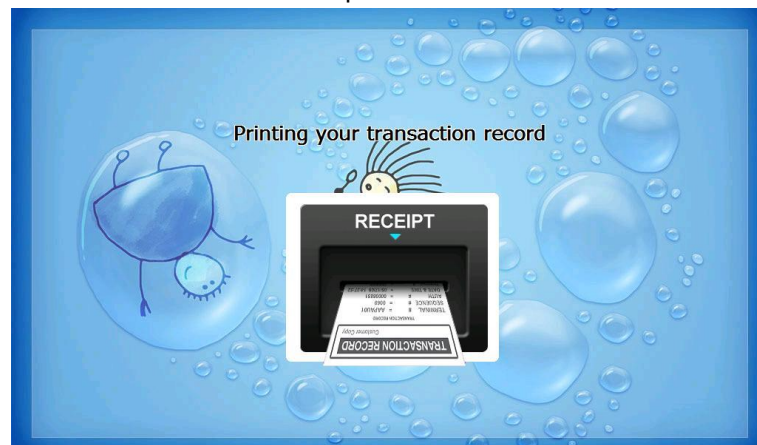

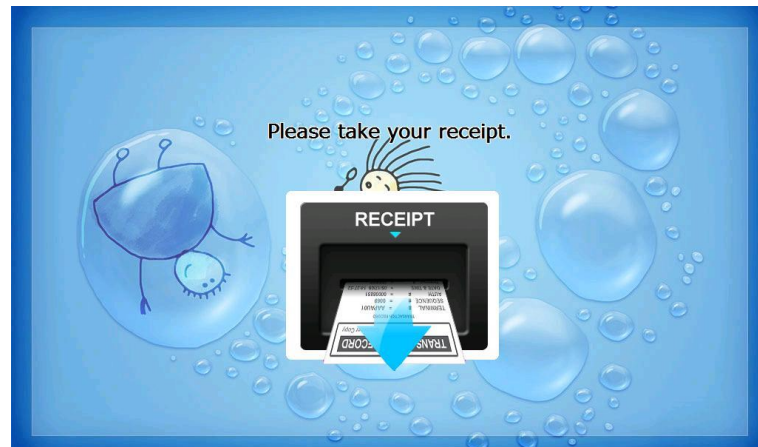


► **TRANSFER: THANK YOU**

This screen is to show the customer that the transaction has been successfully completed.

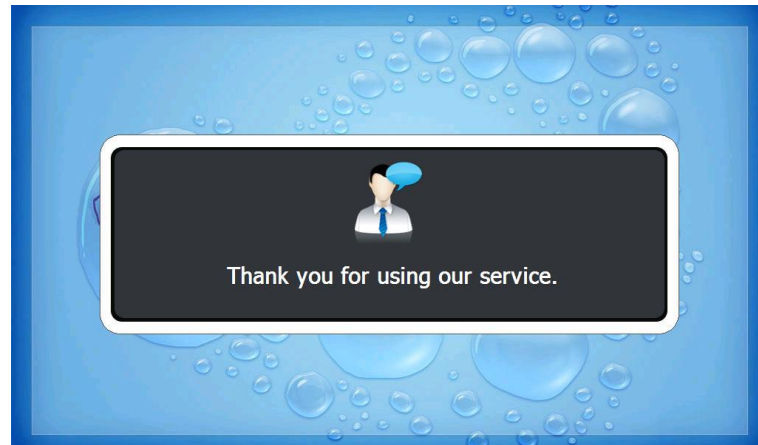


► **INQUIRY: SELECT RECEIPT PRINTING OR NOT**

This screen is to ask a customer if he/she wants to get the receipt or not.

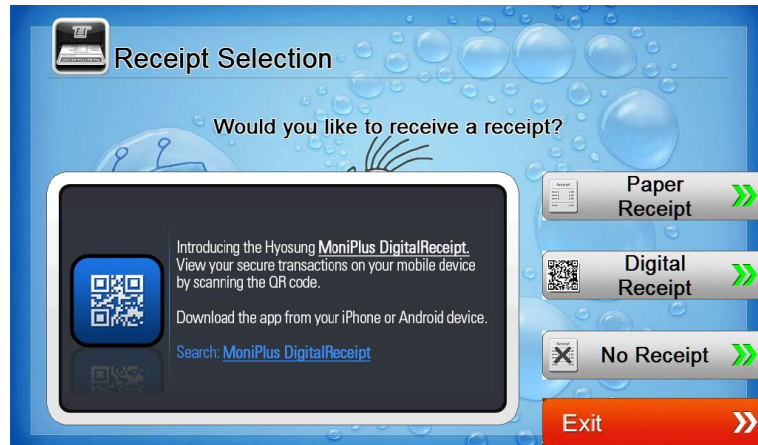


► **INQUIRY: SELECT ACCOUNT TO INQUIRE**

This screen is to ask a customer which account he/she wants to inquire

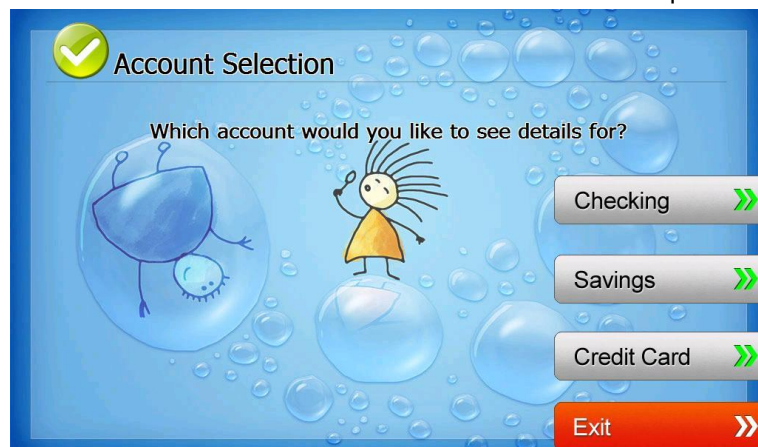


► **INQUIRY: CONNECTING HOST**

This screen is to show the customer that the transaction is in progress.

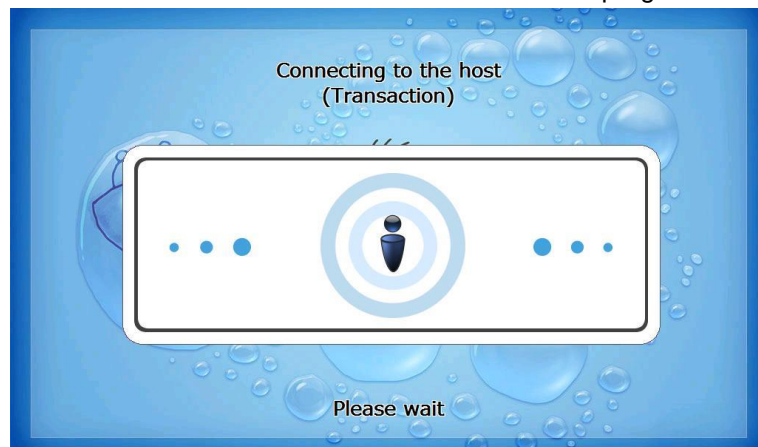


► INQUIRY: PRINTING TRANSACTION AND TAKE RECEIPT

This screen is to show the customer that his/her transaction record is printing and to notify the customer to take his/her receipt.

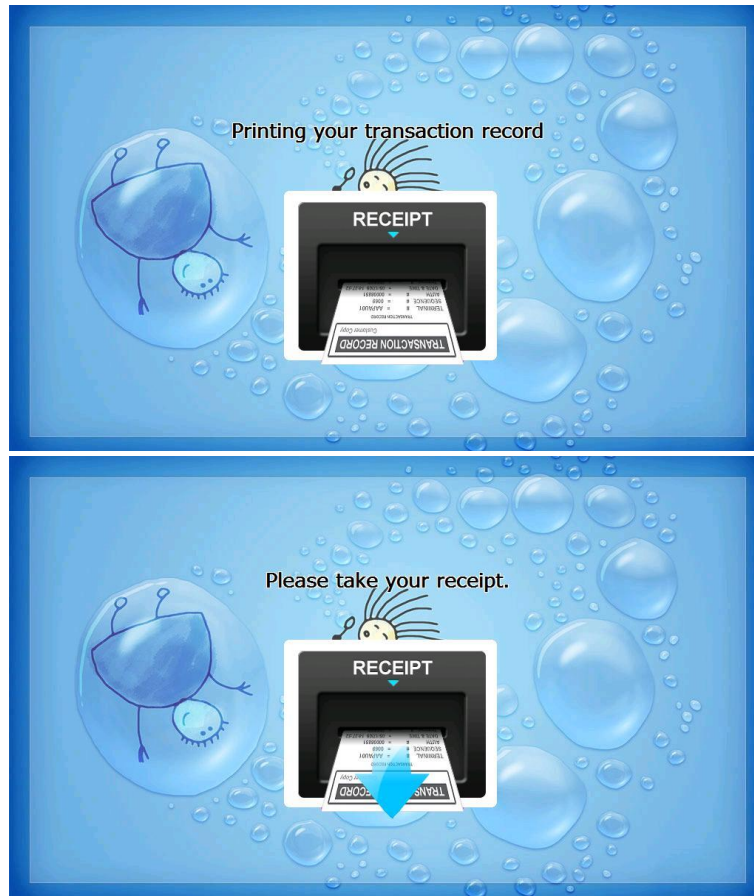**► INQUIRY: THANK YOU**

This screen is to show the customer that the transaction has been successfully completed.

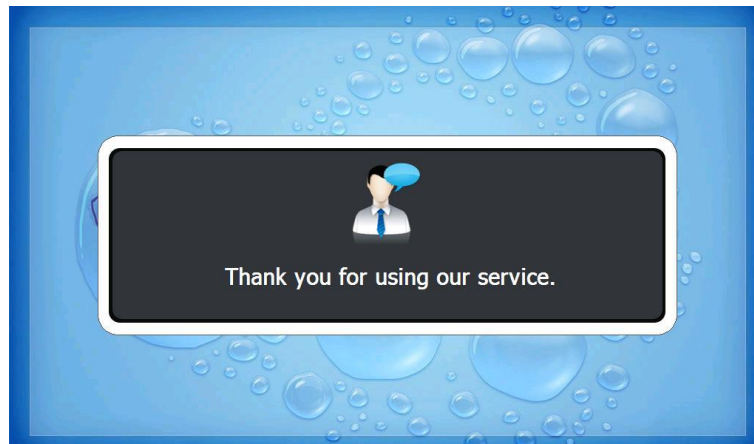

Transaction Process (SPANISH)

► AP MAIN

This is a main AP screen and the customer can start to do transaction by inserting and quickly removing the card on card reader.




► SELECT LANGUAGE

Language a customer would like to use in transaction can be selected in this screen.



► Enter PIN

This screen is to enter PIN of customer's card

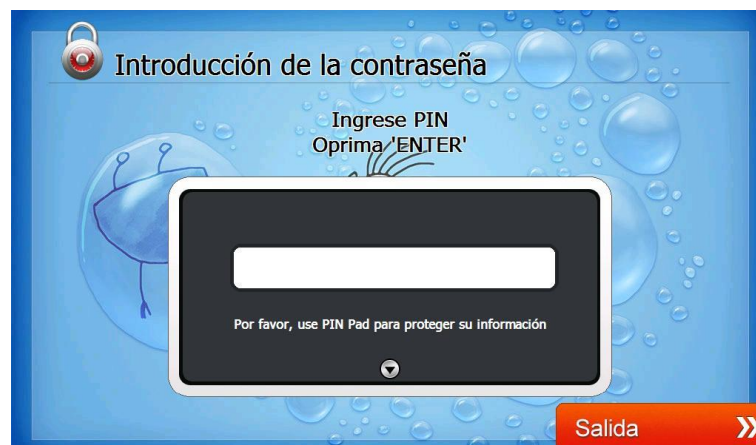


► SELECT TRANSACTION

This screen is to select transaction type the customer wants to transact such as withdrawal, balance inquiry and transfer is selected in this screen.



► WITHDRAWAL: FEE NOTICE

This screen is to show a customer the information of surcharge.

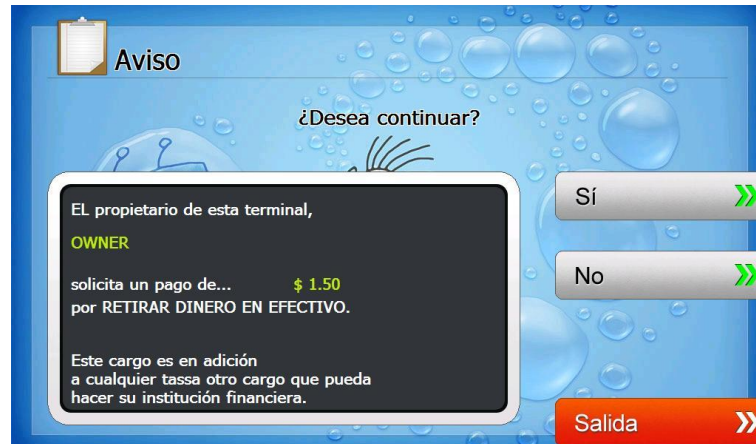

► WITHDRAWAL: SELECT RECEIPT PRINTING OR NOT

This screen is to ask a customer if he/she wants to get the receipt or not.



► **WITHDRAWAL: SELECT ACCOUNT (Checking, Saving, Credit Card)**

This screen is to ask a customer where he/she wants to withdraw in checking, saving, credit card



► **WITHDRAWAL: SELECT THE AMOUNT OF WITHDRAWAL**

This screen is to select the amount of withdrawal. If there is not any amount to withdraw, please select the “OTHER” key and can input the amount the customer would like to withdraw.

1. Amount Selection




2. Amount Input (Other)




► WITHDRAWAL: CONNECTING HOST

This screen is to show the customer that the transaction is in progress.

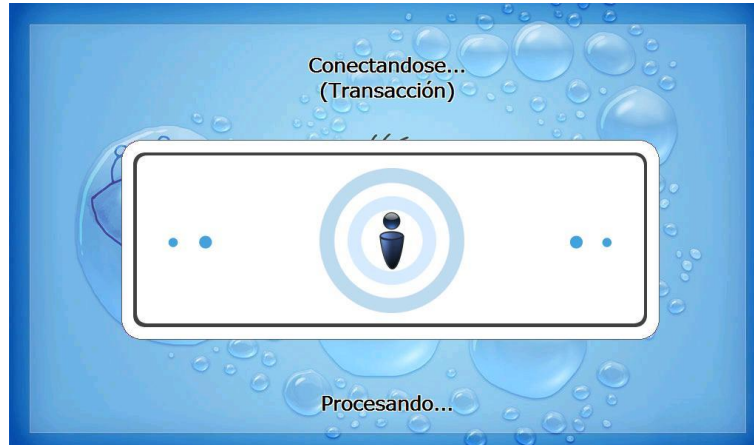**► WITHDRAWAL: DISPENSING MONEY AND TAKE MONEY**

This screen is to show the customer that his/her request amount is dispensing and to notify the customer to take his/her money.

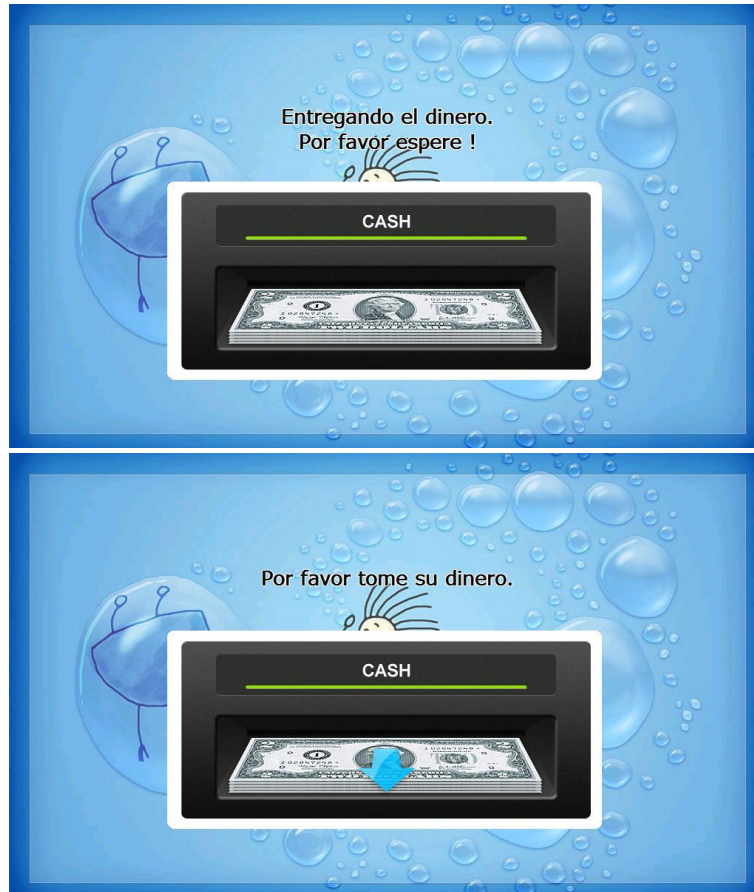


► **WITHDRAWAL: PRINTING TRANSACTION AND TAKE RECEIPT**

This screen is to show the customer that his/her transaction record is printing and to notify the customer to take his/her receipt.



► **WITHDRAWAL: THANK YOU**

This screen is to show the customer that the transaction has been successfully completed.

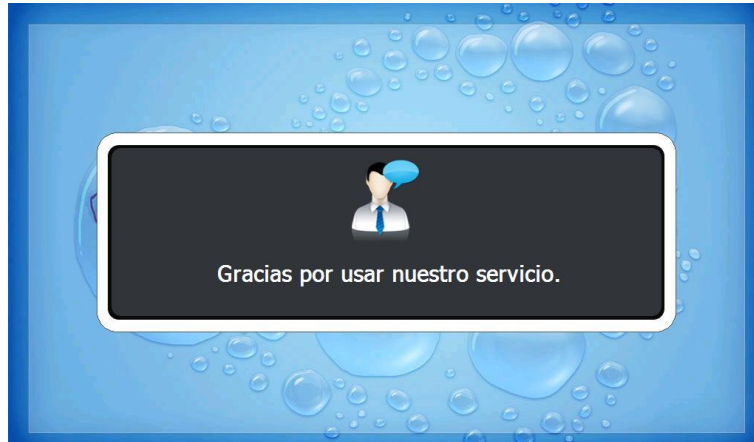

► **TRANSFER: SELECT RECEIPT PRINTING OR NOT**

This screen is to ask a customer if he/she gets the receipt or not.



► **TRANSFER: SELECT ACCOUNT TO TRANSFER FROM**

This screen is to ask a customer where he/she wants to transfer from; checking, saving, credit card



► **TRANSFER: SELECT ACCOUNT TO TRANSFER TO**

This screen is to ask a customer where he/she wants to transfer to; checking, saving, credit card



► TRANSFER: ENTER TRANSFER AMOUNT

This screen is to select the amount of transfer.

**► TRANSFER: CONNECTING HOST**

This screen is to show the customer that the transaction is in progress.

**► TRANSFER: PRINTING TRANSACTION AND TAKE RECEIPT**


This screen is to show the customer that his/her transaction record is printing and to notify the customer to take his/her receipt.





► **TRANSFER: THANK YOU**

This screen is to show the customer that the transaction has been successfully completed.

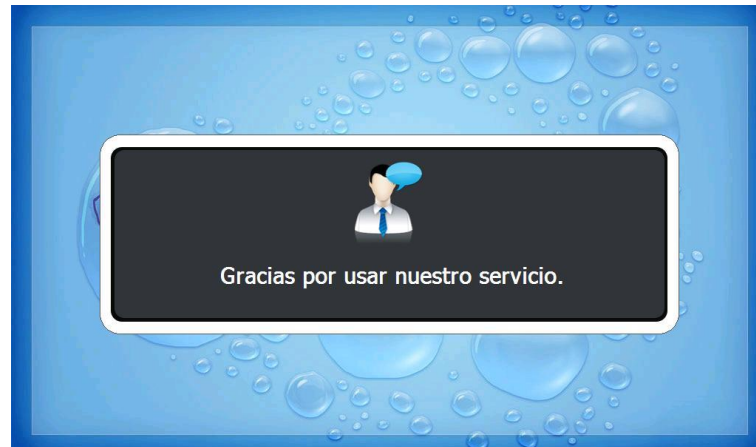

► **INQUIRY: SELECT RECEIPT PRINTING OR NOT**

This screen is to ask a customer if he/she wants to get the receipt or not.



► **INQUIRY: SELECT ACCOUNT TO INQUIRE**

This screen is to ask a customer which account he/she wants to inquire



► **INQUIRY: CONNECTING HOST**

This screen is to show the customer that the transaction is in progress.




► INQUIRY: PRINTING TRANSACTION AND TAKE RECEIPT

This screen is to show the customer that his/her transaction record is printing and to notify the customer to take his/her receipt.

**► INQUIRY: THANK YOU**

This screen is to show the customer that the transaction has been successfully completed.

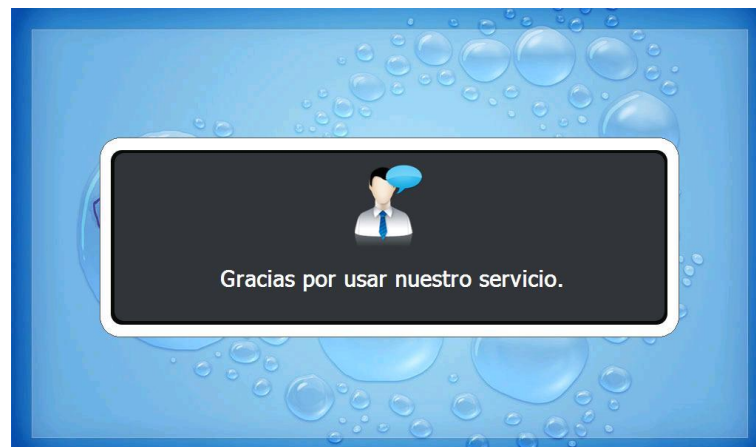

Transaction Process (FRENCH)

► AP MAIN

This is a main AP screen and the customer can start to do transaction by inserting and quickly removing the card on card reader.



► SELECT LANGUAGE

Language a customer would like to use in transaction can be selected in this screen.



► Enter PIN

This screen is to enter PIN of customer's card.




► SELECT TRANSACTION

This screen is to select transaction type the customer wants to transact such as withdrawal, balance inquiry and transfer is selected in this screen.



► WITHDRAWAL: FEE NOTICE

This screen is to show a customer the information of surcharge.

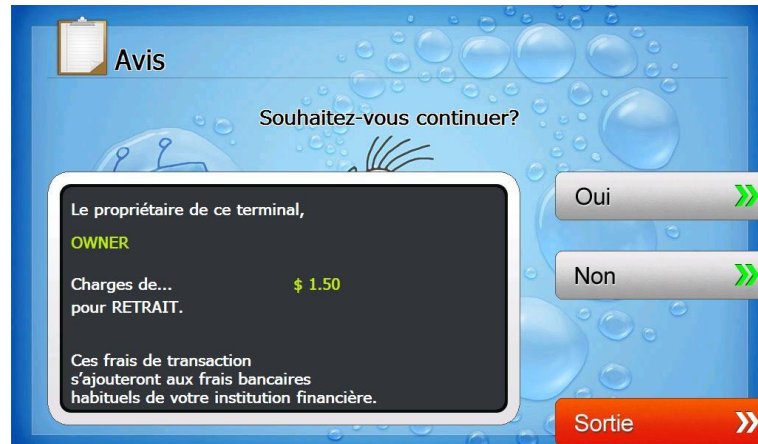

► WITHDRAWAL: SELECT RECEIPT PRINTING OR NOT

This screen is to ask a customer if he/she wants to get the receipt or not.



► **WITHDRAWAL: SELECT ACCOUNT (Checking, Saving, Credit Card)**

This screen is to ask a customer where he/she wants to withdraw in checking, saving, credit card



► **WITHDRAWAL: SELECT THE AMOUNT OF WITHDRAWAL**

This screen is to select the amount of withdrawal. If there is not any amount to withdraw, please select the “OTHER” key and can input the amount the customer would like to withdraw.

1. Amount Selection




2. Amount Input (Other)



► WITHDRAWAL: CONNECTING HOST

This screen is to show the customer that the transaction is in progress.

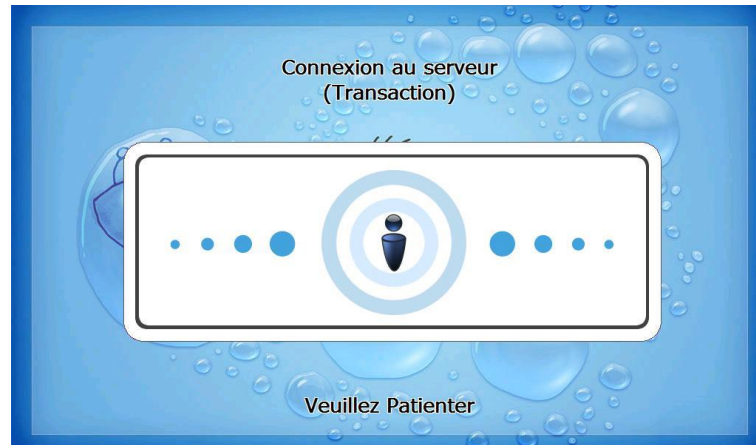**► WITHDRAWAL: DISPENSING MONEY AND TAKE MONEY**

This screen is to show the customer that his/her request amount is dispensing and to notify the customer to take his/her money.




► **WITHDRAWAL: PRINTING TRANSACTION AND TAKE RECEIPT**

This screen is to show the customer that his/her transaction record is printing and to notify the customer to take his/her receipt.



► **WITHDRAWAL: THANK YOU**

This screen is to show the customer that the transaction has been successfully completed.

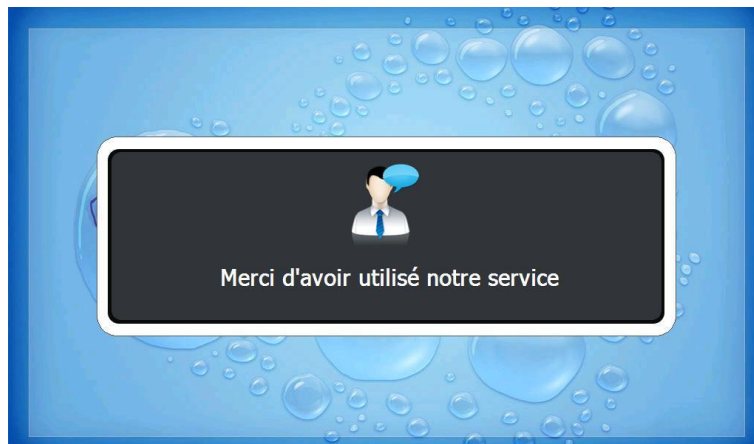

► **TRANSFER: SELECT RECEIPT PRINTING OR NOT**

This screen is to ask a customer if he/she gets the receipt or not.



► **TRANSFER: SELECT ACCOUNT TO TRANSFER FROM**

This screen is to ask a customer where he/she wants to transfer from; checking, saving, credit card



► **TRANSFER: SELECT ACCOUNT TO TRANSFER TO**

This screen is to ask a customer where he/she wants to transfer to; checking, saving, credit card




► TRANSFER: ENTER TRANSFER AMOUNT

This screen is to select the amount of transfer.

**► TRANSFER: CONNECTING HOST**

This screen is to show the customer that the transaction is in progress.

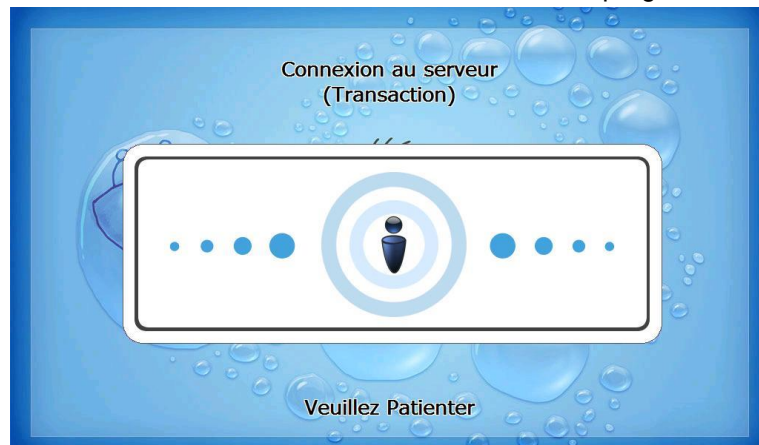**► TRANSFER: PRINTING TRANSACTION AND TAKE RECEIPT**


This screen is to show the customer that his/her transaction record is printing and to notify the customer to take his/her receipt.





► **TRANSFER: THANK YOU**

This screen is to show the customer that the transaction has been successfully completed.

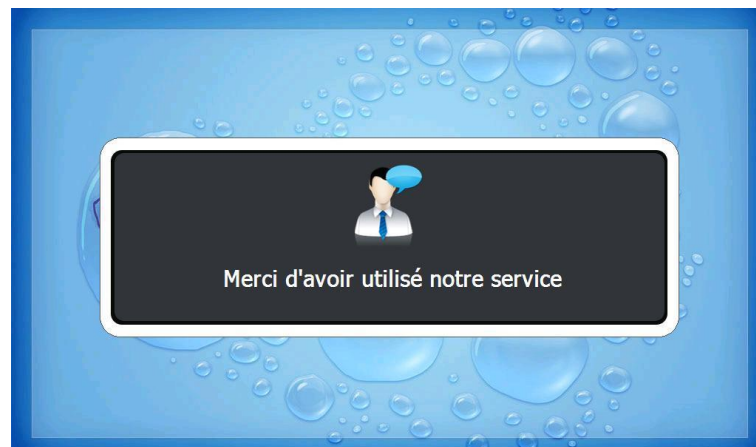

► **INQUIRY: SELECT RECEIPT PRINTING OR NOT**

This screen is to ask a customer if he/she wants to get the receipt or not.




► INQUIRY: SELECT ACCOUNT TO INQUIRE

This screen is to ask a customer which account he/she wants to inquire

**► INQUIRY: CONNECTING HOST**

This screen is to show the customer that the transaction is in progress.

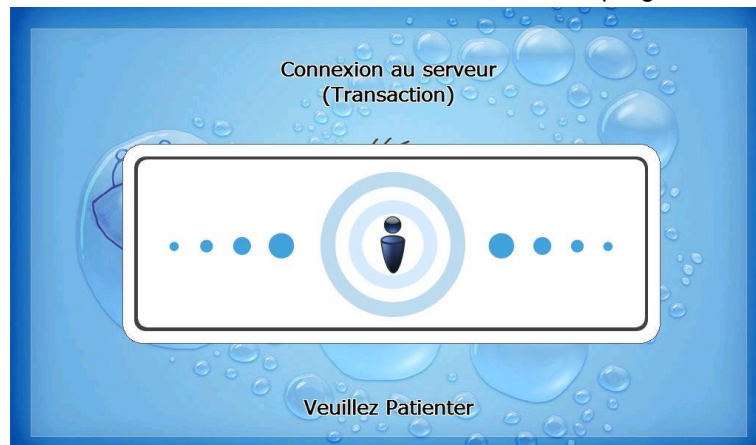**► INQUIRY: PRINTING TRANSACTION AND TAKE RECEIPT**


This screen is to show the customer that his/her transaction record is printing and to notify the customer to take his/her receipt.





► **INQUIRY: THANK YOU**

This screen is to show the customer that the transaction has been successfully completed.

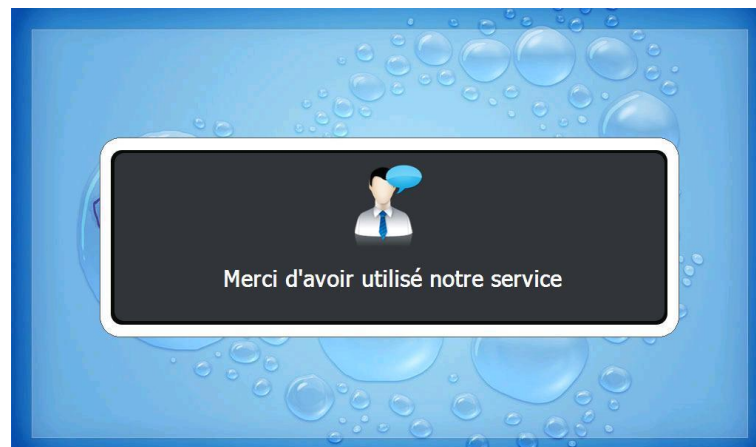

Supported USB Memory and HUB

USB Memory

► Supported USB Memory

No.	Vendor	Modem Model	Memory	Remarks
1	Sony Corporation (VID:0x054C)	Storage Media (PID:0x0243)	512MB	
2	SMI Corporation (VID:0x090C)	USB Disk (PID:0x1000)	512MB	
3	Kingston (VID:0x0951)	Data Traveler (PID:0x1603)	512MB	
4	pq1 (VID:0x3538)	USB Mass Storage Device (PID:0x0042)	512MB	
5	LEXAR Media (VID:0x05DC)	JD FIREFLY (PID:0A560)	1GB	
6	LG (VID:0x090C)	USB Driver (PID:0x1000)	1GB	
7	Memorex (VID:0x12F7)	TD Classic 003B (PID:0x1A00)	1GB	

<Note!>

VID : Vendor ID, PID : Product ID

► Supported Memory Specifications

1. File System: FAT
2. Number of supported drivers: 1
3. Memory: 2GB or below

Example :

- 1) SANDisk 512MB is not supported because it has 2 file systems. (CDFS and FAT)
- 2) Sony Storage Media is supported because it is FAT, 1 driver and 512 MB size.

Supported USB HUB Types

► Supported USB HUB Types

No.	Vendor	Modem Model	VID(HUB CHIP Vendor)	PID
1	Macsense Connectivity	UH-Mini4i	0x05E3(Genesys Logics inc)	0x0606
2	INLAND	Inland USB2.0 HUB	0x0409(NEC Corporation)	0x005A
3	VAKO International Inc	USB 2.0 Aluminum HUB	0x05E3(Genesys Logics inc)	0x0606
4	PPA Int'l	I.Connector(PP A 4Port HUB)	0x05E3(Genesys Logics inc)	0x0606
5	ZIO	USB 2040 Mini	0x05E3(Genesys Logics inc)	0x0606
6	DSP Inc	E-Star QU24WR	0x05E3(Genesys Logics inc)	0x0606

Advertisement Image Update Guide

Preparation

Software Update function in Hyosung TNS's Windows CE Machine is applicable to update advertisement images.

► Supported Image Format

The following table describe the supporting format of welcome advertisement image

Model	Image Size	DPI	Color	File Format	Max Size (one image)
NH-1800SE MX-4000W	800 X 600	72	24bit color	JPEG	500KB
NH-2700(T) MX-5000SE NH-2600 MX-2600SE	1024 X 600				
MX-5200SE MX-5300SE MX-2800SE	1024 X 768				

The following table describe the supporting format of transaction advertisement image

Model	Image Size	DPI	Color	File Format	Max Size (one image)
NH-1800SE MX-4000W	690 X 180	72	24bit color	JPEG	160KB
NH-2600 NH-2700(T) MX-5000SE MX-2600SE MX-5200SE MX-5300SE MX-2800SE	753 X 225				

The following table describe the file name and path of advertisement images. The path in below table indicates image size for each machine types.

Welcome Advertisement	File Name	Path
Screen #1	Adv_01.jpg	1) MX-1800SE, MX-4000W - \ATM\Advertisement\800_600
Screen #2	Adv_02.jpg	
Screen #3	Adv_03.jpg	2) NH-2700(T), MX-5000SE, NH-2600, MX-2600SE - \ATM\Advertisement\1024_600
Screen #4	Adv_04.jpg	
Screen #5	Adv_05.jpg	3) MX-5200SE, MX-5300SE, MX-2800SE - \ATM\Advertisement\1024_768
Screen #6	Adv_06.jpg	

Transaction Advertisement	File Name	Path
Screen #1	TranAdv_01.jpg	1) MX-1800SE, MX-4000W - \ATM\Advertisement\800_600
Screen #2	TranAdv_02.jpg	
Screen #3	TranAdv_03.jpg	2) NH-2700(T), MX-5000SE, NH-2600, MX-2600SE

Screen #4	TranAdv_04.jpg	- \ATM\Advertisement\1024_600
Screen #5	TranAdv_05.jpg	3) MX-5200SE, MX-5300SE, MX-2800SE
Screen #6	TranAdv_06.jpg	- \ATM\Advertisement\1024_768

► **Updating your own UpdateInfo.dat (Optional)**

Advertisement images are updated using the software update program. While updating program proceeds, a line of message shows up in the main screen. If you want to change the message, just edit UpdateInfo.dat. The message length is up to 40 characters. A sample content is as follows.

You can replace “A sample message.(V1.21)” to your own message.


A sample message. (V1.21)

UpdateInfo.dat

► **Making SW Update media**

1. Make “UPDATE” folder in the USB memory drive or the SD Card.
2. Make “NH2700CE” folder in the “UPDATE” folder.
3. Make “PATCH” folder in the “NH2700CE” folder.
4. Copy “UpdateInfo.dat” to under “PATCH” folder. (Optional)
5. Make “ADVERTISEMENT” folder in the “PATCH” folder.
6. Make [machine *resolution*] folder in “ADVERTISEMENT” folder.
 - 6.1 [machine *resolution*] for MX-1800SE, MX-4000W**
- “800_600” folder in “ADVERTISEMENT” folder.
 - 6.2 [machine *resolution*] for NH-2700(T), MX-5000SE, NH-2600, MX-2600SE**
- “1024_600” folder in “ADVERTISEMENT” folder.
 - 6.3 [machine *resolution*] for MX-5200SE, MX-5300SE, MX-2800SE**
- “1024_768” folder in “ADVERTISEMENT” folder.
7. Copy all image files to under [machine *resolution*] folder.(check the file name)

- ▶ The following picture describes the layout of the USB Drive or SD Card, in case of its [resolution folder] is '1024_600'.

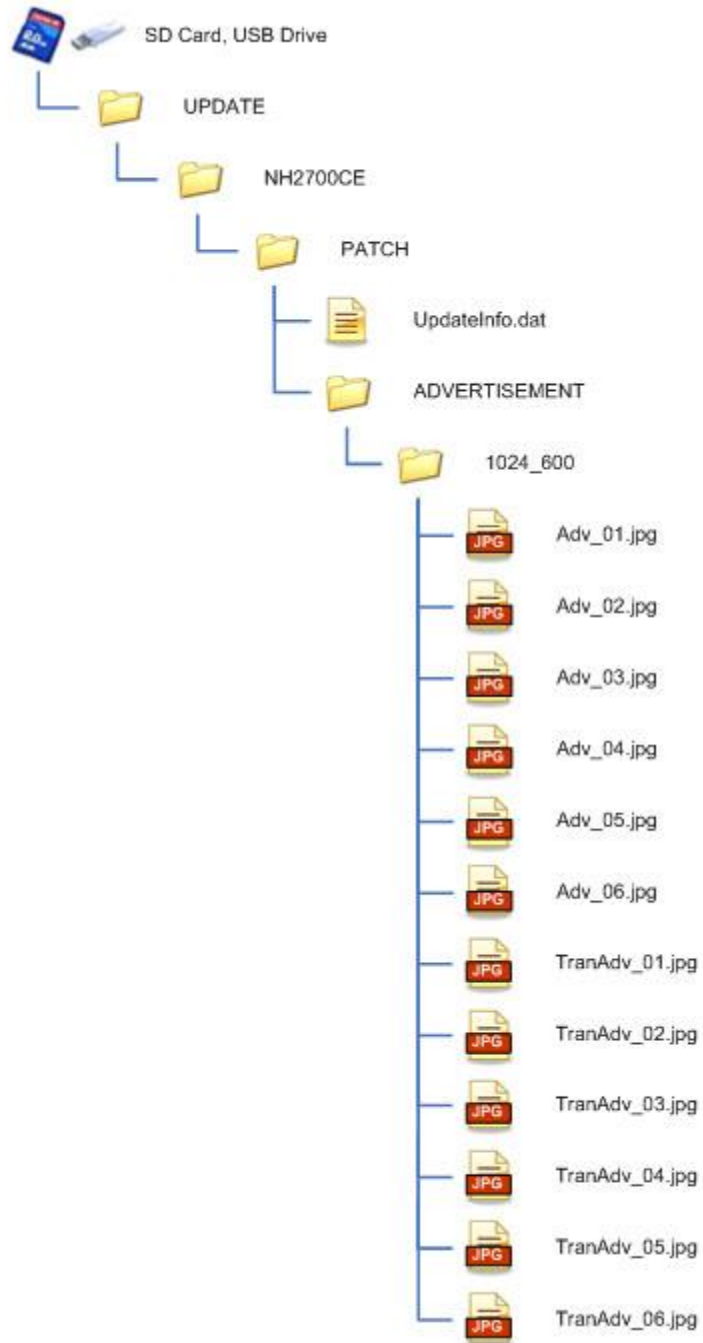

(If you have the master media which get from Hyosung TNS, you can see the same layout except "Patch" folder. "Patch" folder is replaced "master" folder.)


Executing Software Update

► Software Update


Advertisement images can be installed or updated by Software Update tool in supervisor menu.

You can update advertisement images by software downloading with MoinView server. Please refer to the MoinView manual for the detail downloading functionality.


1. Press SYSTEM SETUP button.

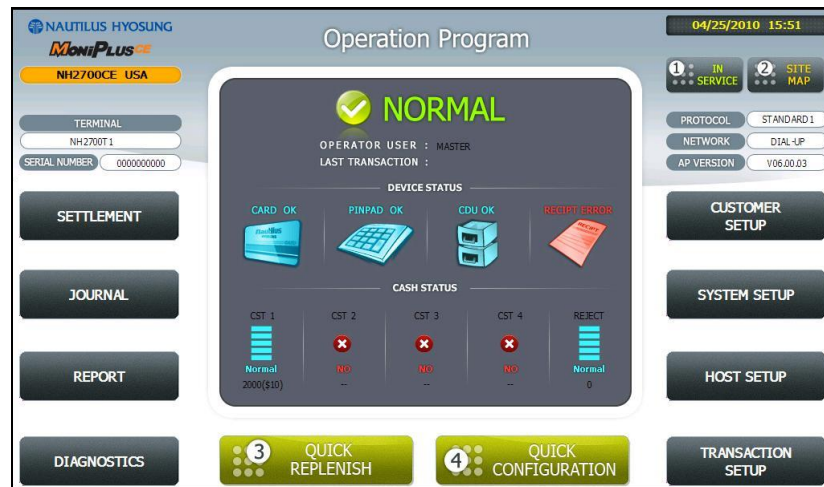


2. Press SYSTEM CONTROL button.

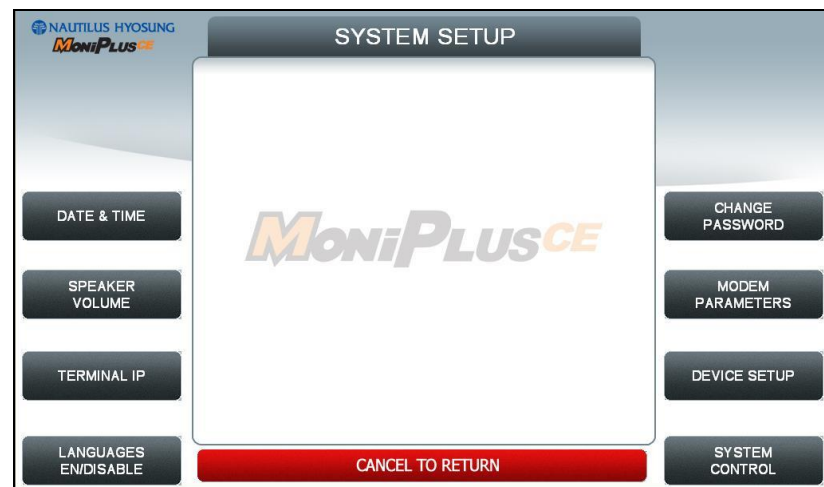

3. Plug the USB drive in USB slot and press left-top function key, "SOFTWARE UPDATE".

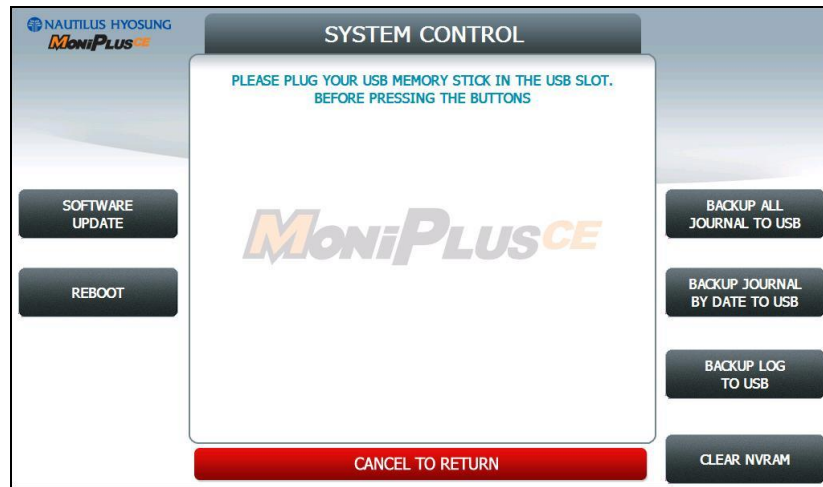


4. Press left function key, "YES".

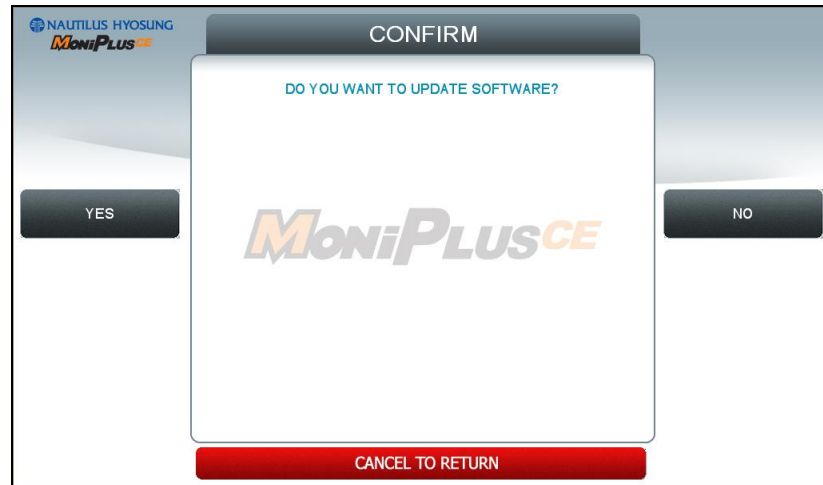


When "YES" button is selected, new software in USB drive is transferred to a dedicated directory(ATM) and ATM will start to reboot automatically.

► Enable Welcome Advertisement

You can enable or disable Welcome Advertisement in the supervisor menu.

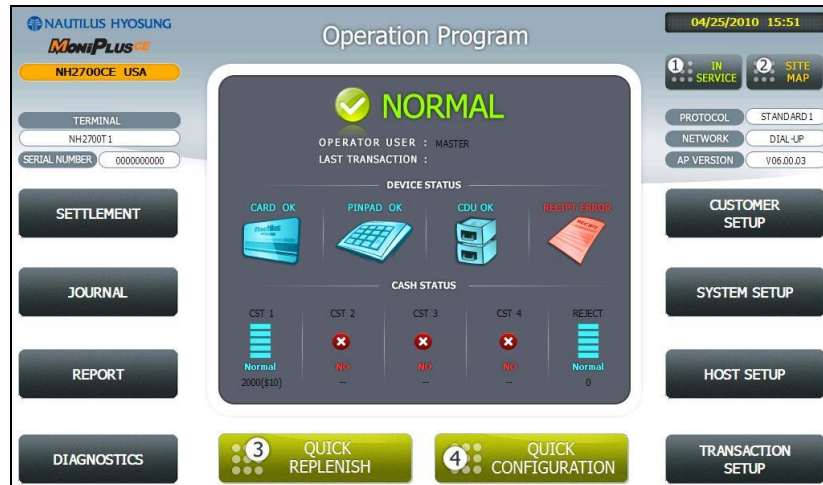

1. Press CUSTOMER SETUP button

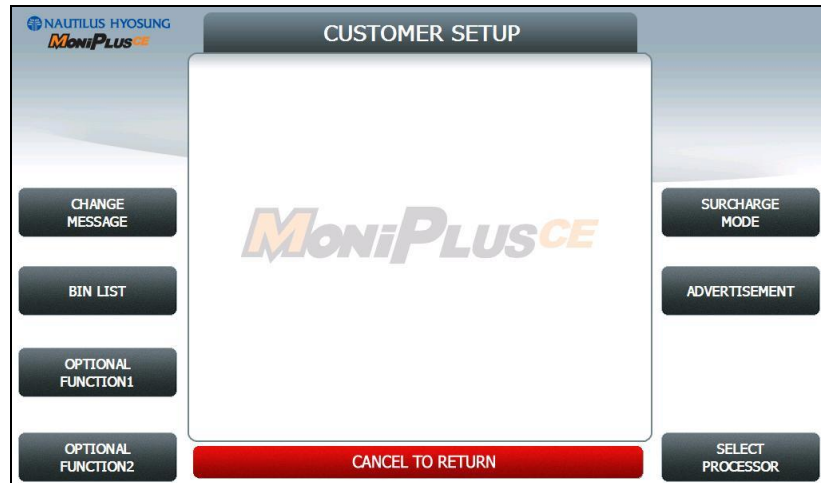

2. Press "WELCOME ADVERTISEMENT" button



3. Press "WELCOME ADVERTISEMENT" button




4. You can enable or disable Advertisement images to view by pressing "SCREEN" Key.




► Enable Transaction Advertisement

You can enable or disable Transaction Advertisement in the supervisor menu.

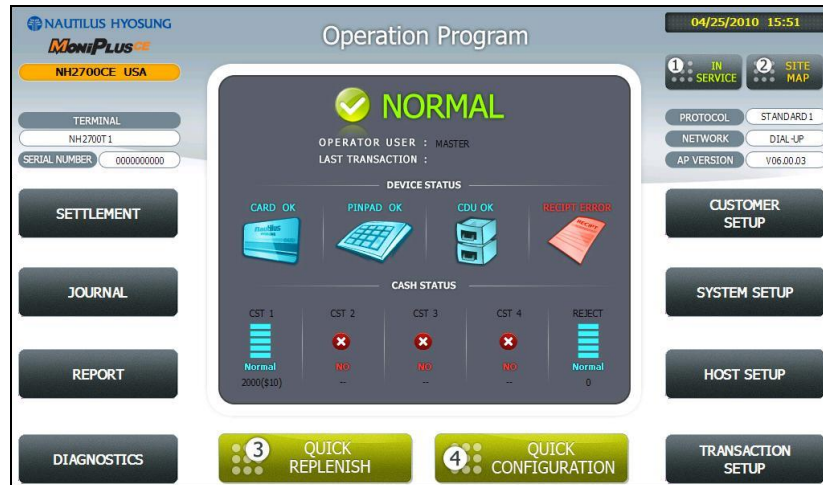


1. Press CUSTOMER SETUP button

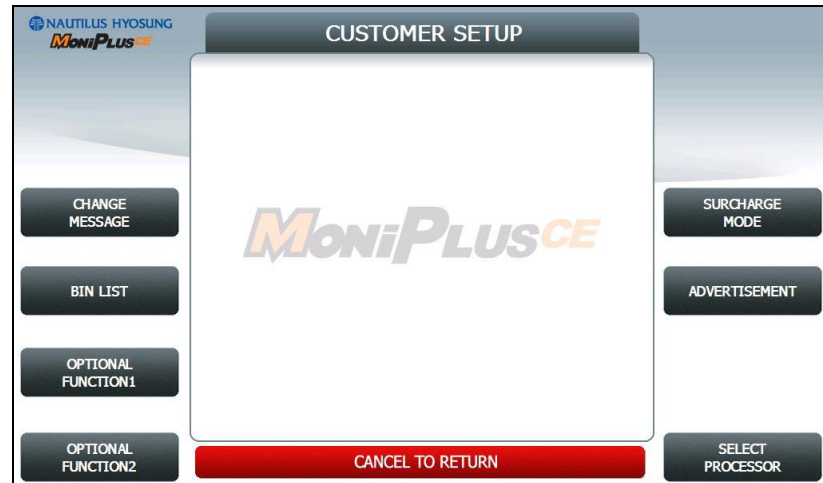

2. Press "ADVERTISEMENT" button



3. Press "TRANSACTION ADVERTISEMENT" button

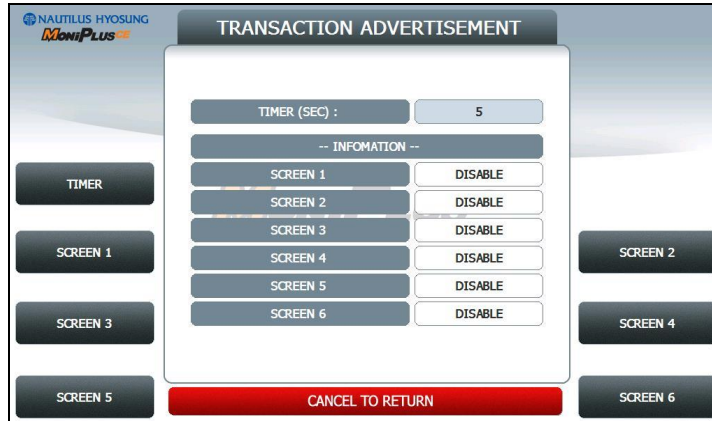

4. You can enable or disable welcome dvertisement images to view by pressing "SCREEN" Key.




5. You can enable or disable transaction dvertisement images to view by pressing "SCREEN" Key.



Making MoniView update media

- ▶ All supported image format refer to “Supported Image Format”
 1. Make “PATCH” folder.
 2. Copy “UpdateInfo.dat” to under “PATCH” folder. (Optional)
 3. Make “ADVERTISEMENT” folder in the “PATCH” folder.
 4. Make “1024_600” folder in “ADVERTISEMENT” folder.
 5. Copy all image files to under “1024_600” folder.(check the file name)
 6. Make compressed file like the below layout.

- ▶ The following picture describe the layout of Zip file

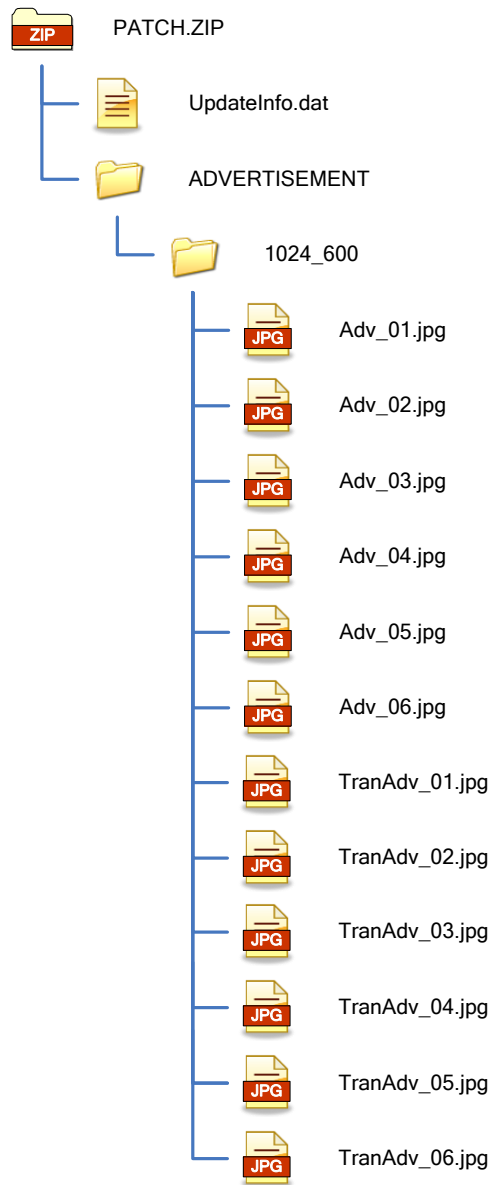

And you can download the “Patch.zip” using MoniView.

Background Image Update Guide

Preparation

Software Update function in Hyosung TNS's Windows CE Machine is applicable to update advertisement images.

► Supported Image Format

The following table describe the supporting format of change background image

Model	Image Size	DPI	Color	File Format	Max Size (one image)
NH-2700	1024 X 600	72	24bit color	JPEG	300KB

The following table describe the file name and path of advertisement images. The path in blow table indicates image size is 1024 X 600

Background	File Name	Path
Screen #1	Back_1.jpg	\ATM\Screen\Backs\1024_600\Function (F/K) \ATM\Screen\Backs\1024_600\Touch (Touch)
Screen #2	Back_2.jpg	\ATM\Screen\Backs\1024_600\Function (F/K) \ATM\Screen\Backs\1024_600\Touch (Touch)
Screen #3	Back_3.jpg	\ATM\Screen\Backs\1024_600\Function (F/K) \ATM\Screen\Backs\1024_600\Touch (Touch)
Screen #4	Back_4.jpg	\ATM\Screen\Backs\1024_600\Function (F/K) \ATM\Screen\Backs\1024_600\Touch (Touch)
Screen #5	Back_5.jpg	\ATM\Screen\Backs\1024_600\Function (F/K) \ATM\Screen\Backs\1024_600\Touch (Touch)
Screen #6	Back_6.jpg	\ATM\Screen\Backs\1024_600\Function (F/K) \ATM\Screen\Backs\1024_600\Touch (Touch)

► Updating your own UpdateInfo.dat (Optional)

Background images are updated using the software update program. While updating program proceeds, a line of message shows up in the main screen. If you want to change the message, just edit UpdateInfo.dat. The message length is up to 40 characters. A sample content is as follows.

You can replace "A sample message.(V1.21)" to your own message.


A sample message. (V1.21)

UpdateInfo.dat

► Making SW Update media

1. Make "UPDATE" folder in the USB memory drive or the SD Card.
2. Make "NH2700CE" folder in the "UPDATE" folder.
3. Make "PATCH" folder in the "NH2700CE" folder.
4. Copy "UpdateInfo.dat" to under "PATCH" folder. (Optional)
5. Make "SCREEN" folder in the "PATCH" folder.
6. Make "Backs" folder in "SCREEN" folder.
7. Make "1024_600" folder in "Backs" folder.
8. If ATM is function type, make "Function" folder in "1024_600" folder
9. If ATM is touch type, make "Touch" folder in "1024_600" folder
10. Copy all image files to under "Function" or " Touch" folder.(check the file name)

The following picture describes the layout of the USB Drive or SD Card.

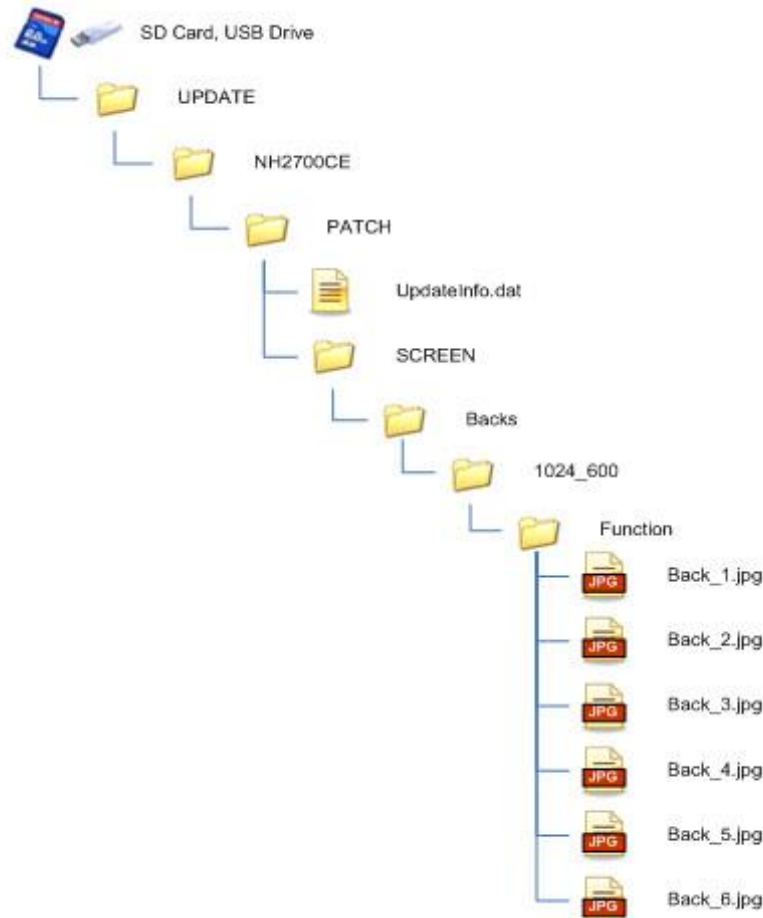

(If you have the master media which get from Hyosung TNS, you can see the same layout except "Patch" folder. "Patch" folder is replaced "master" folder.)


Executing Software Update

► Software Update


Advertisement images can be installed or updated by Software Update tool in supervisor menu.

You can update advertisement images by software downloading with MoinView server. Please refer to the MoinView manual for the detail downloading functionality.


1. Press SYSTEM SETUP button.

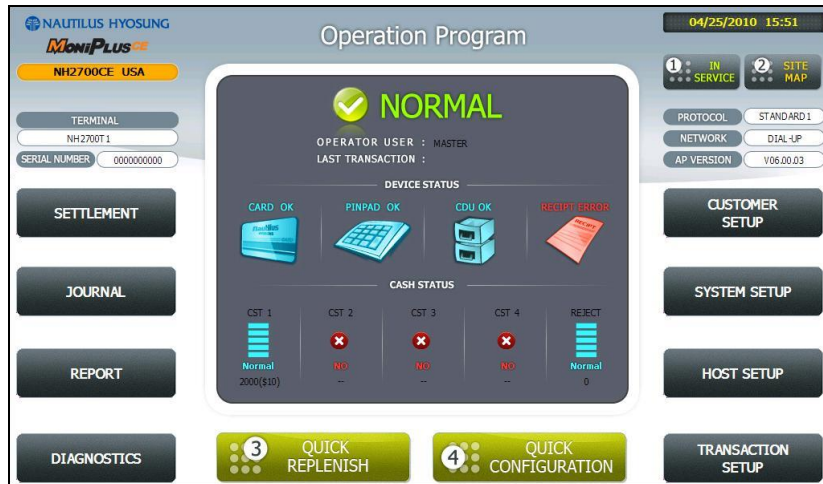


2. Press SYSTEM CONTROL button.

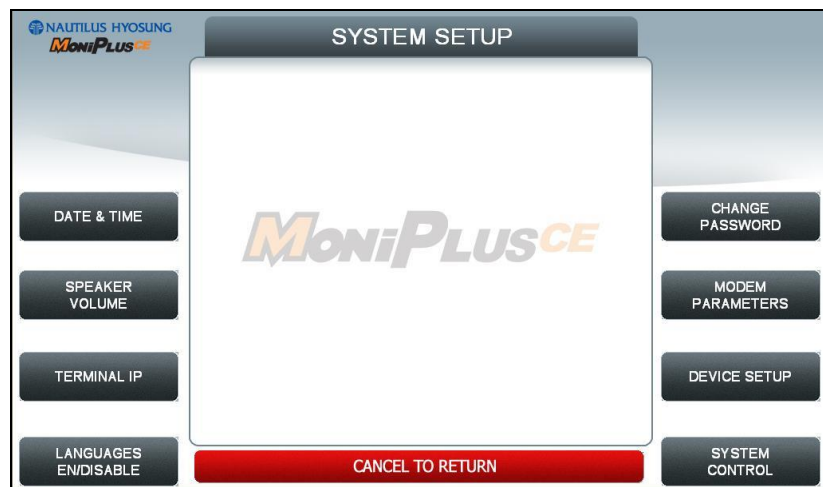

3. Plug the USB drive in USB slot and press left-top function key, "SOFTWARE UPDATE".

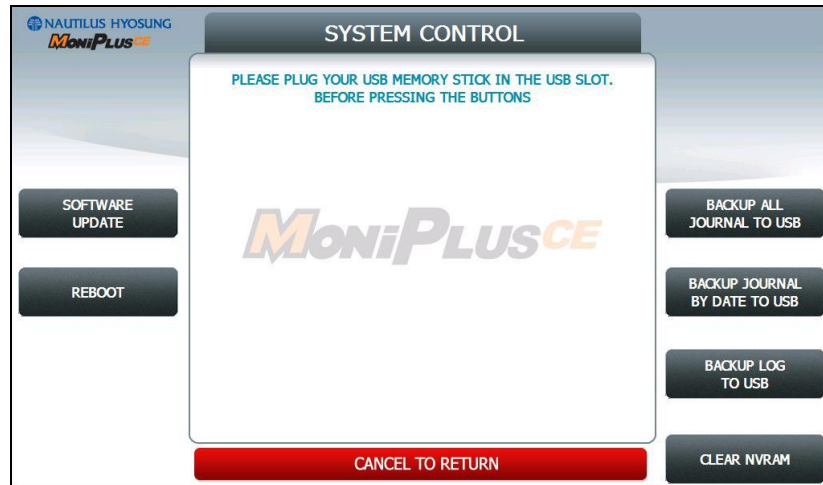


4. Press left function key, "YES".

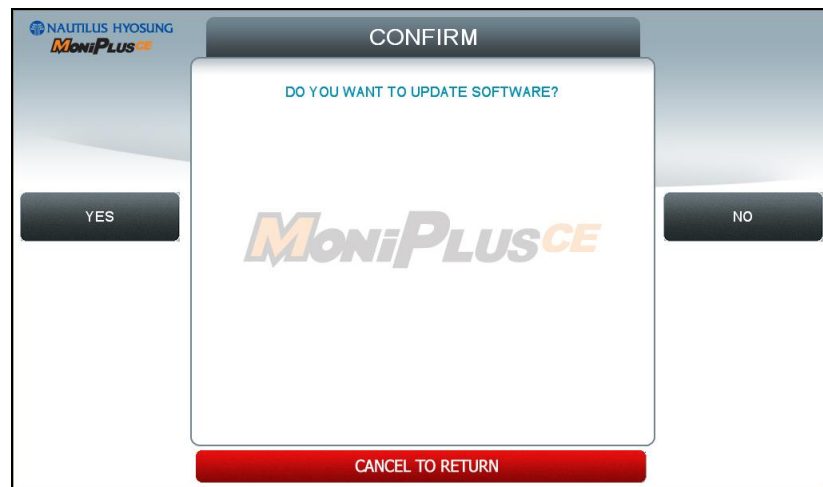


When "YES" button is selected, new software in USB drive is transferred to a dedicated directory(ATM) and ATM will start to reboot automatically.

► Setup change background


You can set up change background option in the supervisor menu.

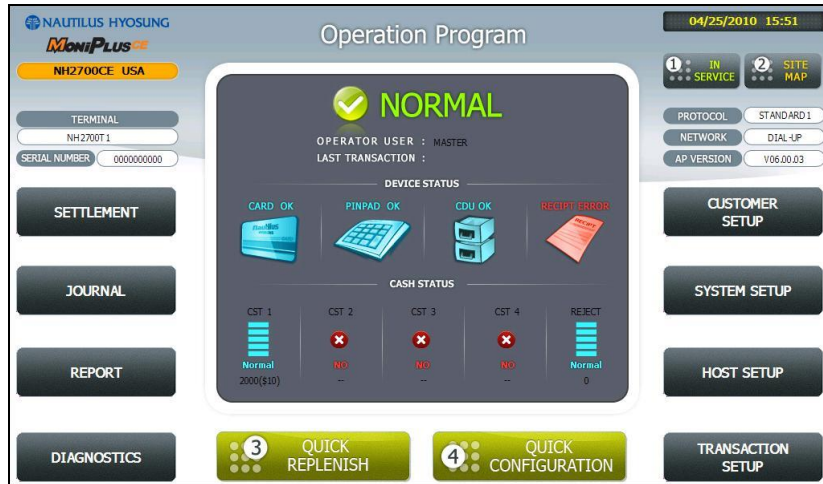


1. Press CUSTOMER SETUP button

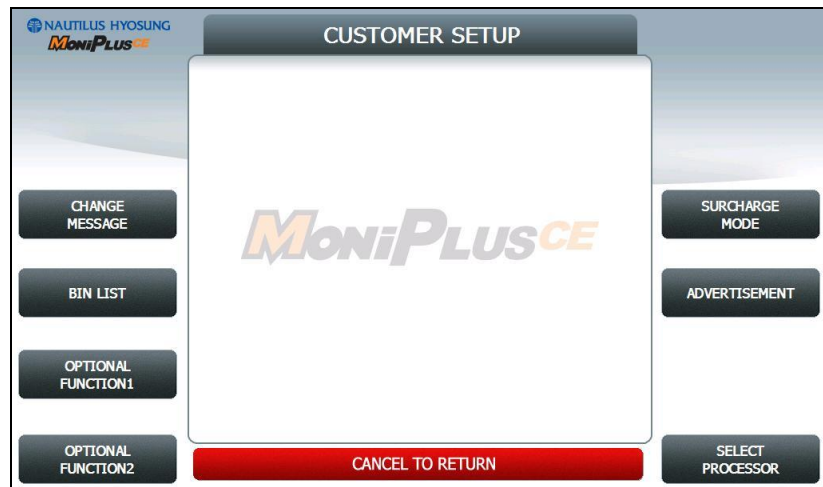


2. Press "OPTIONAL FUNCTION 2" button

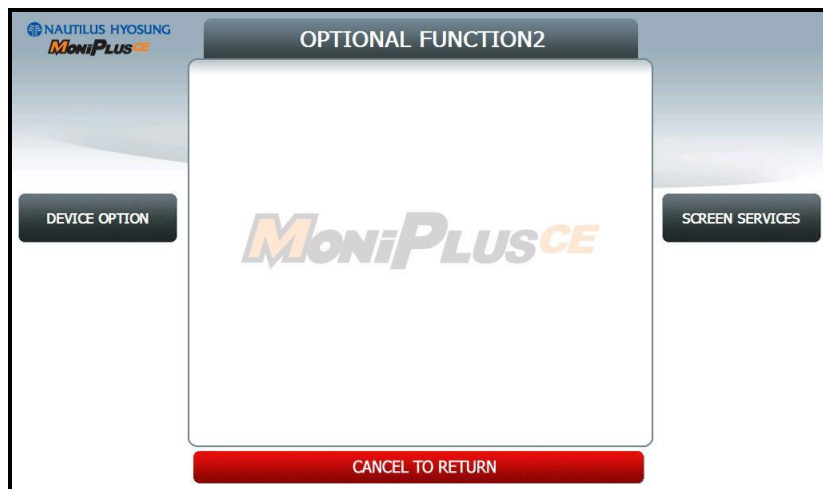


3. Press "SCREEN SERVICES" button

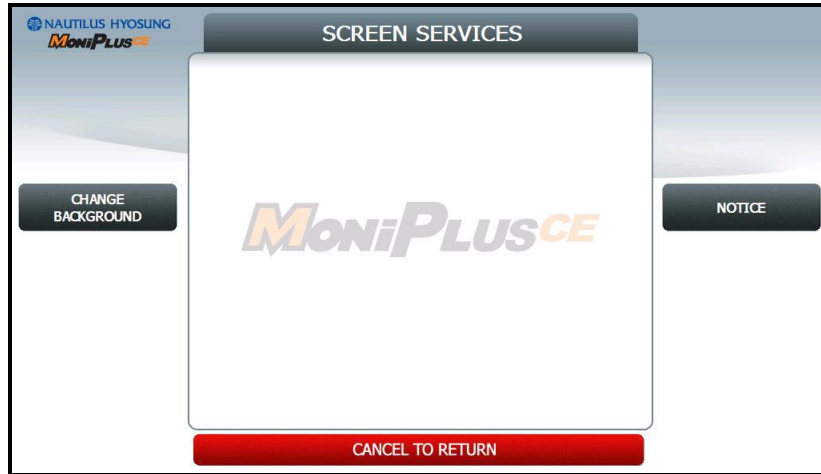

4. Press "CHANGE BACKGROUND" button

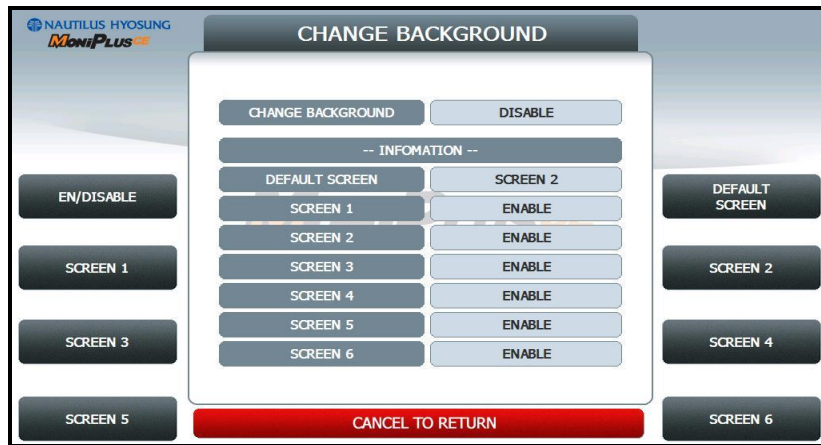


5. You can set up change background images to view by pressing "SCREEN" Key or "DEFAULT SCREEN".

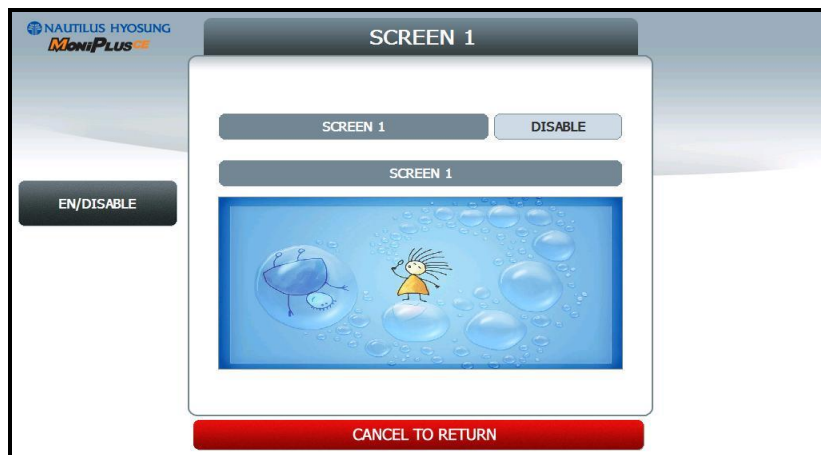

Making MoniView update media

- ▶ All supported image format refer to “Supported Image Format”
 1. Make “PATCH” folder.
 2. Copy “UpdateInfo.dat” to under “PATCH” folder. (Optional)
 3. Make “SCREEN” folder in the “PATCH” folder.
 4. Make “Backs” folder in “SCREEN” folder.
 5. Make “1024_600” folder in “Backs” folder.
 6. If ATM is function type, make “Function” folder in “1024_600” folder
 7. If ATM is touch type, make “Touch” folder in “1024_600” folder
 8. Copy all image files to under “Function” or “Touch” folder.(check the file name)
 9. Make compressed file like the below layout.


The following picture describe the layout of Zip file

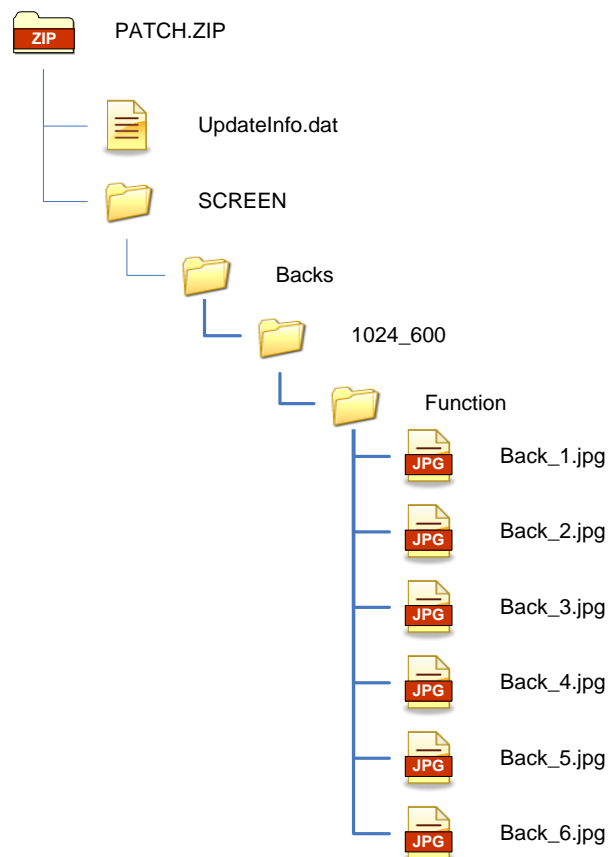

And you can download the “Patch.zip” using MoniView.

Weather Service Guide

- ▶ ATM from the idle screen, a feature that will display weather information. Weather information set up and updated only by MoniView, ATM displaying weather information for today and tomorrow that gives How to register and update detailed weather information, please see the manual of MoniView.
- ▶ Weather Service Display Screen

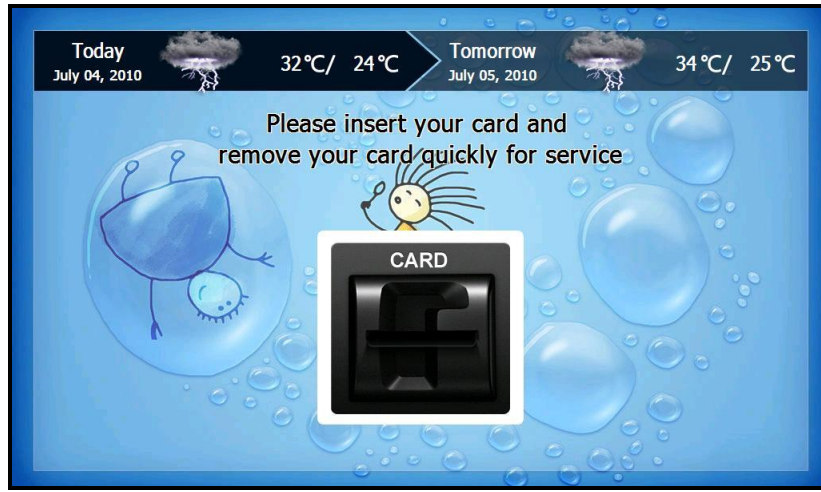

Anti Skimming Service (Warning against illegal trials to card reader)

- ▶ If your machine can support the Anti Skimming, it is possible to set the machine for detecting metallic stuff attached to card reader illegally. If this is set, once a offender attack the card reader, the screen would be changed into the one as like as below. This screen represents the current condition of the card reader under some kind of illegal attack.



[Warning screen with message for anti skimming]

If you want to make your ATM detect the illegal act, please refer to section 'CARD READER SETUP' 'ANTI SKIMMING', in this Manual for details.